

LOADER

60

070004917-197830 LOADER

070004917-197830 LOADER	1-1
07000-4918 (04) HEAD ASSEMBLY	1-2
07000-6541 (02) INSTALLATION LABELS	1-3
07000-7096 HYDRAULIC INSTALLATION	1-4
07000-7142 PILOT PRESSURE HYDRAULIC	1-5

07000-0190 MAIN BOOM ASSEMBLY

07000-0190 (02) MAIN BOOM ASSEMBLY	1.6-1
07000-2480 (05) MAIN BOOM/STCK BOOM CYLINDER	1.6-2

07000-2196 STICK BOOM

07000-2196 (04) STICK BOOM	1.7-1
07000-0700 (05) TELESCOPIC STICK BOOM CYLINDER	1.7-2
715-4293 (08) MALE YOKE	1.7-3

07000-414801 COLUMN ASSY

07000-414801 COLUMN ASSY

07000-414801 (04) COLUMN ASSY	1.8.1-1
-------------------------------------	---------


07000-414802 COLUMN ASSY

07000-414802 (04) COLUMN ASSY	1.8.2-1
067-0170 STABILIZER LOCK VALVES	1.8.2-2
07000-0591 (03) TANK	1.8.2-3
07000-1226 (01) STABILIZER CYLINDER	1.8.2-4

07000-6546 INSTALLATION KIT

07000-6546 INSTALLATION KIT	1.9-1
07000-3613 (01) LOADER ANCHOR KIT	1.9-2


Appendix A:Pages Index	A
Appendix B:Parts Index	B

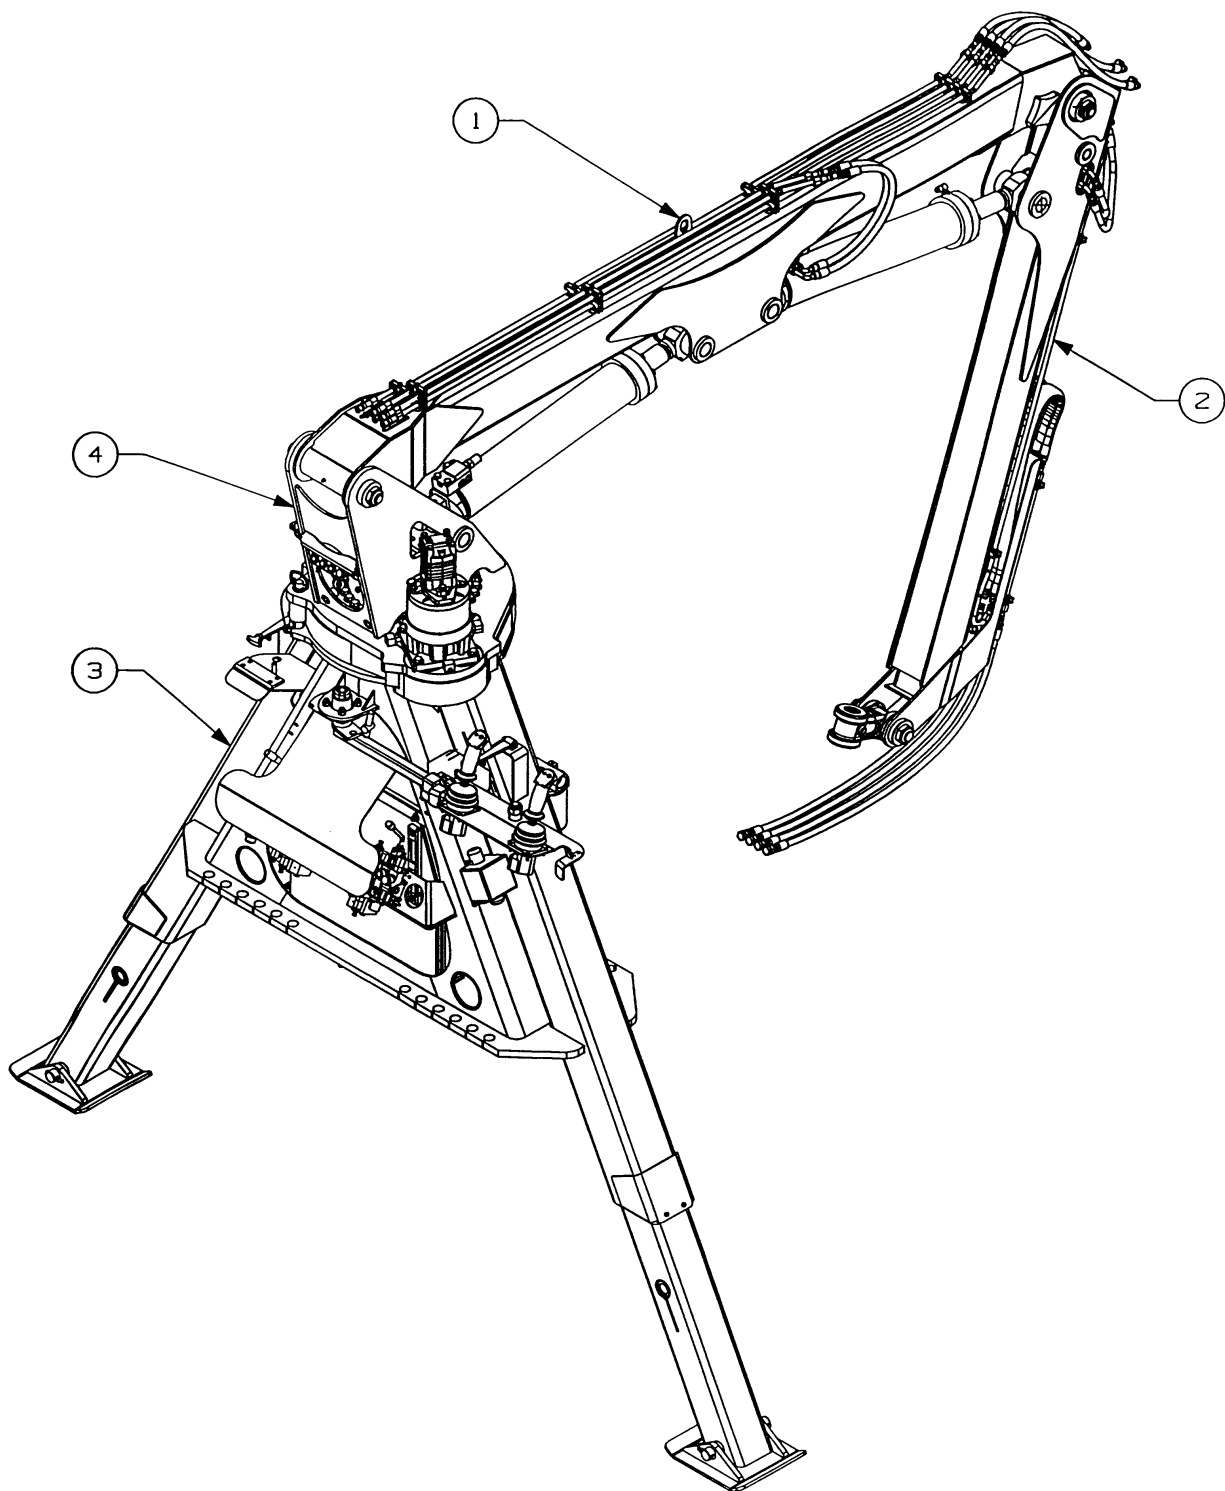

Item	Part No.	Name	Qty	Uom
1	07000-0190	MAIN BOOM ASSEMBLY	1	EA
2	07000-2196	STICK BOOM CH-60-FT87-1	1	EA

Item	Part No.	Name	Qty	Uom
3	07000-4148	COLUMN ASSEMBLY	1	EA
4	07000-4918	HEAD ASSEMBLY	1	EA
5	07000-6541	INSTALLATION LABELS	1	EA
6	07000-7096	HYDRAULIC INSTALLATION	1	EA
7	07000-7142	PILOT PRESSURE HYDRAULIC	1	EA
8	07000-6546	INSTALLATION KIT OCKI-60-2	1	EA

070004917-197830 LOADER 07000-4918 (04) HEAD ASSEMBLY

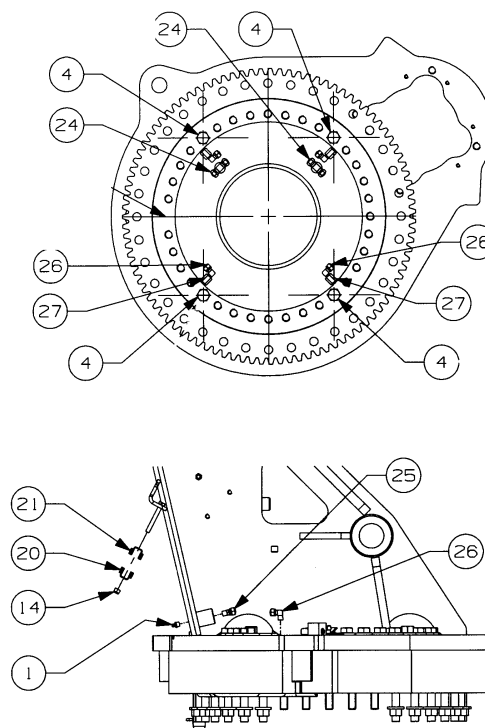

Item	Part No.	Name	Qty	Uom
1	001-0001	GREASE FITTING 1/8"NPT	2	EA
2	001-0004	GREASE FITTING 1/8"NPTx45	1	EA
3	008-0059	BOLT 9/16"-12UNC X 1 3/4"lg	4	EA
4	008-0066	BOLT	4	EA
5	008-0155	BOLT 5/8"-18UNFx5 1/2"lg BOLT	26	EA
6	008-0265	BOLT 5/8"-11UNCx4"lg	31	EA
7	008-0266	BOLT 5/8"-11UNCx4 1/2"lg	10	EA
8	008-0307	BOLT 1/2-13 UNCx1 1/2"lg	2	EA
9	008-4804	BOLT 1/4"-20UNC x 1/2"lg	4	EA

Item	Part No.	Name	Qty	Uom
10	008-9990	BOLT 5/16-18UNC x 2 3/4"lg	2	EA
11	009-0022	NUT 1/4 - 18 NPT x 1/8"lg	1	EA
12	009-0309	NUT 5/8"-18UNF	26	EA
13	009-0334	NUT 5/8"-11UNC	4	EA
14	010-0339	NYLON LOCK NUT 5/16"-18UNC	4	EA
15	012-0003	FLAT WASHER	97	EA
16	012-0350	FLAT WASHER 1/4" dia	4	EA
17	017-0634	HEX. SOCKET SET SCREW 1/2"-13UNC x 1 1/2"lg	1	EA
18	017-6154	HEX. SOCKET HEAD CAP SCREW 5/16"-18UNC X 3"lg	2	EA
19	017-6257	HEX. SOCKET SET SCREW 1/2"-13UNC X 2"lg	2	EA
20	018-9679	TUBING CLAMP	1	EA
21	018-9680	TUBING CLAMP	1	EA
22	019-0040	LOCK	1	EA
23	026-0997	REDUCER M / F 1/4 NPT X 1/8 NPT	2	EA
24	028-0021	PLASTIC PIPE ADAPTOR	2	EA
25	028-3557	PLASTIC PIPE ADAPTOR 68NTA-4-2	2	EA
26	028-3566	PLASTIC PIPE ADAPTOR	6	EA
27	030-0247	HYDRAULIC FITTING	4	EA
28	043-1827	VAPOR SEAL	1	EA
29	048-0097	SLEWING RING	1	EA
30	052-0657	PLUG	2	EA
31	061-0223	HYDRAULIC MOTOR	1	EA
32	066-0013	BREATHER	1	EA
33	067-4316	CHECK VALVE	2	EA
34	07000-2294	PINION COVER	1	EA
35	07000-4544	SWIVEL HEAD	1	EA
36	07000-7078	HYDRAULIC MANIFOLD	1	EA
37	07000-9651	FLAT WASHER	4	EA
38	108-0176	SELECTOR VALVE	1	EA
39	110-0014	GEARBOX REDUCER	1	EA

Comments for Page: 07000-4918 (04) HEAD ASSEMBLY

[fr] (#3 008-0059),(#6 008-0265),(#7 008-0266),(#8 008-0307),(#17 017-0634),(#19 017-6257) Utiliser une clé

dynamométrique. Tous les couples de serrage sont en lb-pi. et lubrifiés. LT= Loctite

[en] (#3 008-0059),(#6 008-0265),(#7 008-0266),(#8 008-0307),(#17 017-0634),(#19 017-6257) Use a torque wrench.

Lubricated torque values in ft-lb. LT= Loctite


[fr] (#9 008-4804) Utilisé du "Loctite" LT= Loctite

[en] (#9 008-4804) Use "Loctite" LT= Loctite

[fr] (#12 009-0309),(#13 009-0334),(#14 010-0339),(#33 067-4316) Utiliser une clé dynamométrique. Tous les couples de serrage sont en lb-pi.


[en] (#12 009-0309),(#13 009-0334),(#14 010-0339),(#33 067-4316) Use a torque wrench. Lubricated torque values in ft-lb.

070004917-197830 LOADER 07000-6541 (02) INSTALLATION LABELS

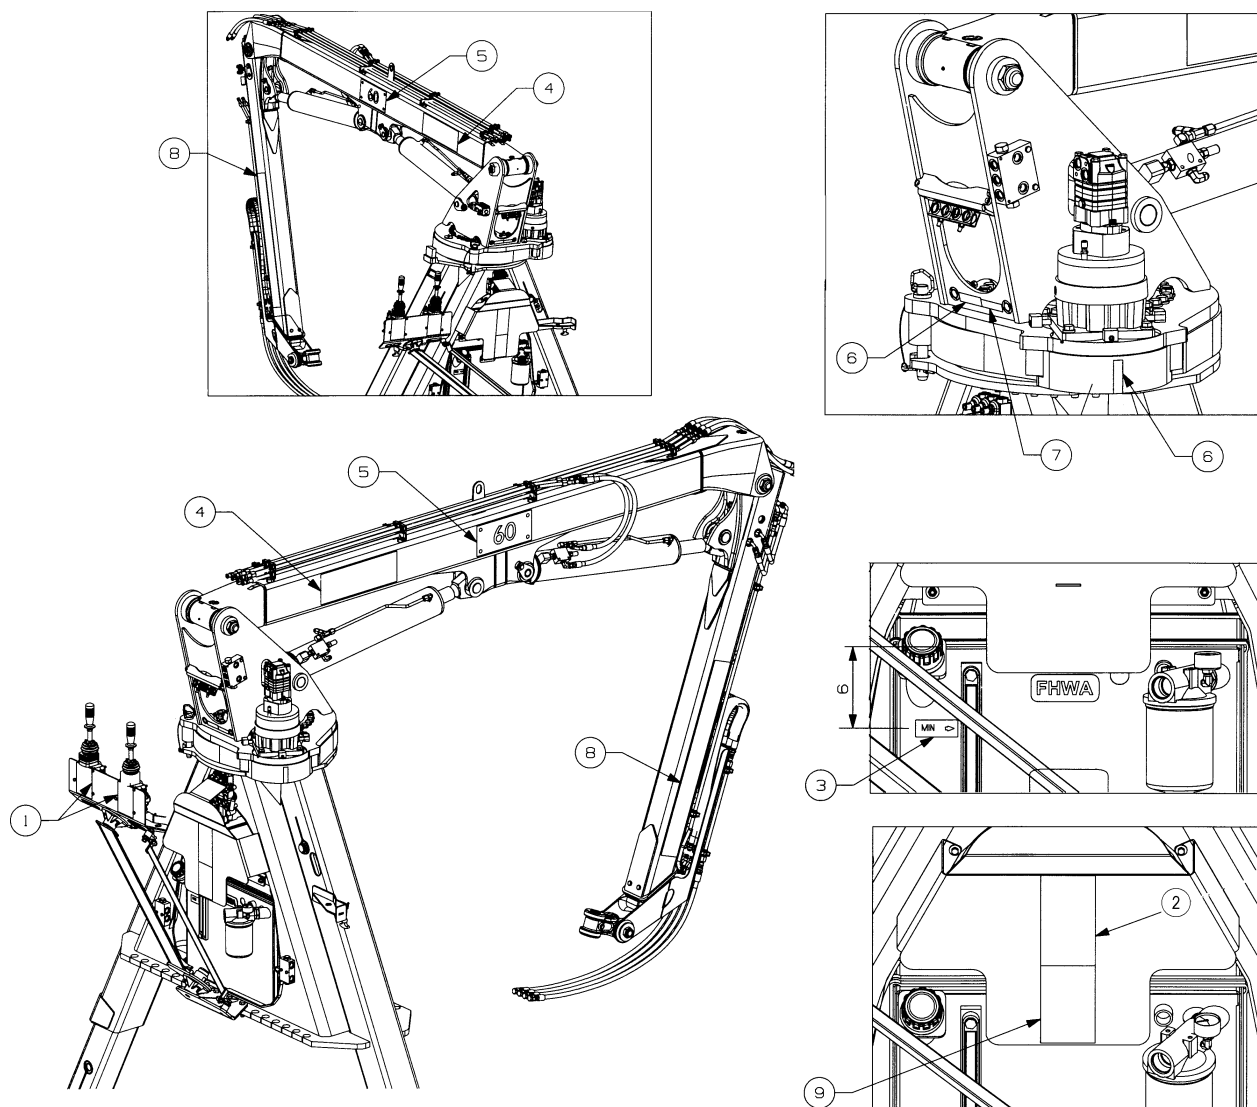

Item	Part No.	Name	Qty	Uom
1	146-0165	DECAL CH-60 CONTROL	1	EA
2	146-0167	WARNING, NOTICE STICKERS (GROUPED)	1	EA
3	146-0193	DECAL MIN. OIL LEVEL	1	EA
4	146-0302	ROTOBEC LABEL	2	EA
5	146-0378	DECAL 60 BOOM	2	EA
6	146-0738	GREASE ON LEFT LABEL	2	EA
7	146-0739	RIGHT GREASE LABEL	1	EA
8	146-1049	WARNING STAY CLEAR LABEL	2	EA
9	146-1053	WARNING - GROUPED TOGETHER LABEL	1	EA

070004917-197830 LOADER 07000-7096 HYDRAULIC INSTALLATION

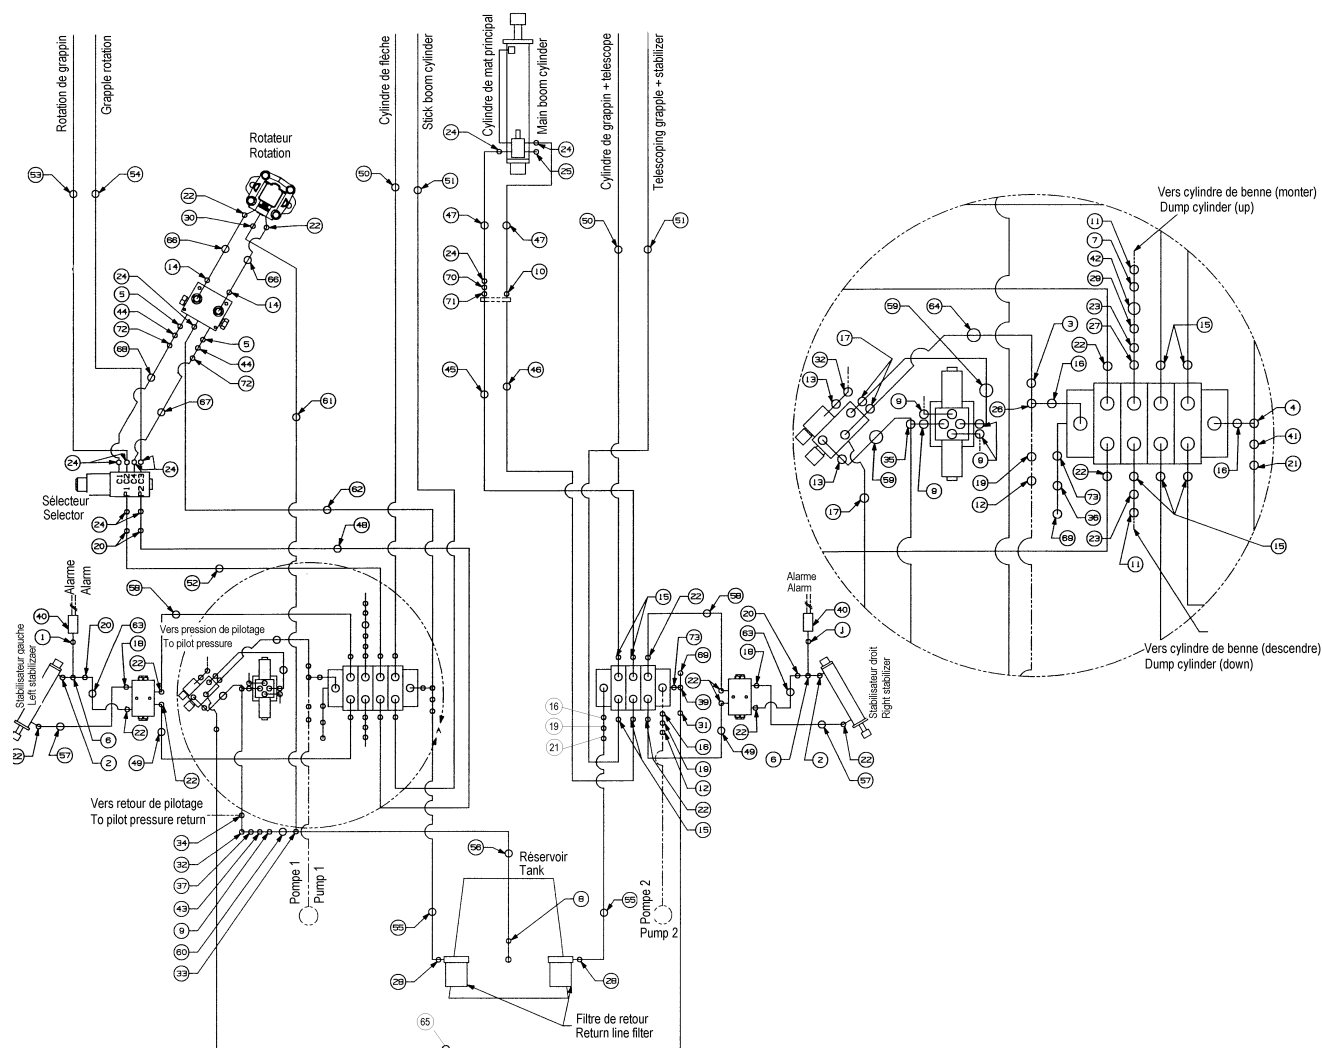


Item	Part No.	Name	Qty	Uom
1	026-1001	REDUCER M / F 1/2 NPT X 1/4 NPT	2	EA
2	029-6595	STRAIGHT M / F SWIVEL ADAPT 10 ORB X FJIC 10	2	EA
3	030-0002	REDUCING TUBING FJIC 12 X MJIC 6	1	EA
4	030-0190	SWIVEL NUT UNION "T" FJIC 12	1	EA
5	030-0197	STRAIGHT THREAD UNION WITH O-RING 8 ORB X 8 ORB	2	EA
6	030-0232	HYDRAULIC ADAPTOR	2	EA
7	030-1310	STRAIGHT MALE ADAPTOR MJIC 10 X 1/2 NPT	1	EA
8	030-1312	STRAIGHT MALE ADAPTOR MJIC 8 X 3/4 NPT	1	EA
9	030-1318	STRAIGHT MALE ADAPTOR MJIC 6 X 1/4 NPT	5	EA
10	030-1376	BH STRAIGHT ADAPTOR MJIC 10 X MJIC 10	1	EA
11	030-1387	CAP FJIC 10	2	EA

Item	Part No.	Name	Qty	Uom
12	030-1388	CAP FJIC 12	2	EA
13	030-1409	HYDRAULIC FITTING	2	EA
14	030-1412	ORB MALE CONNECTOR MJIC 8 X 8 ORB	2	EA
15	030-1413	ORB MALE CONNECTOR MJIC 10 X 10 ORB	9	EA
16	030-1415	ORB MALE CONNECTOR MJIC 12 X 12 ORB	4	EA
17	030-1423	90° ADJUSTABLE ADAPTOR MJIC 6 X 6 ORB	3	EA
18	030-1427	90° ADJUSTABLE ADAPTOR MJIC 8 X 10 ORB	2	EA
19	030-3217	90° S SWIVEL TUBE ADAPTOR FJIC 12 X MJIC 12	3	EA
20	030-3616	45° SWIVEL ADAPTOR FJIC 10 X MJIC 10	4	EA
21	030-3617	45° SWIVEL ADAPTOR FJIC 12 X MJIC 12	2	EA
22	030-3939	ORB MALE CONNECTOR MJIC 8 X 10 ORB	14	EA
23	030-4032	90° S SWIVEL TUBE ADAPTOR FJIC 10 X MJIC 10	2	EA
24	030-4078	ORB MALE CONNECTOR MJIC 10 X 8 ORB	10	EA
25	030-4137	ORB PLUG 8 ORB	1	EA
26	030-4313	SWIVEL "T" RUN ADAPTOR FJIC 12 X MJIC 12 X MJIC 12	1	EA
27	030-4450	ADAPTOR LONG MALE JIC 5 / 8 TO MALE ORB 5 / 8	1	EA
28	030-4560	ORB MALE CONNECTOR 12MJIC X 20 ORB	2	EA
29	030-4580	TUBE ADAPTOR M / F 1/2 NPT X FJIC 8	1	EA
30	030-4975	ORB MALE CONNECTOR MJIC 6 X 4 ORB	1	EA
31	030-4995	90° S SWIVEL TUBE ADAPTOR FJIC 4 X MJIC 4	1	EA
32	030-4996	90° S SWIVEL TUBE ADAPTOR FJIC 6 X MJIC 6	2	EA
33	030-5004	"T" ADAPTOR MJIC 8 X MJIC 8 X MJIC 8	1	EA
34	030-5039	SWIVEL "T" RUN ADAPTOR FJIC 6 X MJIC 6 X MJIC 6	1	EA
35	030-5042	SWIVEL "T" OUTLET ADAPTOR FJIC 6 X MJIC 6 X MJIC 6	1	EA
36	030-5054	TUBE REDUCER FJIC 6 X MJIC 4	1	EA
37	030-5902	TUBE ADAPTOR M / F 3/8 NPT X FJIC 4	1	EA
39	030-6718	RUN "T" ADJUST ORB ADAPTOR MJIC 4 X MJIC 4 X 4 ORB	1	EA
40	052-1184	SWITCH	2	EA
41	067-0177	CHECK VALVE	1	EA
42	067-3162	FLOW CONTROL	1	EA
43	067-6331	ONE WAY VALVE	1	EA
44	07000-7125	RESTRICTOR	2	EA

Item	Part No.	Name	Qty	Uom
45	099-1354	HOSE#8 2 WIRES 4250 PSI ST 10FJIC X 10FJIC 90°-74"lg PROT	1	EA
46	099-1355	HOSE#8 2 WIRES 4250 PSI ST 10FJIC X 10FJIC90°L-77"lg PROT	1	EA
47	099-1356	HOSE#8 2 WIRES 4250 PSI ST 10FJIC X 10FJIC 90° 40"lg PROT	2	EA
48	099-1365	HOSE#8 2 WIRES 4250 PSI ST 10FJIC X 10FJIC90°L-104"lg PRO	1	EA
49	099-1465	HOSE#6 2 WIRES 5000 PSI ST 8FJIC X 8FJIC 90° 19"lg PROT	2	EA
50	099-1466	HOSE#8 2 WIRES 4250 PSI ST 10MJIC X 10FJIC90°-116"lg PROT	2	EA
51	099-1467	HOSE#8 2 WIRES 4250 PSI ST 10MJIC X 10FJIC90°L 119"lg PRO	2	EA
52	099-1468	HOSE#8 2 WIRES 4250 PSI ST 10FJIC X 10FJIC90° 104"lg PROT	1	EA
53	099-1469	HOSE#8 2 WIRES 4250 PSI ST 10MJIC X 10FJIC90°L 33"lg PROT	1	EA
54	099-1470	HOSE#8 2 WIRES 4250 PSI ST 10MJIC X 10FJIC 90° 33"lg PROT	1	EA
55	099-1472	HOSE#12 2 WIRES 2250 PSI 12FJIC X 12FJIC 90°-59"lg PROT	2	EA
56	099-1478	HOSE#8 2 WIRES 4250 PSI ST 8FJIC X 8FJIC 90° 66"lg PROT	1	EA
57	099-1490	HOSE#6 2 WIRES 5000 PSI ST 8FJIC X 8FJIC 45° 17"lg PROT	2	EA
58	099-1492	HOSE#6 2 WIRES 5000 PSI ST 8FJIC X 8FJIC 90° 21"lg PROT	2	EA
59	099-1493	HOSE#4 2 WIRES 5000 PSI 6FJIC X 6FJIC 90° 9"lg	2	EA
60	099-1494	HOSE#6 2 WIRES 5000 PSI ST 6FJIC X 8FJIC 5"lg	1	EA
61	099-1502	HOSE#6 2 WIRES 5000 PSI ST 8FJIC X 8FJIC 45° 107"lg PROT	1	EA
62	099-1503	HOSE#8 2 WIRES 4250 PSI ST 12MJIC X 10FJIC 45°105"lg PROT	1	EA
63	099-1504	HOSE#6 2 WIRES 5000 PSI ST 10FJIC X 8FJIC 45° 22"lg PROT	2	EA
64	099-1505	HOSE#4 2 WIRES 5000 PSI 6FJIC X 6FJIC 45° 9"lg	1	EA
65	099-1506	HOSE#4 2 WIRES 5000 PSI 4FJIC X 6FJIC 45° 46"lg	1	EA
66	099-1512	HOSE#6 2 WIRES 5000 PSI ST 8FJIC X 8FJIC 90° 17"lg PROT	2	EA
67	099-1513	HOSE#8 2 WIRES 4250 PSI ST 10FJIC X 10FJIC 90° 25"lg PROT	1	EA
68	099-1514	HOSE#8 2 WIRES 4250 PSI ST 10FJIC X 10FJIC90°L 25"lg PROT	1	EA
69	125-0011	PRESSURE TEST COUPLING	2	EA
70	503-0013	RESTRICTOR	1	EA

Item	Part No.	Name	Qty	Uom
71	524-0008	HYDRAULIC FITTING	1	EA
72	724-0014	HYDRAULIC FITTING	2	EA
73	732-7879	ADAPTOR	2	EA


070004917-197830 LOADER 07000-7142 PILOT PRESSURE HYDRAULIC

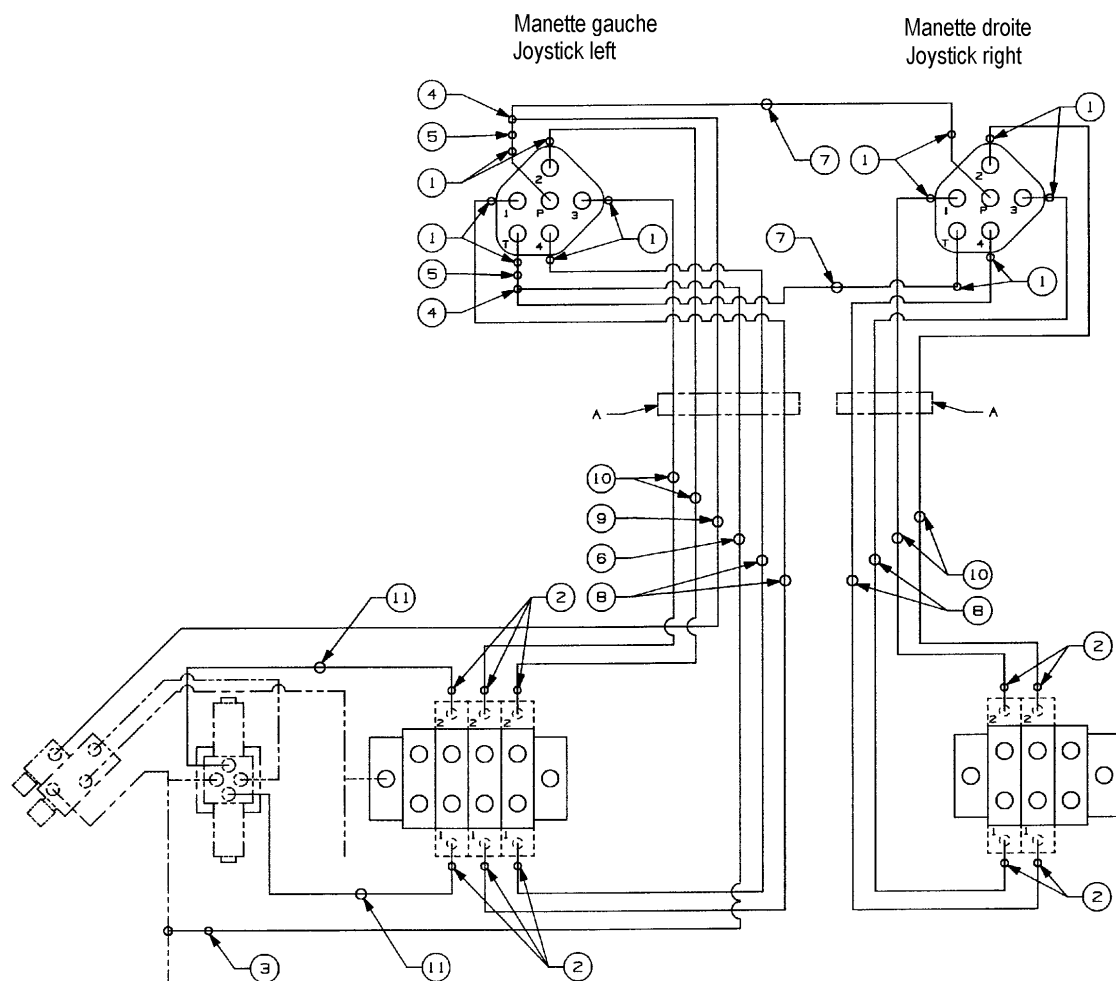

Item	Part No.	Name	Qty	Uom
1	030-1409	HYDRAULIC FITTING	12	EA
2	030-1423	90° ADJUSTABLE ADAPTOR MJIC 6 X 6 ORB	10	EA
3	030-4996	90° S SWIVEL TUBE ADAPTOR FJIC 6 X MJIC 6	1	EA
4	030-5039	SWIVEL "T" RUN ADAPTOR FJIC 6 X MJIC 6 X MJIC 6	2	EA
5	030-5067	45° SWIVEL ADAPTOR FJIC 6 X MJIC 6	2	EA
6	099-0414	HOSE#4 2 WIRES 5000 PSI 6FJIC X 6FJIC 90° 74"lg	1	EA
7	099-1384	HOSE#4 2 WIRES 5000 PSI 6FJIC X 6FJIC 45° 18 1/2"lg	2	EA
8	099-1480	HOSE#4 2 WIRES 5000 PSI 6FJIC X 6FJIC 45° 62"lg	4	EA
9	099-1488	HOSE#4 2 WIRES 5000 PSI 6FJIC X 6FJIC 90° 93"lg	1	EA
10	099-1489	HOSE#4 2 WIRES 5000 PSI 6FJIC X 6FJIC 45° 75"lg	4	EA
11	099-8011	HOSE#4 2 WIRES 5000 PSI 6FJIC X 6FJIC 90° 12"lg	2	EA

Item	Part No.	Name	Qty	Uom
A	032-8852	HOSE PROTECTOR	2	FT

07000-0190 MAIN BOOM ASSEMBLY 07000-0190 (02) MAIN BOOM ASSEMBLY

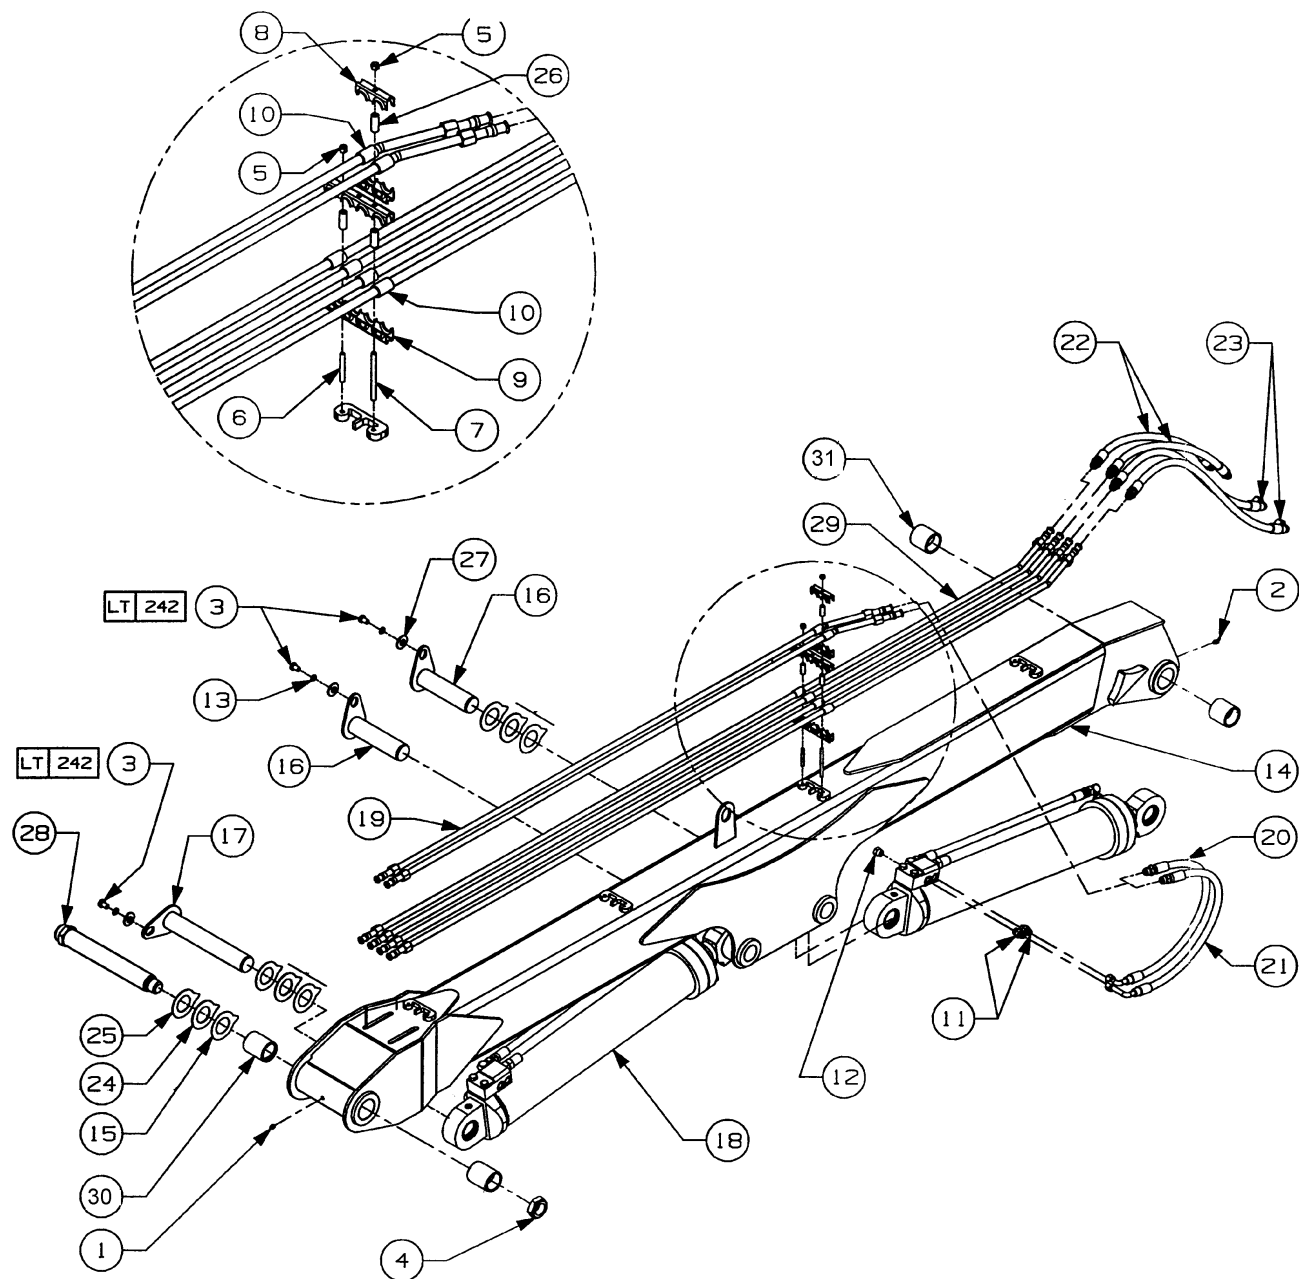

Item	Part No.	Name	Qty	Uom
1	001-0001	GREASE FITTING 1/8"NPT	1	EA
2	001-0004	GREASE FITTING 1/8"NPTx45	1	EA
3	008-6133	BOLT 1/2"-13 UNCx3/4"lg	3	EA

Item	Part No.	Name	Qty	Uom
4	010-0017	NYLON LOCK NUT	1	EA
5	010-0339	NYLON LOCK NUT 5/16"-18UNC	8	EA
6	016-0001	STUD 5/16-18 x 2 1/2 lg.	5	EA
7	016-0007	STUD 5/16-18 x 4 lg.	3	EA
8	018-9679	TUBING CLAMP	3	EA
9	018-9680	TUBING CLAMP	4	EA
10	018-9681	RUBBER BUSHING	22	EA
11	030-1412	ORB MALE CONNECTOR MJIC 8 X 8 ORB	2	EA
12	030-4137	ORB PLUG 8 ORB	1	EA
13	052-0138	CAM WEDGES WASHER 1/2"dia	3	EA
14	07000-0014	MAIN BOOM	1	EA
15	07000-0288	SHIM 1/32"	3	EA
16	07000-2343	PIN	2	EA
17	07000-2350	PIN	1	EA
18	07000-2480	MAIN BOOM/STCK BOOM CYLINDER	2	EA
19	07000-3249	HYDRAULIC TUBING	2	EA
20	099-1350	HOSE#8 2 WIRES 4250 PSI ST 10MJIC x 8FJIC 90° 36"lg	1	EA
21	099-1351	HOSE#8 2 WIRES 4250 PSI ST 10MJIC x 8FJIC 90°L 36"lg	1	EA
22	099-1352	HOSE#8 2 WIRES 4250 PSI ST 10MJIC x 10MJIC 36"lg	2	EA
23	099-1353	HOSE#8 2 WIRES 4250 PSI ST 10MJIC x 10FJIC 90° 34"lg	2	EA
24	528-0133	SHIM 1/8"	3	EA
25	528-0136	SHIM 1/16"	3	EA
26	531-4877	SPACER	11	EA
27	636-0170	FLAT WASHER	3	EA
28	715-0457	PIN 2"dia X 14 1/8"lg	1	EA
29	734-0044	HYDRAULIC TUBING	4	EA
30	504-8397	BUSHING	2	EA
31	07000-1179	BUSHING	2	EA

Comments for Page: 07000-0190 (02) MAIN BOOM ASSEMBLY


[fr] (#3 008-6133) Utilisé du "Loctite" LT= Loctite

[en] (#3 008-6133) Use "Loctite" LT= Loctite

[fr] (#14 07000-0014) Item 30, 31 inclus

[en] (#14 07000-0014) Item 30, 31 included

07000-0190 MAIN BOOM ASSEMBLY 07000-2480 (05) MAIN BOOM/STCK BOOM CYLINDER

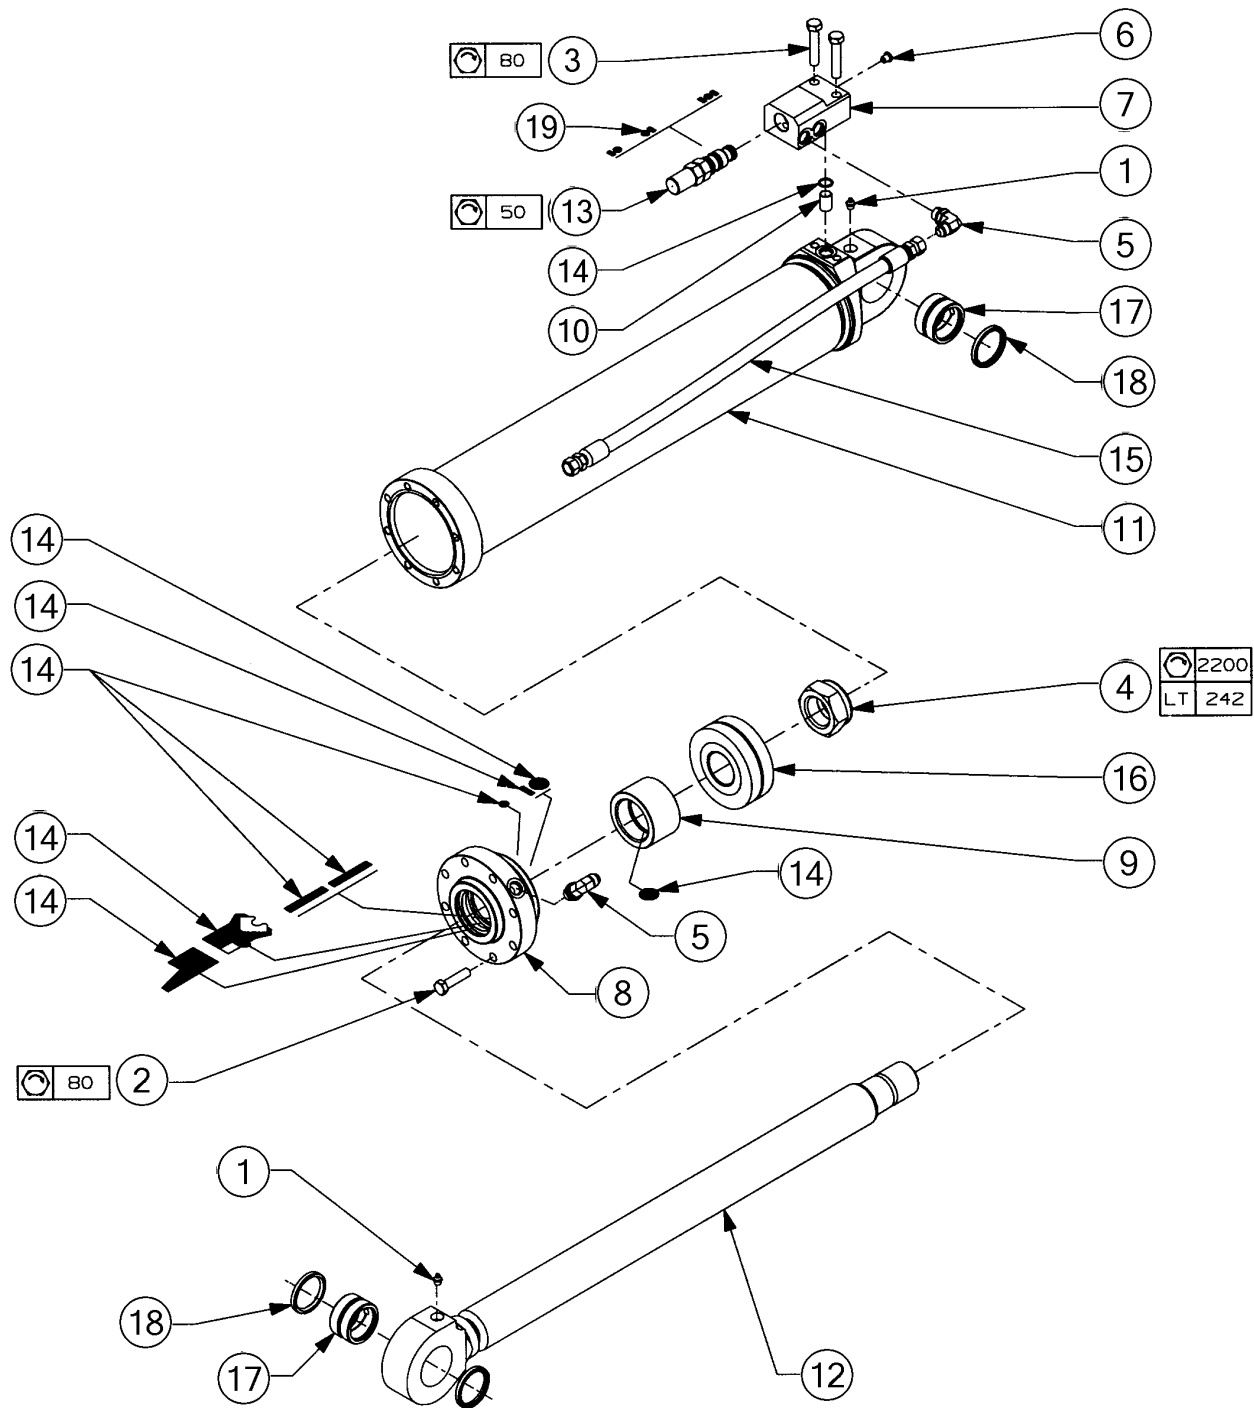

Item	Part No.	Name	Qty	Uom
1	001-0001	GREASE FITTING 1/8"NPT	3	EA
2	008-0242	BOLT 1/2"-13UNCx2"lg	8	EA
3	008-0243	BOLT 1/2"-13UNCx2 1/2"lg, gr.8	2	EA
4	010-0327	NYLON LOCK NUT 2"-12UNFx1 1/2"lg	1	EA

Item	Part No.	Name	Qty	Uom
5	030-1426	HYDRAULIC FITTING	2	EA
6	030-7726	HEX SOCKET PLUG 4 ORB	1	EA
7	07000-2253	HYDRAULIC MANIFOLD	1	EA
8	07000-2394	HEAD	1	EA
9	07000-2408	SPACER	1	EA
10	07000-2435	O'RING HOLDER	1	EA
11	07000-2483	CYLINDER BARREL ASSEMBLY	1	EA
12	07000-2494	ROD ASSEMBLY	1	EA
13	07000-5476	RELIEF CARTRIDGE VALVE ASSEMBLY	1	EA
14	096-0075	CYLINDER SEAL KIT	1	EA
15	099-1404	HOSE#8 2 WIRES 4250 PSI ST 8FJIC x 8FJIC 26"lg	1	EA
16	101-0011	PISTON	1	EA
17	501-9153	BUSHING	2	EA
18	039-0005	WIPER SEAL 2 "	4	EA
19	067-0283	SEAL KIT	1	EA

Comments for Page: 07000-2480 (05) MAIN BOOM/STCK BOOM CYLINDER

[fr] (#2 008-0242),(#3 008-0243),(#13 07000-5476) Utiliser une clé dynamométrique. Tous les couples de serrage sont en lb-pi.

[en] (#2 008-0242),(#3 008-0243),(#13 07000-5476) Use a torque wrench. Lubricated torque values in ft-lb.

[fr] (#4 010-0327) Utiliser une clé dynamométrique. Tous les couples de serrage sont en lb-pi. et lubrifiés. LT= Loctite

[en] (#4 010-0327) Use a torque wrench. Lubricated torque values in ft-lb. LT= Loctite

[fr] (#11 07000-2483),(#12 07000-2494) Items 17, 18 inclus

[en] (#11 07000-2483),(#12 07000-2494) Items 17, 18 included

[fr] (#14 096-0075) Item 16 inclus

[en] (#14 096-0075) Item 16 included


[fr] (#14 096-0075),(#16 101-0011),(#19 067-0283) Les pièces comprises dans l'ensemble des joints d'étanchéité ne sont pas vendues séparément

[en] (#14 096-0075),(#16 101-0011),(#19 067-0283) Parts included in the seals kit are not sold separately

[fr] (#19 067-0283) Ensemble de joints pour l'item 13

[en] (#19 067-0283) Seal for item 13

07000-2196 STICK BOOM 07000-2196 (04) STICK BOOM

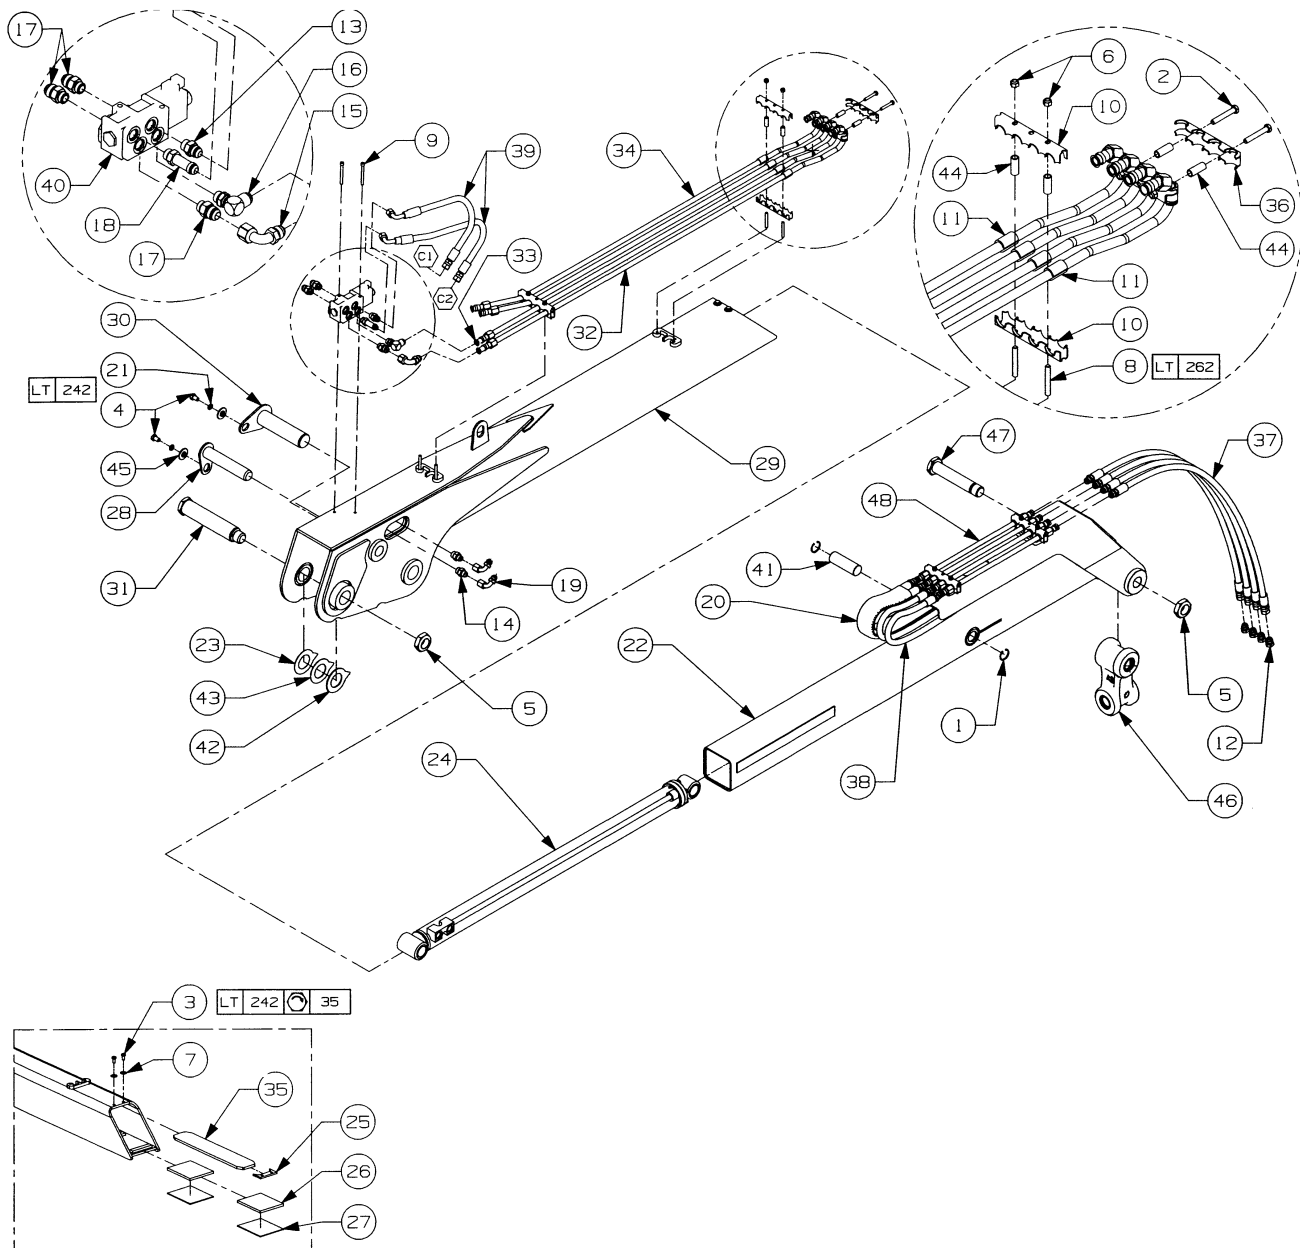

Item	Part No.	Name	Qty	Uom
1	004-0031	INTERNAL RETAINING RING	2	EA
2	008-0210	BOLT 5/16"-18UNCx2"lg	2	EA
3	008-0216	BOLT 3/8"-16UNC x 3/4" lg BOLT	2	EA
4	008-6133	BOLT 1/2"-13 UNCx3/4"lg	2	EA
5	010-0017	NYLON LOCK NUT	2	EA
6	010-0339	NYLON LOCK NUT 5/16"-18UNC	10	EA
7	012-0352	3/8"dia FLAT WASHER	2	EA
8	016-0001	STUD 5/16-18 x 2 1/2 lg.	8	EA

Item	Part No.	Name	Qty	Uom
9	017-6154	HEX. SOCKET HEAD CAP SCREW 5/16"-18UNC X 3"lg	2	EA
10	018-9680	TUBING CLAMP	4	EA
11	018-9681	RUBBER BUSHING	20	EA
12	030-1395	HYDRAULIC FITTING	4	EA
13	030-1412	ORB MALE CONNECTOR MJIC 8 X 8 ORB	1	EA
14	030-3939	ORB MALE CONNECTOR MJIC 8 X 10 ORB	2	EA
15	030-4032	90° S SWIVEL TUBE ADAPTOR FJIC 10 X MJIC 10	1	EA
16	030-4077	90° ADJUSTABLE ADAPTOR M / M MJIC 10 X 8 ORB	1	EA
17	030-4078	ORB MALE CONNECTOR MJIC 10 X 8 ORB	3	EA
18	030-4477	ORB MALE CONNECTOR LG MJIC 8 X 8 ORB	1	EA
19	030-4541	90° S SWIVEL TUBE ADAPTOR FJIC 8 X MJIC 8	2	EA
20	032-8852	HOSE PROTECTOR	2	FT
21	052-0138	CAM WEDGES WASHER 1/2"dia	2	EA
22	07000-0134	TELESCOPE	1	EA
23	07000-0288	SHIM 1/32"	1	EA
24	07000-0700	TELESCOPIC BOOM CYLINDER	1	EA
25	07000-0741	LOCK PLATE	1	EA
26	07000-0933	WEAR PLATE	2	EA
27	07000-0960	SHIM	2	EA
28	07000-1114	PIN YP-150-0775-3	1	EA
29	07000-2197	TELESCOPIC STICK BOOM	1	EA
30	07000-2343	PIN	1	EA
31	07000-2345	PIN	1	EA
32	07000-3212	HYDRAULIC TUBING	1	EA
33	07000-3235	HYDRAULIC TUBING	1	EA
34	07000-3238	HYDRAULIC TUBING	2	EA
35	07000-4734	WEAR PLATE	1	EA
36	07000-7188	TUBES CLAMP	2	EA
37	099-0820	HOSE 46" (CUT LENGHT)	4	EA
38	099-0837	HOSE 38" (CUT LENGHT)	4	EA
39	099-0840	HOSE 21" (CUT LENGHT)	2	EA
40	108-0176	SELECTOR VALVE	1	EA
41	523-9218	PIN 1 1/2"diax4 1/2"lg	1	EA

Item	Part No.	Name	Qty	Uom
42	528-0133	SHIM 1/8"	1	EA
43	528-0136	SHIM 1/16"	1	EA
44	531-4877	SPACER	10	EA
45	636-0170	FLAT WASHER	2	EA
46	715-4293	MALE YOKE	1	EA
47	715-6152	PIN 1 1/2"dia. X 8 1/4"lg	1	EA
48	734-0033	HYDRAULIC TUBING	4	EA

Comments for Page: 07000-2196 (04) STICK BOOM


[fr] (#3 008-0216) Utiliser une clé dynamométrique. Tous les couples de serrage sont en lb-pi. et lubrifiés. LT= Loctite

[en] (#3 008-0216) Use a torque wrench. Lubricated torque values in ft-lb. LT= Loctite

[fr] (#4 008-6133),(#8 016-0001),(#21 052-0138) Utilisé du "Loctite" LT= Loctite

[en] (#4 008-6133),(#8 016-0001),(#21 052-0138) Use "Loctite" LT= Loctite

07000-2196 STICK BOOM 07000-0700 (05) TELESCOPIC STICK BOOM CYLINDER

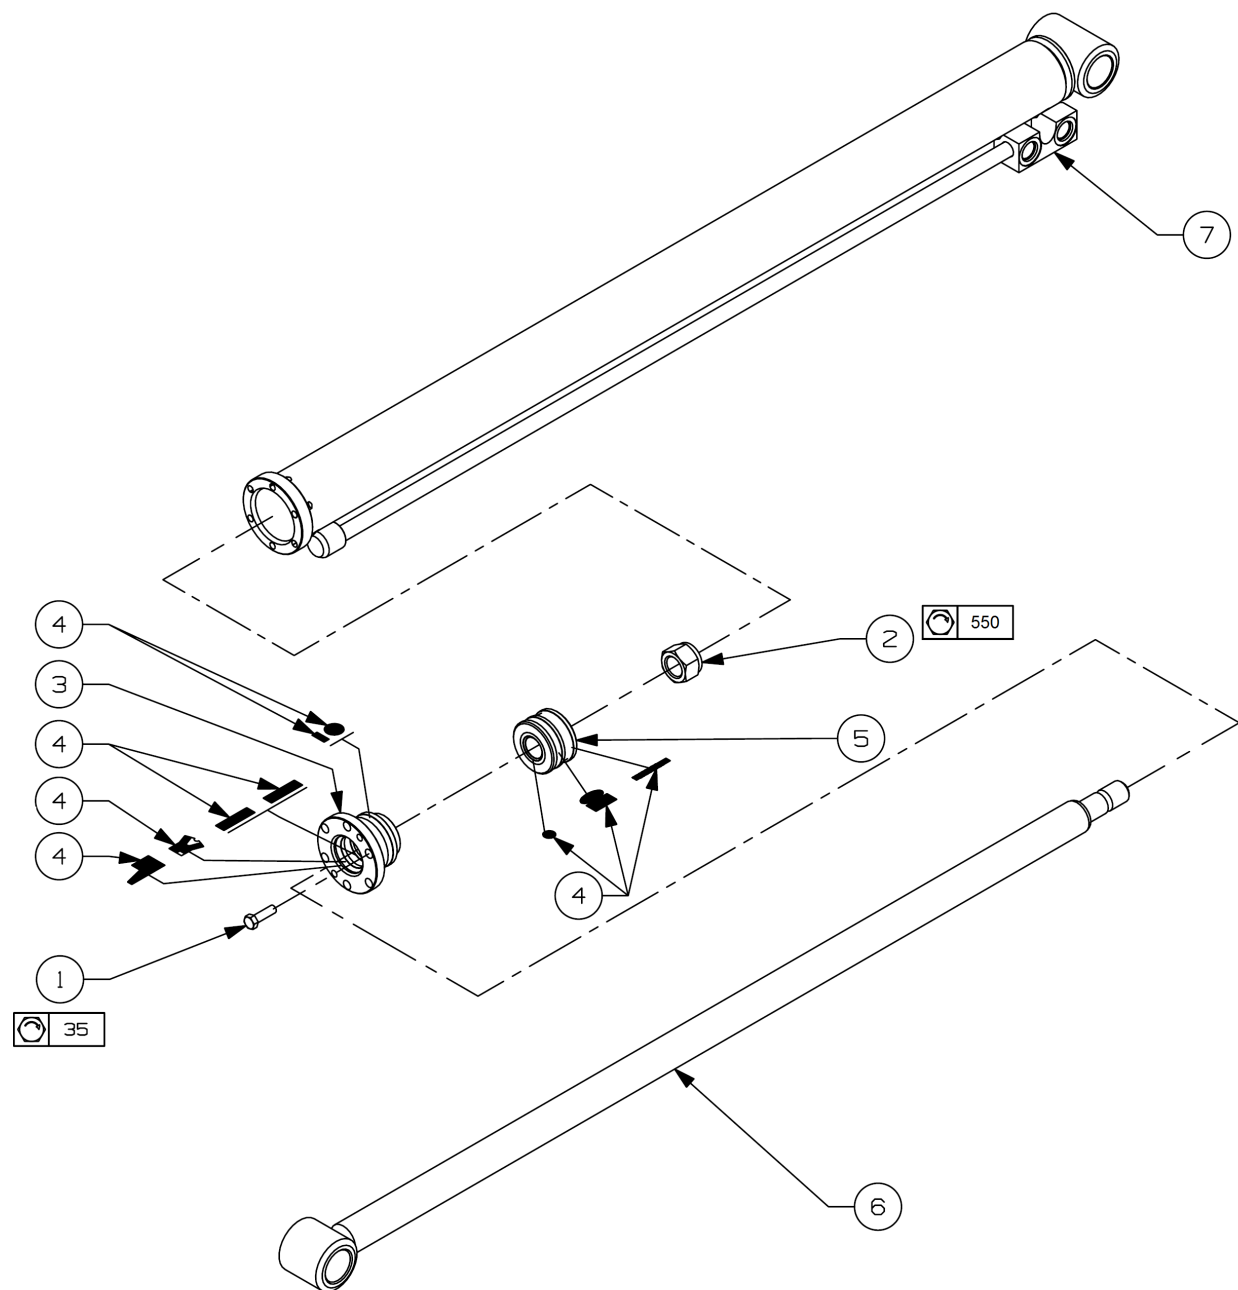

Item	Part No.	Name	Qty	Uom
1	008-0218	3 / 8 X 1 1 / 4 BOLT	6	EA
2	010-0331	NYLON LOCK NUT 1"-14UNSx1 1/16" lg	1	EA
3	07000-0701	HEAD	1	EA
4	07001-2797	SEAL KIT	1	EA
5	501-9149	PISTON	1	EA
6	701-9140	ROD	1	EA
7	701-9141	TUBING	1	EA


[fr] (#1 008-0218),(#2 010-0331) Utiliser une clé dynamométrique. Tous les couples de serrage sont en lb-pi.

[en] (#1 008-0218),(#2 010-0331) Use a torque wrench. Lubricated torque values in ft-lb.

[fr] (#4 07001-2797) Les pièces comprises dans l'ensemble des joints d'étanchéité ne sont pas vendues séparément


[en] (#4 07001-2797) Parts included in the seals kit are not sold separately

07000-2196 STICK BOOM 715-4293 (08) MALE YOKE

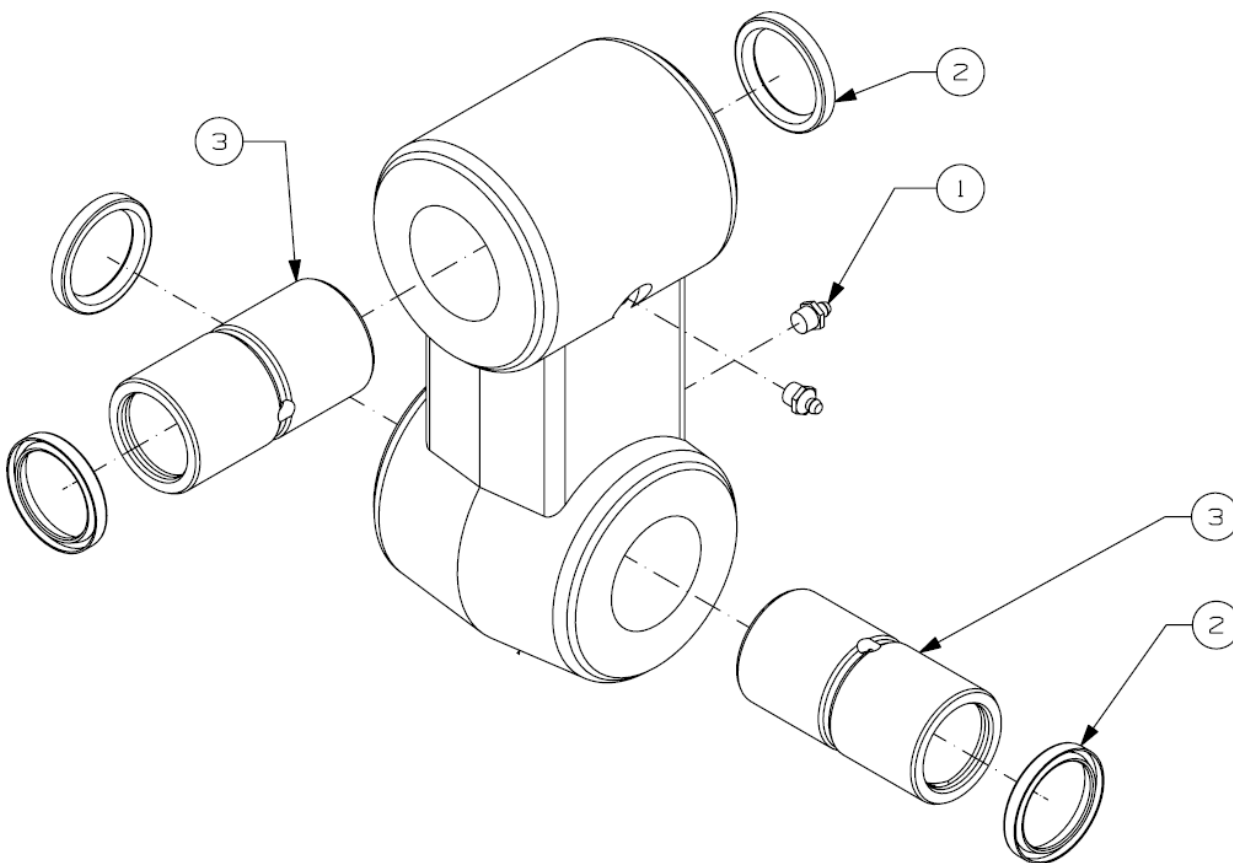

Item	Part No.	Name	Qty	Uom
1	001-0001	GREASE FITTING 1/8"NPT	2	EA
2	039-0014	WIPER SEAL 1 1/2"	4	EA
3	07000-5550	BUSHING	2	EA

07000-414801 COLUMN ASSY 07000-414801 (04) COLUMN ASSY

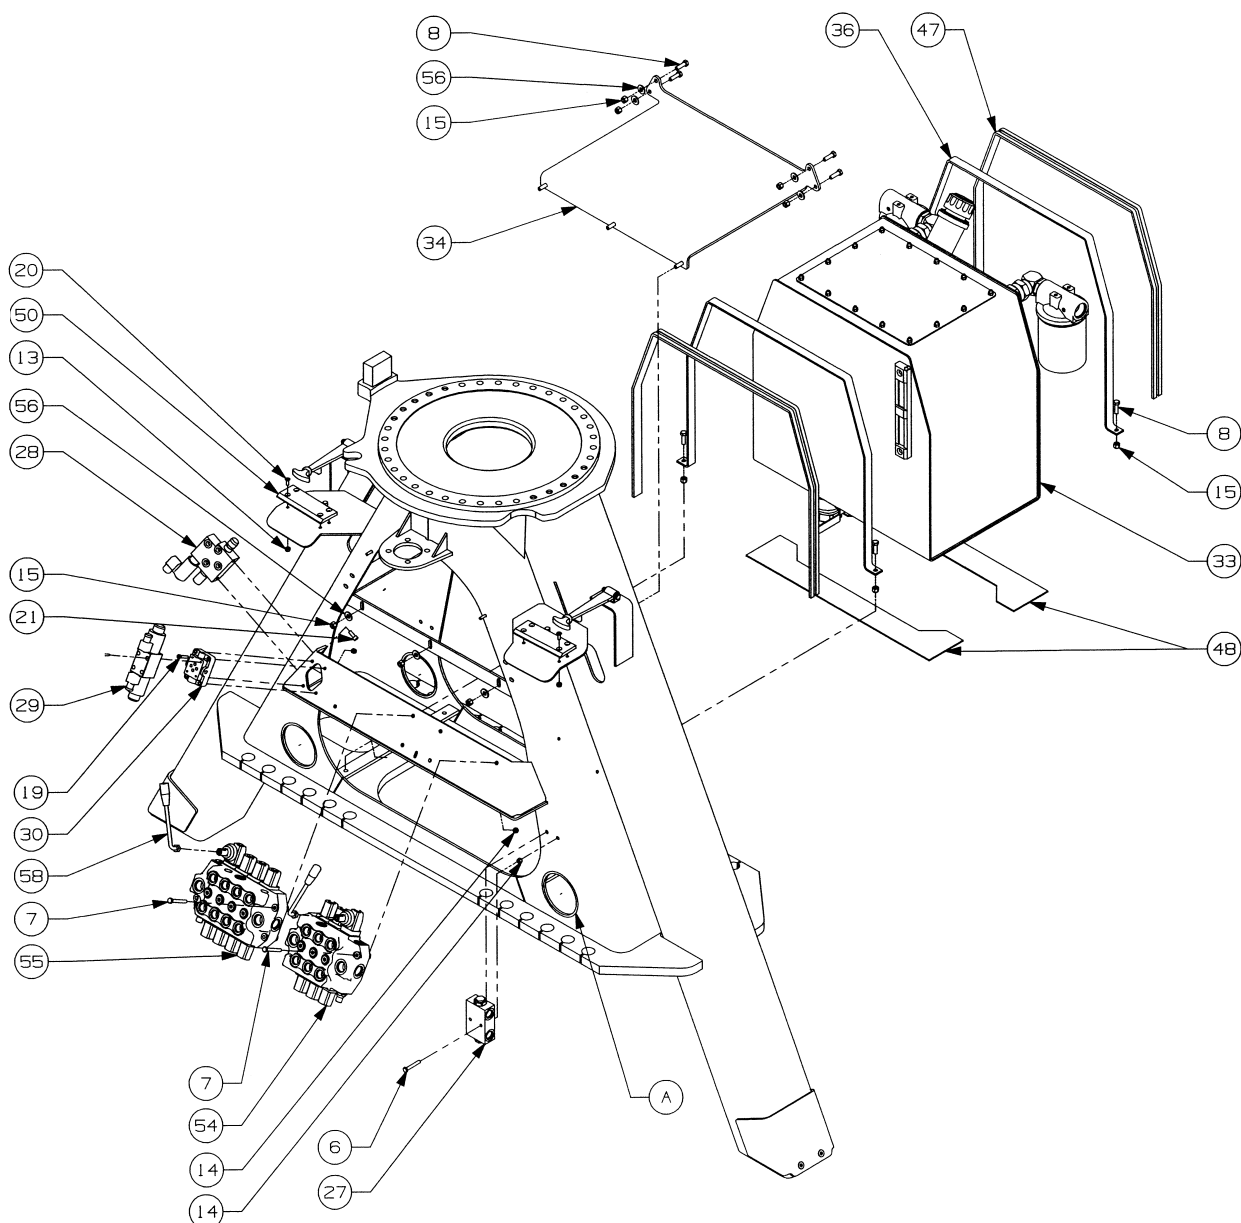


Item	Part No.	Name	Qty	Uom
1	004-0031	INTERNAL RETAINING RING	4	EA
2	008-0085	BOLT 1/4" - 28 UNF X 3/4"lg	4	EA
3	008-0198	BOLT 1/4"-20UNCx3/4"lg	3	EA
4	008-0199	BOLT 1/4"-20UNCx1"lg	1	EA
5	008-0202	BOLT 1/4"-20UNCx2"lg	1	EA
6	008-0210	BOLT 5/16"-18UNCx2"lg	4	EA
7	008-0211	BOLT 5/16"-18UNCx2 1/2"lg	6	EA
8	008-0218	3 / 8 X 1 1 / 4 BOLT	8	EA

Item	Part No.	Name	Qty	Uom
9	008-0221	BOLT 3/8"-16UNCx2 1/2"lg	4	EA
10	008-4804	BOLT 1/4"-20UNC x 1/2"lg	1	EA
11	010-0319	NYLON LOCK NUT 1/2"-20UNFx5/8"lg	4	EA
12	010-0323	NYLON LOCK NUT 1"-14UNSx1 1/16" lg	1	EA
13	010-0338	NYLON LOCK NUT 1/4"-20UNCx3/8"lg	27	EA
14	010-0339	NYLON LOCK NUT 5/16"-18UNC	10	EA
15	010-0340	3 / 8 NYLON LOCK NUT NC ZINC	15	EA
16	012-0350	FLAT WASHER 1/4" dia	6	EA
17	013-0362	LOCK WASHER 1/4"dia	4	EA
18	017-0640	HEX. SOCKET HEAD CAP SCREW 1/4-20UNCx1"lg.	8	EA
19	017-0641	HEX. SOCKET HEAD CAP SCREW 1/4 -20UNC X 1 1/4"lg	4	EA
20	017-3639	HEX. SOCKET FLAT HEAD CAP SCREW	8	EA
21	017-5793	HEX. SOCKET HEAD CAP SCREW M8 X 1.25 X 20"lg	2	EA
22	018-8920	CLAMP	2	EA
23	041-1642	O-RING	4	EA
24	052-1179	LINCH PIN	4	EA
25	052-1183	CONTROL BOX	1	EA
26	057-5658	HUB	1	EA
27	07002-5054	STABILIZER LOCK VALVES	2	EA
28	067-0334	PRESSURE REDUCING VALVE	1	EA
29	067-0335	DIRECTIONAL CONTROL VALVE	1	EA
30	067-0336	STACKING PLATE	1	EA
31	07000-0546	STOPPER	2	EA
32	07000-0547	WEAR PLATE	2	EA
33	07000-0591	TANK	1	EA
34	07000-1056	REINFORCEMENT	1	EA
35	07000-1226	OUTRIGGER CYLINDER	2	EA
36	07000-2118	TANK FASTENER	2	EA
37	07000-4065	PIN	2	EA
38	07000-4149	COLUMN ASSEMBLY	1	EA
39	07000-4249	ASSEMBLY COVER	1	EA
40	07000-4539	ARM	1	EA
41	07000-4540	MOBILE LEVER ARM	1	EA

Item	Part No.	Name	Qty	Uom
42	07000-4571	COVER	1	EA
43	07000-4593	HOLDER ASSEMBLY	1	EA
44	07000-4615	PIN	2	EA
45	07000-4617	SHOE ASSEMBLY	2	EA
46	07000-4622	TELESCOPIC OUTRIGGER	2	EA
47	07000-4664	RUBBER PROTECTOR	2	EA
48	07000-4666	RUBBER SUPPORT	2	EA
49	07000-4670	WEAR PLATE	2	EA
50	07000-6108	SUPPORT	2	EA
51	07000-6248	WEAR PLATE	2	EA
52	108-0180	RIGHT CONTROL LEVER	1	EA
53	108-0181	LEFT CONTROL LEVER	1	EA
54	130-0291	3 SECTIONS, VALVE / RIGHT CONTROL	1	EA
55	130-0292	4 SECTIONS, VALVE / LEFT CONTROL	1	EA
56	143-0009	FLAT WASHER 3/8"dia	7	EA
57	515-9685	PIN 1 1/2"diax5 1/2"lg	2	EA
58	524-0242	CONTROL LEVER	2	EA


07000-414802 COLUMN ASSY 07000-414802 (04) COLUMN ASSY

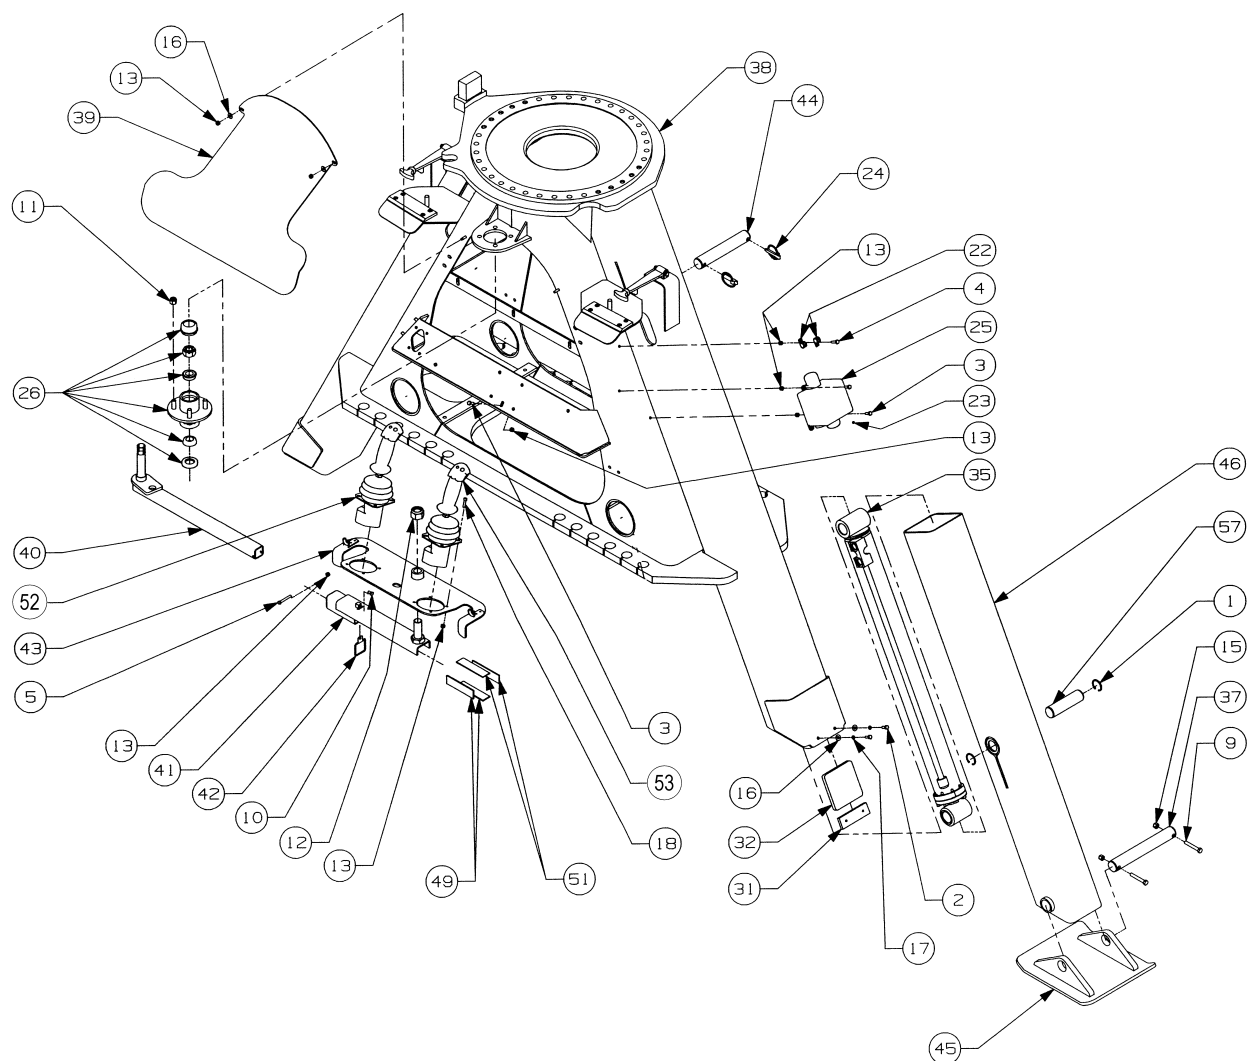

Item	Part No.	Name	Qty	Uom
1	004-0031	INTERNAL RETAINING RING	4	EA
2	008-0085	BOLT 1/4" - 28 UNF X 3/4"lg	4	EA
3	008-0198	BOLT 1/4"-20UNCx3/4"lg	3	EA
4	008-0199	BOLT 1/4"-20UNCx1"lg	1	EA
5	008-0202	BOLT 1/4"-20UNCx2"lg	1	EA
6	008-0210	BOLT 5/16"-18UNCx2"lg	4	EA
7	008-0211	BOLT 5/16"-18UNCx2 1/2"lg	6	EA
8	008-0218	3 / 8 X 1 1 / 4 BOLT	8	EA
9	008-0221	BOLT 3/8"-16UNCx2 1/2"lg	4	EA
10	008-4804	BOLT 1/4"-20UNC x 1/2"lg	1	EA
11	010-0319	NYLON LOCK NUT 1/2"-20UNFx5/8"lg	4	EA

Item	Part No.	Name	Qty	Uom
12	010-0323	NYLON LOCK NUT 1"-14UNSx1 1/16" lg	1	EA
13	010-0338	NYLON LOCK NUT 1/4"-20UNCx3/8"lg	27	EA
14	010-0339	NYLON LOCK NUT 5/16"-18UNC	10	EA
15	010-0340	3 / 8 NYLON LOCK NUT NC ZINC	15	EA
16	012-0350	FLAT WASHER 1/4" dia	6	EA
17	013-0362	LOCK WASHER 1/4"dia	4	EA
18	017-0640	HEX. SOCKET HEAD CAP SCREW 1/4-20UNCx1"lg.	8	EA
19	017-0641	HEX. SOCKET HEAD CAP SCREW 1/4 -20UNC X 1 1/4"lg	4	EA
20	017-3639	HEX. SOCKET FLAT HEAD CAP SCREW	8	EA
21	017-5793	HEX. SOCKET HEAD CAP SCREW M8 X 1.25 X 20"lg	2	EA
22	018-8920	CLAMP	2	EA
23	041-1642	O-RING	4	EA
24	052-1179	LINCH PIN	4	EA
25	052-1183	CONTROL BOX	1	EA
26	057-5658	HUB	1	EA
27	07002-5054	STABILIZER LOCK VALVES	2	EA
28	067-0334	PRESSURE REDUCING VALVE	1	EA
29	067-0335	DIRECTIONAL CONTROL VALVE	1	EA
30	067-0336	STACKING PLATE	1	EA
31	07000-0546	STOPPER	2	EA
32	07000-0547	WEAR PLATE	2	EA
33	07000-0591	TANK	1	EA
34	07000-1056	REINFORCEMENT	1	EA
35	07000-1226	OUTRIGGER CYLINDER	2	EA
36	07000-2118	TANK FASTENER	2	EA
37	07000-4065	PIN	2	EA
38	07000-4149	COLUMN ASSEMBLY	1	EA
39	07000-4249	ASSEMBLY COVER	1	EA
40	07000-4539	ARM	1	EA
41	07000-4540	MOBILE LEVER ARM	1	EA
42	07000-4571	COVER	1	EA
43	07000-4593	HOLDER ASSEMBLY	1	EA
44	07000-4615	PIN	2	EA

Item	Part No.	Name	Qty	Uom
45	07000-4617	SHOE ASSEMBLY	2	EA
46	07000-4622	TELESCOPIC OUTRIGGER	2	EA
47	07000-4664	RUBBER PROTECTOR	2	EA
48	07000-4666	RUBBER SUPPORT	2	EA
49	07000-4670	WEAR PLATE	2	EA
50	07000-6108	SUPPORT	2	EA
51	07000-6248	WEAR PLATE	2	EA
52	108-0180	RIGHT CONTROL LEVER	1	EA
53	108-0181	LEFT CONTROL LEVER	1	EA
54	130-0291	3 SECTIONS, VALVE / RIGHT CONTROL	1	EA
55	130-0292	4 SECTIONS, VALVE / LEFT CONTROL	1	EA
56	143-0009	FLAT WASHER 3/8"dia	7	EA
57	515-9685	PIN 1 1/2"diax5 1/2"lg	2	EA
58	524-0242	CONTROL LEVER	2	EA

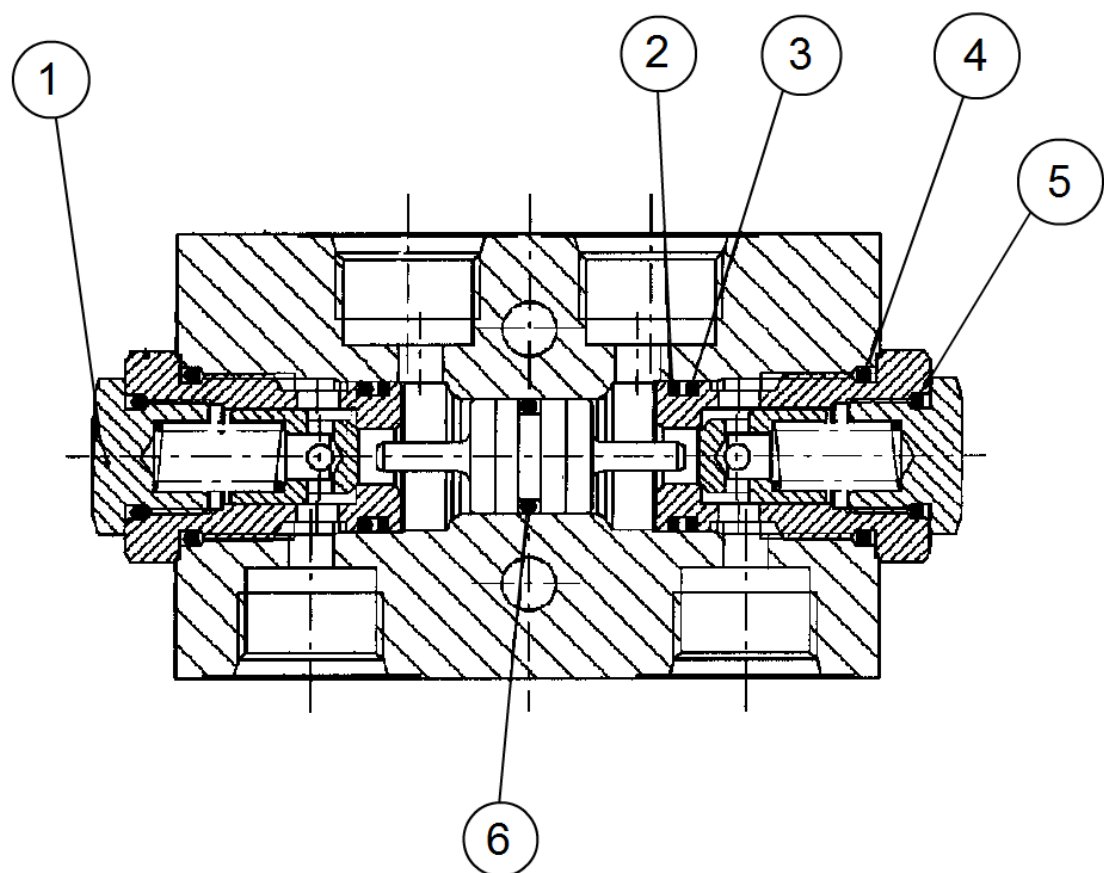

Item	Part No.	Name	Qty	Uom
1	067-0192	RELIEF CARTRIDGE VALVE	2	EA
2	044-0045	BACKUP RING	2	EA
3	041-8821	O-RING	2	EA
4	041-0010	O-RING	2	EA
5	041-5117	O-RING	2	EA
6	041-1688	O-RING	1	EA
7	067-0191	SEAL KIT	1	EA

Comments for Page: 067-0170 STABILIZER LOCK VALVES


[fr] (#2 044-0045),(#3 041-8821),(#4 041-0010),(#5 041-5117),(#6 041-1688) Les pièces comprises dans l'ensemble des joints d'étanchéité ne sont pas vendues séparément

[en] (#2 044-0045),(#3 041-8821),(#4 041-0010),(#5 041-5117),(#6 041-1688) Parts included in the seals kit are not sold separately

[fr] (#7 067-0191) Items 2 à 6 inclus

[en] (#7 067-0191) Items 2 to 6 included


07000-414802 COLUMN ASSY 07000-0591 (03) TANK

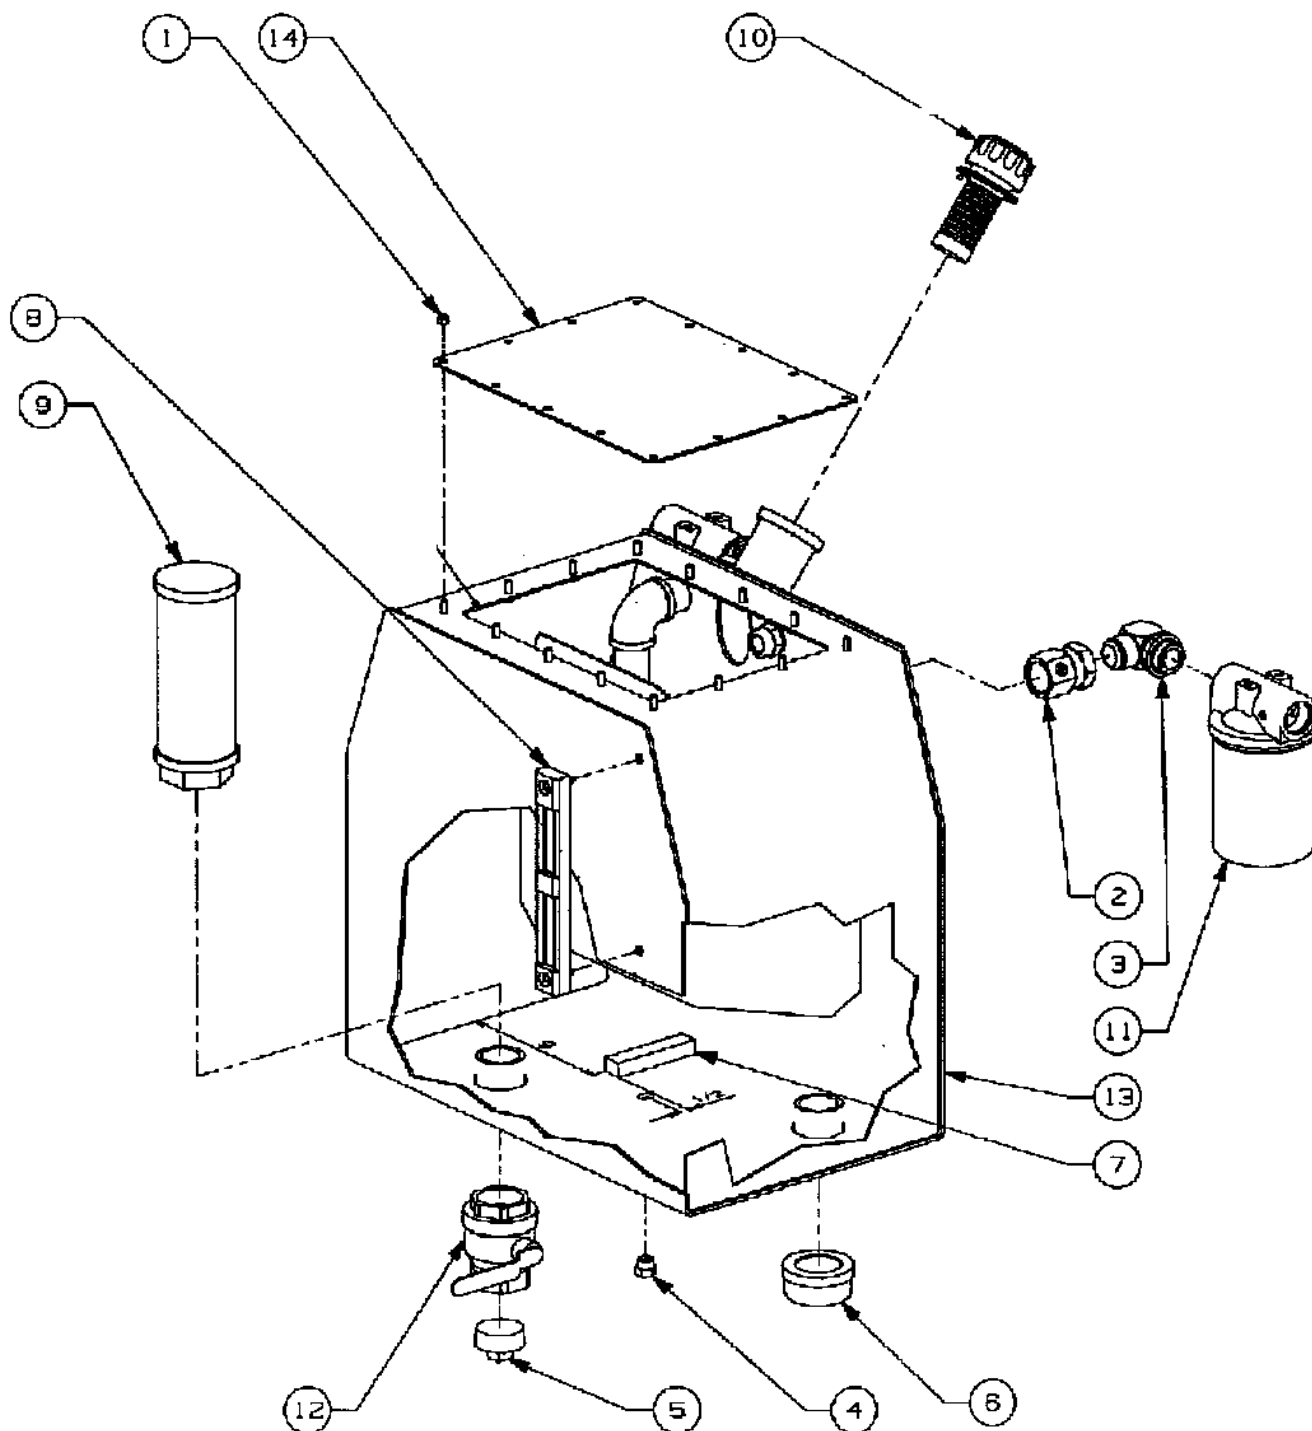

Item	Part No.	Name	Qty	Uom
1	010-0339	NYLON LOCK NUT 5/16"-18UNC	14	EA
2	029-0002	HYDRAULIC FITTING	2	EA
3	030-1432	HYDRAULIC FITTING	2	EA
4	030-4137	ORB PLUG 8 ORB	1	EA
5	046-2015	PLUG	1	EA

Item	Part No.	Name	Qty	Uom
6	046-2035	FEMALE CAP	1	EA
7	066-0090	MAGNET	1	EA
8	066-0091	OIL INDICATOR	1	EA
9	066-0092	STRAINER	1	EA
10	066-0093	PLUG	1	EA
11	066-9285	FILTER ASSEMBLY	2	EA
12	067-0319	BALL VALVE 2 PO	1	EA
13	07000-0596	TANK	1	EA
14	07000-0609	COVER	1	EA

07000-414802 COLUMN ASSY 07000-1226 (01) STABILIZER CYLINDER

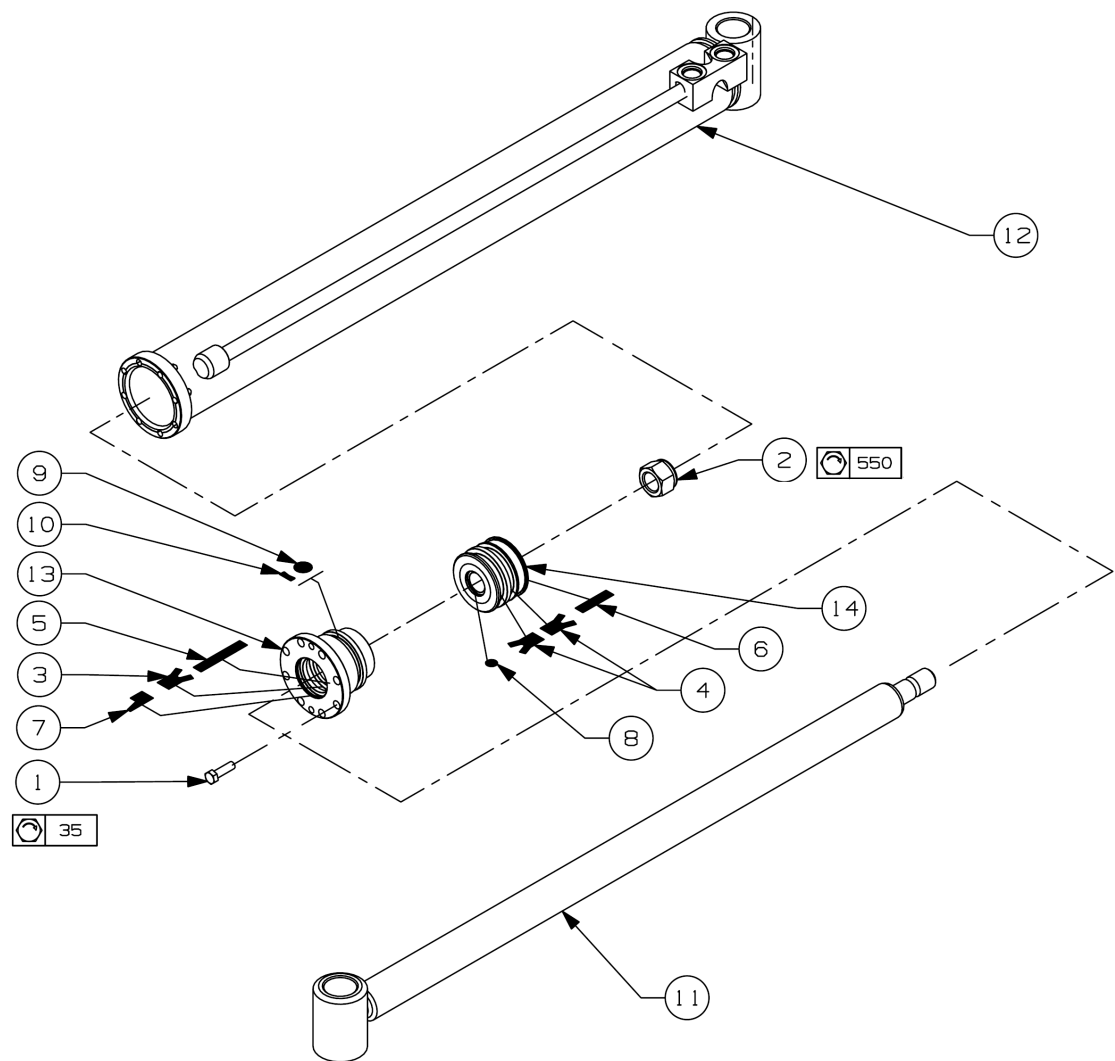

F

Item	Part No.	Name	Qty	Uom
1	008-0218	3 / 8 X 1 1 / 4 BOLT	8	EA
2	010-0331	NYLON LOCK NUT 1"-14UNSx1 1/16" lg	1	EA
3	034-1543	U-CUP	1	EA
4	034-1546	U-CUP	2	EA
5	038-0013	WEAR RING	1	EA
6	038-1602	WEAR RING	1	EA
7	039-1619	WIPER SEAL	1	EA
8	041-1735	O-RING	1	EA

Item	Part No.	Name	Qty	Uom
9	041-1791	O-RING	1	EA
10	044-4427	BACKUP RING	1	EA
11	07000-1227	ARM ASSEMBLY	1	EA
12	07000-1229	TUBING	1	EA
13	501-0171	HEAD	1	EA
14	501-5034	PISTON	1	EA
15	096-3214	SEAL KIT	A	EA

Comments for Page: 07000-1226 (01) STABILIZER CYLINDER


[fr] (#1 008-0218),(#2 010-0331) Utiliser une clé dynamométrique. Tous les couples de serrage sont en lb-pi. et lubrifiés.

LT= Loctite

[en] (#1 008-0218),(#2 010-0331) Use a torque wrench. Lubricated torque values in ft-lb. LT= Loctite

**NO DRAWING
AVAILABLE
FOR THIS BOM**

Item	Part No.	Name	Qty	Uom
1	07000-3613	FASTENER KIT	1	EA
2	07000-5906	ELECTRICAL SCHEMATIC	1	EA
3	07000-6360	HYDRAULIC SCHEMATIC	1	EA
4	07000-6542	PTO-PUMP MOUNTING	1	EA

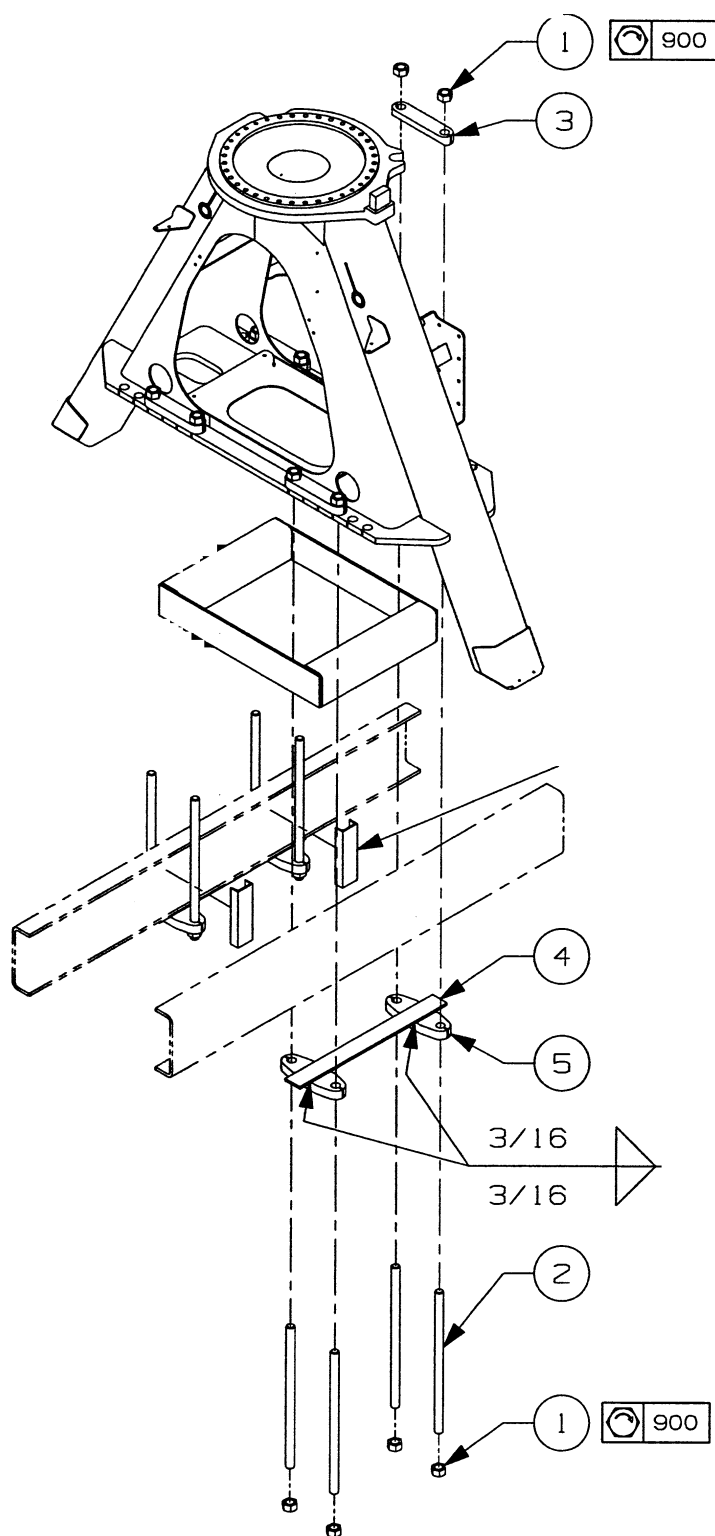

Item	Part No.	Name	Qty	Uom
1	009-0002	NUT 1 1/4"-12UNF	16	EA
2	07000-3616	CRAMPING ROD	8	EA
3	526-1761	CLAMP	4	EA
4	657-0001	REINFORCEMENT	2	EA
5	657-0003	COLLAR	4	EA

Comments for Page: 07000-3613 (01) LOADER ANCHOR KIT

[fr] (#1 009-0002) Utiliser une clé dynamométrique. Tous les couples de serrage sont en lb-pi.

[en] (#1 009-0002) Use a torque wrench. Lubricated torque values in ft-lb.

Appendix A:Pages Index

067-0170 STABILIZER LOCK VALVES	.. 1.8.2-2
07000-0190 (02) MAIN BOOM ASSEMBLY	. 1.6-1
07000-0591 (03) TANK	 1.8.2-3
07000-0700 (05) TELESCOPIC STICK BOOM CYLINDER	 1.7-2
07000-1226 (01) STABILIZER CYLINDER	1.8.2-4
07000-2196 (04) STICK BOOM	 1.7-1
07000-2480 (05) MAIN BOOM/STCK BOOM CYLINDER	 1.6-2
07000-3613 (01) LOADER ANCHOR KIT	... 1.9-2
07000-414801 (04) COLUMN ASSY	 1.8.1-1
07000-414802 (04) COLUMN ASSY	 1.8.2-1
07000-4918 (04) HEAD ASSEMBLY	 1-2
07000-6541 (02) INSTALLATION LABELS	... 1-3
07000-6546 INSTALLATION KIT	 1.9-1
07000-7096 HYDRAULIC INSTALLATION	.. 1-4
07000-7142 PILOT PRESSURE HYDRAULIC	. 1-5
070004917-197830 LOADER	 1-1
715-4293 (08) MALE YOKE	 1.7-3

Appendix B:Parts Index	017-0634	1-2
001-0001	017-0640	1.8.1-1, 1.8.2-1
001-0004	017-0641	1.8.1-1, 1.8.2-1
004-0031	017-3639	1.8.1-1, 1.8.2-1
008-0059	017-5793	1.8.1-1, 1.8.2-1
008-0066	017-6154	1-2, 1.7-1
008-0085	017-6257	1-2
008-0155	018-8920	1.8.1-1, 1.8.2-1
008-0198	018-9679	1-2, 1.6-1
008-0199	018-9680	1-2, 1.6-1, 1.7-1
008-0202	018-9681	1.6-1, 1.7-1
008-0210	019-0040	1-2
008-0211	026-0997	1-2
008-0216	026-1001	1-4
008-0218	028-0021	1-2
008-0221	028-3557	1-2
008-0242	028-3566	1-2
008-0243	029-0002	1.8.2-3
008-0265	029-6595	1-4
008-0266	030-0002	1-4
008-0307	030-0190	1-4
008-4804	030-0197	1-4
008-6133	030-0232	1-4
008-9990	030-0247	1-2
009-0002	030-1310	1-4
009-0022	030-1312	1-4
009-0309	030-1318	1-4
009-0334	030-1376	1-4
010-0017	030-1387	1-4
010-0319	030-1388	1-4
010-0323	030-1395	1.7-1
010-0327	030-1409	1-4, 1-5
010-0331	030-1412	1-4, 1.6-1, 1.7-1
010-0338	030-1413	1-4
010-0339	030-1415	1-4
010-0340	030-1423	1-4, 1-5
012-0003	030-1426	1.6-2
012-0350	030-1427	1-4
012-0352	030-1432	1.8.2-3
013-0362	030-3217	1-4
016-0001	030-3616	1-4
016-0007	030-3617	1-4

030-3939	1-4, 1.7-1	048-0097	1-2
030-4032	1-4, 1.7-1	052-0138	1.6-1, 1.7-1
030-4077	1.7-1	052-0657	1-2
030-4078	1-4, 1.7-1	052-1179	1.8.1-1, 1.8.2-1
030-4137	1-4, 1.6-1, 1.8.2-3	052-1183	1.8.1-1, 1.8.2-1
030-4313	1-4	052-1184	1-4
030-4450	1-4	057-5658	1.8.1-1, 1.8.2-1
030-4477	1.7-1	061-0223	1-2
030-4541	1.7-1	066-0013	1-2
030-4560	1-4	066-0090	1.8.2-3
030-4580	1-4	066-0091	1.8.2-3
030-4975	1-4	066-0092	1.8.2-3
030-4995	1-4	066-0093	1.8.2-3
030-4996	1-4, 1-5	066-9285	1.8.2-3
030-5004	1-4	067-0177	1-4
030-5039	1-4, 1-5	067-0191	1.8.2-2
030-5042	1-4	067-0192	1.8.2-2
030-5054	1-4	067-0283	1.6-2
030-5067	1-5	067-0319	1.8.2-3
030-5902	1-4	067-0334	1.8.1-1, 1.8.2-1
030-6718	1-4	067-0335	1.8.1-1, 1.8.2-1
030-7726	1.6-2	067-0336	1.8.1-1, 1.8.2-1
032-8852	1-5, 1.7-1	067-3162	1-4
034-1543	1.8.2-4	067-4316	1-2
034-1546	1.8.2-4	067-6331	1-4
038-0013	1.8.2-4	07000-0014	1.6-1
038-1602	1.8.2-4	07000-0134	1.7-1
039-0005	1.6-2	07000-0190	1-1
039-0014	1.7-3	07000-0288	1.6-1, 1.7-1
039-1619	1.8.2-4	07000-0546	1.8.1-1, 1.8.2-1
041-0010	1.8.2-2	07000-0547	1.8.1-1, 1.8.2-1
041-1642	1.8.1-1, 1.8.2-1	07000-0591	1.8.1-1, 1.8.2-1
041-1688	1.8.2-2	07000-0596	1.8.2-3
041-1735	1.8.2-4	07000-0609	1.8.2-3
041-1791	1.8.2-4	07000-0700	1.7-1
041-5117	1.8.2-2	07000-0701	1.7-2
041-8821	1.8.2-2	07000-0741	1.7-1
043-1827	1-2	07000-0933	1.7-1
044-0045	1.8.2-2	07000-0960	1.7-1
044-4427	1.8.2-4	07000-1056	1.8.1-1, 1.8.2-1
046-2015	1.8.2-3	07000-1114	1.7-1
046-2035	1.8.2-3	07000-1179	1.6-1

07000-1226	1.8.1-1, 1.8.2-1	07000-5906	1.9-1
07000-1227	1.8.2-4	07000-6108	1.8.1-1, 1.8.2-1
07000-1229	1.8.2-4	07000-6248	1.8.1-1, 1.8.2-1
07000-2118	1.8.1-1, 1.8.2-1	07000-6360	1.9-1
07000-2196	1-1	07000-6541	1-1
07000-2197	1.7-1	07000-6542	1.9-1
07000-2253	1.6-2	07000-6546	1-1
07000-2294	1-2	07000-7078	1-2
07000-2343	1.6-1, 1.7-1	07000-7096	1-1
07000-2345	1.7-1	07000-7125	1-4
07000-2350	1.6-1	07000-7142	1-1
07000-2394	1.6-2	07000-7188	1.7-1
07000-2408	1.6-2	07000-9651	1-2
07000-2435	1.6-2	07001-2797	1.7-2
07000-2480	1.6-1	07002-5054	1.8.1-1, 1.8.2-1
07000-2483	1.6-2	096-0075	1.6-2
07000-2494	1.6-2	096-3214	1.8.2-4
07000-3212	1.7-1	099-0414	1-5
07000-3235	1.7-1	099-0820	1.7-1
07000-3238	1.7-1	099-0837	1.7-1
07000-3249	1.6-1	099-0840	1.7-1
07000-3613	1.9-1	099-1350	1.6-1
07000-3616	1.9-2	099-1351	1.6-1
07000-4065	1.8.1-1, 1.8.2-1	099-1352	1.6-1
07000-4148	1-1	099-1353	1.6-1
07000-4149	1.8.1-1, 1.8.2-1	099-1354	1-4
07000-4249	1.8.1-1, 1.8.2-1	099-1355	1-4
07000-4539	1.8.1-1, 1.8.2-1	099-1356	1-4
07000-4540	1.8.1-1, 1.8.2-1	099-1365	1-4
07000-4544	1-2	099-1384	1-5
07000-4571	1.8.1-1, 1.8.2-1	099-1404	1.6-2
07000-4593	1.8.1-1, 1.8.2-1	099-1465	1-4
07000-4615	1.8.1-1, 1.8.2-1	099-1466	1-4
07000-4617	1.8.1-1, 1.8.2-1	099-1467	1-4
07000-4622	1.8.1-1, 1.8.2-1	099-1468	1-4
07000-4664	1.8.1-1, 1.8.2-1	099-1469	1-4
07000-4666	1.8.1-1, 1.8.2-1	099-1470	1-4
07000-4670	1.8.1-1, 1.8.2-1	099-1472	1-4
07000-4734	1.7-1	099-1478	1-4
07000-4918	1-1	099-1480	1-5
07000-5476	1.6-2	099-1488	1-5
07000-5550	1.7-3	099-1489	1-5

099-1490	1-4	528-0133	1.6-1, 1.7-1
099-1492	1-4	528-0136	1.6-1, 1.7-1
099-1493	1-4	531-4877	1.6-1, 1.7-1
099-1494	1-4	636-0170	1.6-1, 1.7-1
099-1502	1-4	657-0001	1.9-2
099-1503	1-4	657-0003	1.9-2
099-1504	1-4	701-9140	1.7-2
099-1505	1-4	701-9141	1.7-2
099-1506	1-4	715-0457	1.6-1
099-1512	1-4	715-4293	1.7-1
099-1513	1-4	715-6152	1.7-1
099-1514	1-4	724-0014	1-4
099-8011	1-5	732-7879	1-4
101-0011	1.6-2	734-0033	1.7-1
108-0176	1-2, 1.7-1	734-0044	1.6-1
108-0180	1.8.1-1, 1.8.2-1		
108-0181	1.8.1-1, 1.8.2-1		
110-0014	1-2		
125-0011	1-4		
130-0291	1.8.1-1, 1.8.2-1		
130-0292	1.8.1-1, 1.8.2-1		
143-0009	1.8.1-1, 1.8.2-1		
146-0165	1-3		
146-0167	1-3		
146-0193	1-3		
146-0302	1-3		
146-0378	1-3		
146-0738	1-3		
146-0739	1-3		
146-1049	1-3		
146-1053	1-3		
501-0171	1.8.2-4		
501-5034	1.8.2-4		
501-9149	1.7-2		
501-9153	1.6-2		
503-0013	1-4		
504-8397	1.6-1		
515-9685	1.8.1-1, 1.8.2-1		
523-9218	1.7-1		
524-0008	1-4		
524-0242	1.8.1-1, 1.8.2-1		
526-1761	1.9-2		
