

LOADER

80

10800523-643128 LOADER

10800523-643128 LOADER	1-1
701-0314 (05) MAIN BOOM CYLINDER	1-2
701-0317 (06) STICK BOOM CYLINDER	1-3
723-0078 (08) MAIN BOOM ASSEMBLY	1-4
724-0180 (04) HYDRAULIC CIRCUIT	1-5
112-0114 HYDRAULIC PUMP (ACCESSORY)	1-6
759-0050 (03) PUMP INSTALLATION KIT	1-7
722-0095 (06) HYDRAULIC TANK (OPTION)	1-8
857-0006 (02) LOADER ANCHOR KIT	1-9
889-0005 (04) ELITE DECALS KIT	1-10

712-0053 HYDRAULIC SWIVEL JOINT ASSY

712-0053 (07) HYDRAULIC SWIVEL JOINT ASSY	1.11-1
146-0005 ELECTRICAL SWIVEL	1.11-2

07000-0798 STICK BOOM ASSEMBLY

07000-0798 (05) STICK BOOM ASSEMBLY	1.12-1
07000-0700 (05) TELESCOPIC STICK BOOM CYLINDER	1.12-2
108-0135 SELECTOR VALVES	1.12-3
715-4293 (08) MALE YOKE	1.12-4

07000-0788 HEAD ASSEMBLY

07000-0788 (04) HEAD ASSEMBLY	1.13-1
110-0002 GEARBOX REDUCER	1.13-2
112-0116 HYDRAULIC MOTOR	1.13-3

724-0178 FLOOR ASSY

724-0178 (07) FLOOR ASSY	1.14-1
07000-4658 (02) RIGHT CONTROL JOYSTICK	1.14-2
07000-4660 (01) LEFT CONTROL JOYSTICK	1.14-3
108-6521 CONTROL HANDLE	1.14-4

130-0188 LEFT CONTROL

130-0188 LEFT HYDRAULIC CONTROL	1.14.5-1
130-0235 HYDRAULIC CONTROL, MECHANICAL JOYSTICK BASE ASSEMBLY	1.14.5-2

130-0256 RIGHT HYDRAULIC CONTROL

130-0256 RIGHT HYDRAULIC CONTROL	1.14.6-1
130-8442 CHECK VALVE	1.14.6-2
130-0235 HYDRAULIC CONTROL, MECHANICAL JOYSTICK BASE ASSEMBLY	1.14.6-3

724-0188 ELECTRICAL CIRCUIT

724-0188 (03) ELECTRICAL CIRCUIT	1.15-1
724-0188-2 (03) ELECTRICAL CIRCUIT	1.15-2

726-0045 COLUMN ASSY

726-0045 COLUMN ASSY	1.16-1
067-0170 (DEL) STABILIZER LOCK VALVES	1.16-2

726-0039 STABILIZER

726-0039 (01) STABILIZER	1.16.3-1
701-0166 (09) TELESCOPIC STABILIZER CYLINDER	1.16.3-2

759-0037 INSTALLATION KIT (ACCESSORY)

759-0037 (04) INSTALLATION KIT (ACCESSORY) 1.17-1

759-0040 (02) HYDRAULIC INSTALLATION KIT 1.17-2

759-0041 ELECTRICAL INSTALLATION

759-0041 (06) ELECTRICAL INSTALLATION 1.17.3-1

759-0041-1 (06) ELECTRICAL INSTALLATION 1.17.3-2

747-0028 OIL COOLER ASSY

747-0028 OIL COOLER ASSY 1.18-1


747-0014 (08) OIL COOLER ASSY 1.18-2

747-0025 (04) HYDRAULIC CIRCUIT 1.18-3

Appendix A:Pages Index A

Appendix B:Parts Index B


10800523-643128 LOADER 10800523-643128 LOADER

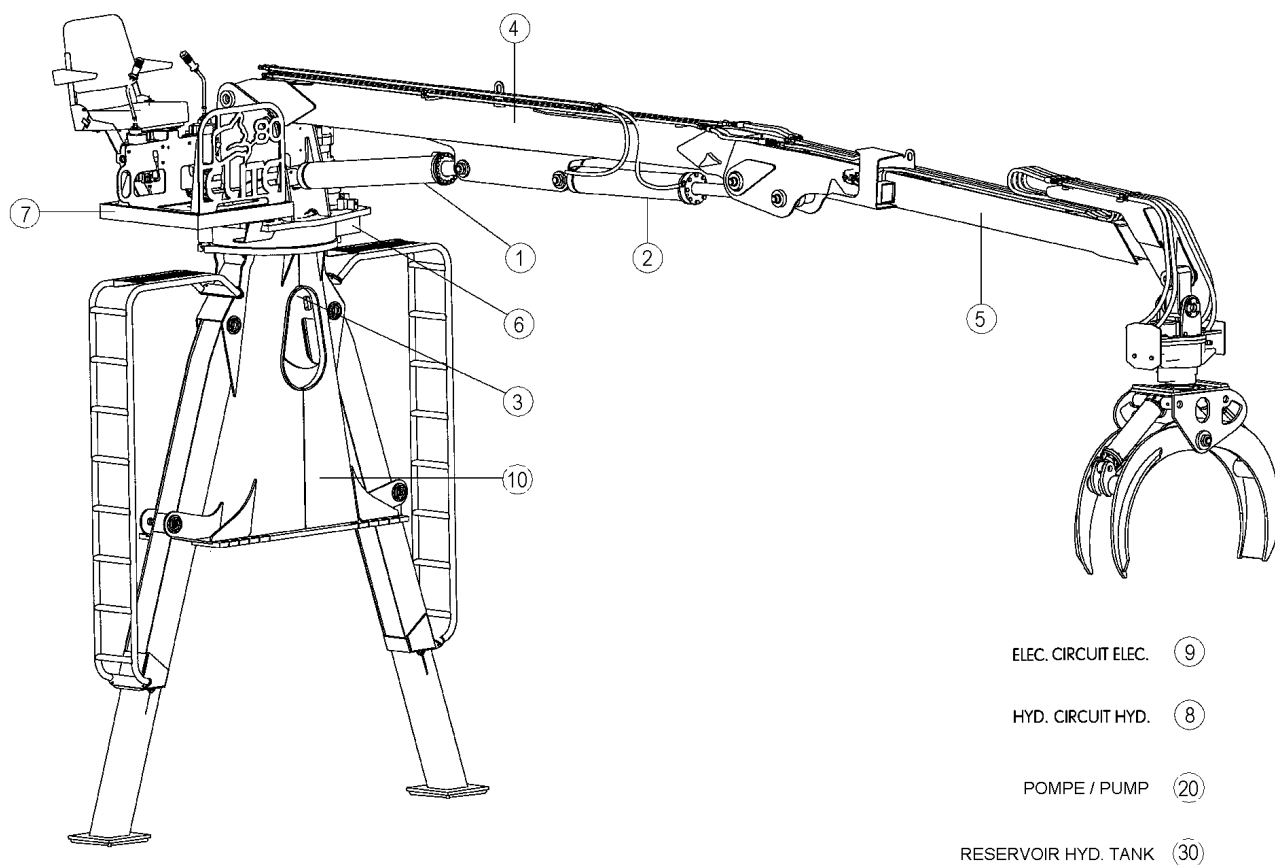

Item	Part No.	Name	Qty	Uom
1	701-0314	MAIN BOOM CYLINDER	1	EA
2	701-0317	STICK BOOM CYLINDER	1	EA
3	712-0053	HYDRAULIC SWIVEL JOINT MOUNTING 8 Ports, 4 1/2" dia.	1	EA
4	723-0078	MAIN BOOM ASSEMBLY	1	EA
5	07000-0798	STICK BOOM ASS'Y	1	EA
6	07000-0788	HEAD ASSEMBLY	1	EA
7	724-0178	FLOOR MOUNTING	1	EA
8	724-0180	HYDRAULIC CIRCUIT	1	EA
9	724-0188	ELECTRICAL CIRCUIT	1	EA
10	726-0045	COLUMN ASSEMBLY	1	EA
20	112-0114	HYDRAULIC PUMP (ACCESSORIE) Sundstrand CCW Splined shaft	1	EA
21	759-0050	PUMP INSTALLATION KIT	1	EA
22	759-0037	INSTALLATION KIT (ACCESSORIE) CH80-BC,TM ELITE	1	EA
30	722-0095	HYDRAULIC TANK (ACCESSORIE)	1	EA
40	747-0028	OIL COOLER MOUNTING 12V	1	EA

Item	Part No.	Name	Qty	Uom
50	857-0006	LOADER ANCHOR KIT (ACCESSORIE) 15" SPACER	1	EA
51	889-0005	ELITE LABELS KIT	1	EA

10800523-643128 LOADER 701-0314 (05) MAIN BOOM CYLINDER

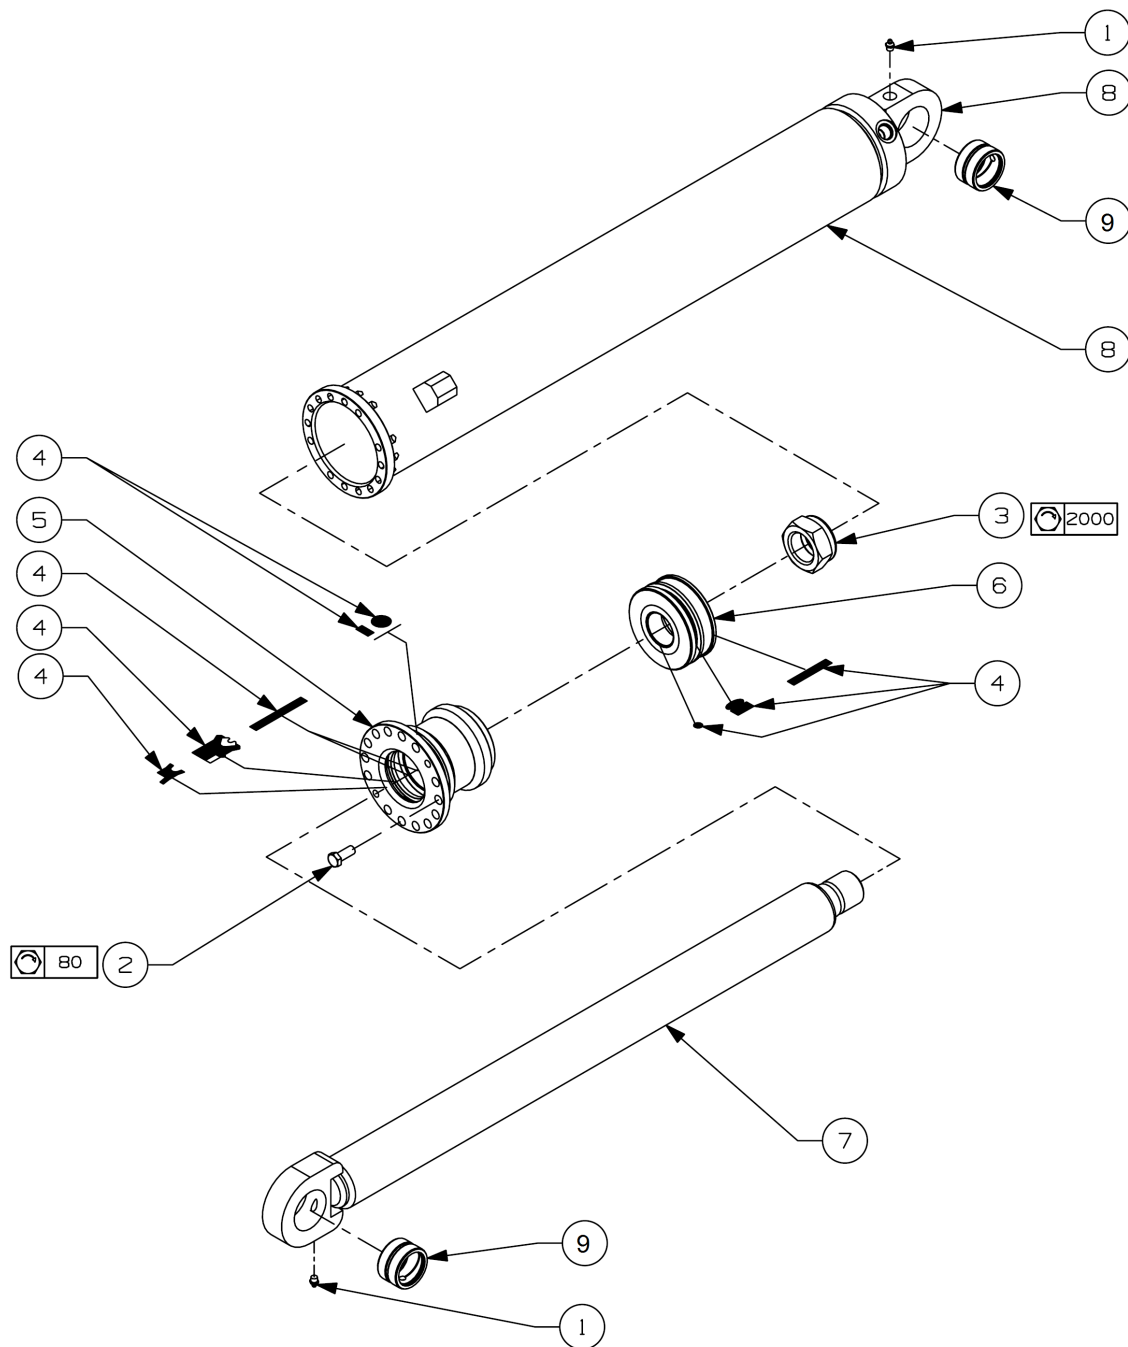

Item	Part No.	Name	Qty	Uom
1	001-0001	GREASE FITTING 1/8"NPT	2	EA
2	008-0240	BOLT 1/2"-13UNCx1 1/4"lg	14	EA
3	010-0327	NYLON LOCK NUT 2"-12UNFx1 1/2"lg	1	EA

Item	Part No.	Name	Qty	Uom
4	07001-2657	SEAL KIT	1	EA
5	501-0382	HEAD	1	EA
6	501-9623	PISTON	1	EA
7	701-0315	ROD	1	EA
8	701-0316	TUBING	1	EA
9	501-9153	BUSHING	2	EA

Comments for Page: 701-0314 (05) MAIN BOOM CYLINDER

[fr] (#2 008-0240),(#3 010-0327) Utiliser une clé dynamométrique. Tous les couples de serrage sont en lb-pi.

[en] (#2 008-0240),(#3 010-0327) Use a torque wrench. Lubricated torque values in ft-lb.


[fr] (#4 07001-2657) Les pièces comprises dans l'ensemble des joints d'étanchéité ne sont pas vendues séparément

[en] (#4 07001-2657) Parts included in the seals kit are not sold separately

[fr] (#7 701-0315),(#8 701-0316) Item 9 inclus

[en] (#7 701-0315),(#8 701-0316) Item 9 included

10800523-643128 LOADER 701-0317 (06) STICK BOOM CYLINDER

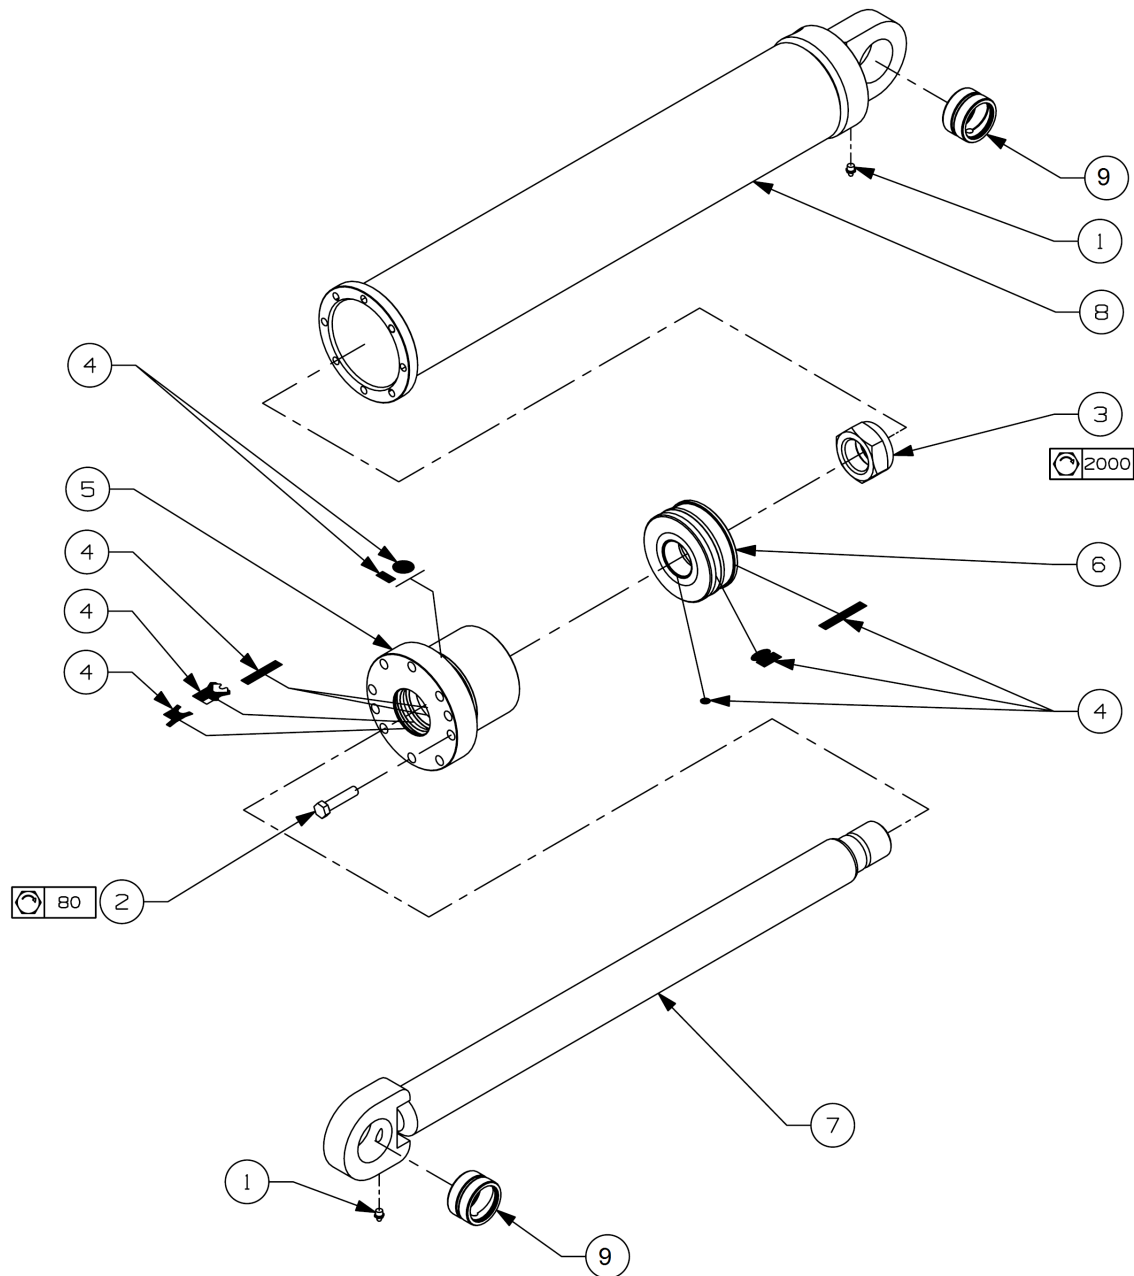

Item	Part No.	Name	Qty	Uom
1	001-0001	GREASE FITTING 1/8"NPT	2	EA
2	008-0001	BOLT 1/2-13UNC X 2 1/4"lg	8	EA
3	010-0327	NYLON LOCK NUT 2"-12UNFx1 1/2"lg	1	EA
4	07001-2648	SEAL KIT	1	EA
5	501-0379	HEAD	1	EA
6	501-9623	PISTON	1	EA

Item	Part No.	Name	Qty	Uom
7	701-0318	ROD	1	EA
8	701-0319	TUBING	1	EA
9	501-9153	BUSHING	2	EA

Comments for Page: 701-0317 (06) STICK BOOM CYLINDER

[fr] (#2 008-0001),(#3 010-0327) Utiliser une clé dynamométrique. Tous les couples de serrage sont en lb-pi.

[en] (#2 008-0001),(#3 010-0327) Use a torque wrench. Lubricated torque values in ft-lb.


[fr] (#4 07001-2648) Les pièces comprises dans l'ensemble des joints d'étanchéité ne sont pas vendues séparément

[en] (#4 07001-2648) Parts included in the seals kit are not sold separately

[fr] (#7 701-0318),(#8 701-0319) Item 9 inclus

[en] (#7 701-0318),(#8 701-0319) Item 9 included

10800523-643128 LOADER 723-0078 (08) MAIN BOOM ASSEMBLY

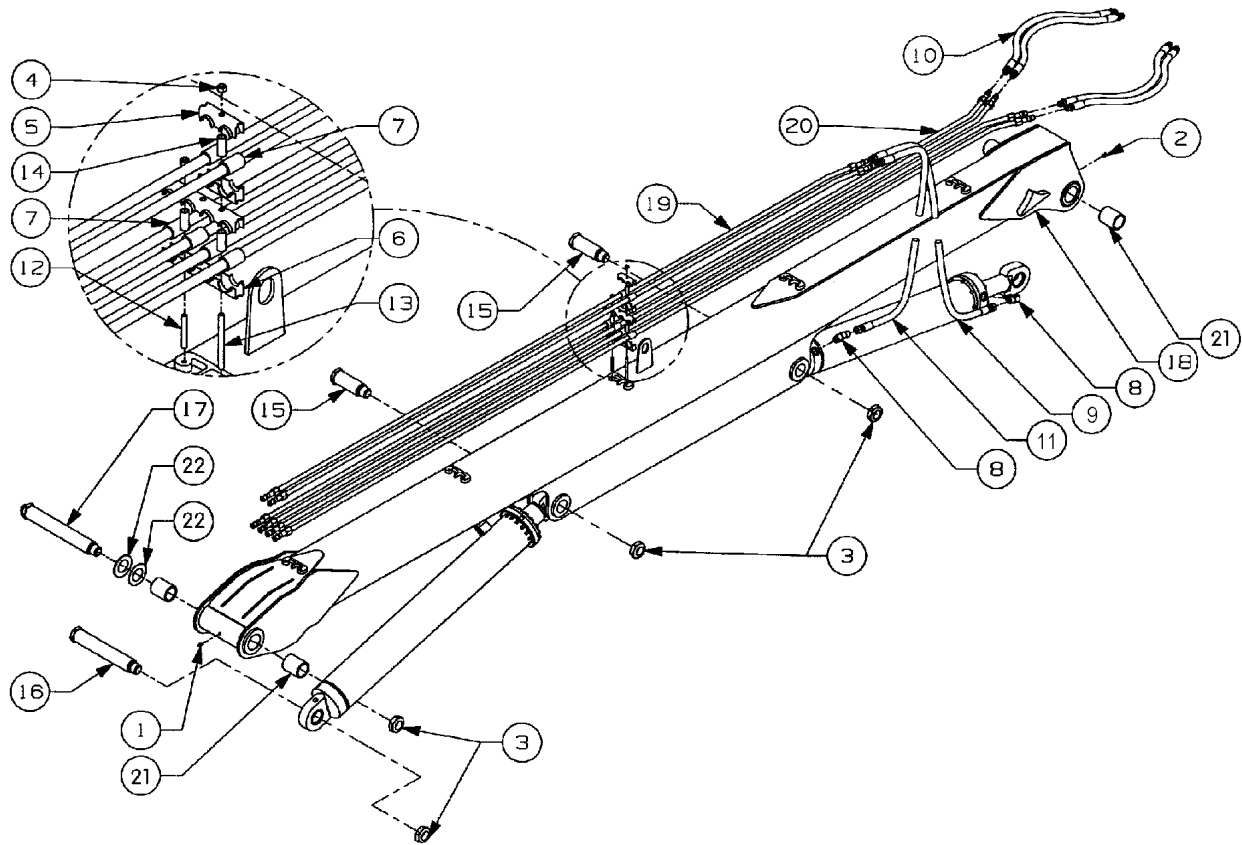

Item	Part No.	Name	Qty	Uom
1	001-0001	GREASE FITTING 1/8"NPT	1	EA
2	001-0004	GREASE FITTING 1/8"NPTx45	1	EA
3	010-0017	NYLON LOCK NUT	4	EA
4	010-0339	NYLON LOCK NUT 5/16"-18UNC	10	EA
5	018-9679	TUBING CLAMP	4	EA
6	018-9680	TUBING CLAMP	5	EA
7	018-9681	RUBBER BUSHING	28	EA
8	030-1428	90° ADJUSTABLE ADAPTOR MJIC 10 X 10 ORB	2	EA
9	099-0452	HOSE 33" (CUT LENGTH)	1	EA
10	099-0818	HOSE#8 2 WIRES 4250 PSI ST 10MJIC X 10MJIC 34"lg	4	EA
11	099-3961	HOSE 30" (CUT LENGTH)	1	EA
12	016-0001	STUD 5/16-18 x 2 1/2 lg.	6	EA
13	016-0007	STUD 5/16-18 x 4 lg.	4	EA
14	531-4877	SPACER	14	EA
15	715-0455	PIN 2"dia X 6"lg	2	EA


Item	Part No.	Name	Qty	Uom
16	715-0456	PIN 2"dia X 12 3/8"lg	1	EA
17	715-0457	PIN 2"dia X 14 1/8"lg	1	EA
18	723-0083	MAIN BOOM	1	EA
19	734-0029	HYDRAULIC TUBING	2	EA
20	734-0030	HYDRAULIC TUBING	4	EA
21	504-8397	BUSHING	4	EA
22	528-0133	SHIM 1/8"	1	EA
22	528-0136	SHIM 1/16"	1	EA

Comments for Page: 723-0078 (08) MAIN BOOM ASSEMBLY

[fr] (#22 528-0133),(#22 528-0136) Utiliser au besoin

[en] (#22 528-0133),(#22 528-0136) Use as required

10800523-643128 LOADER 724-0180 (04) HYDRAULIC CIRCUIT

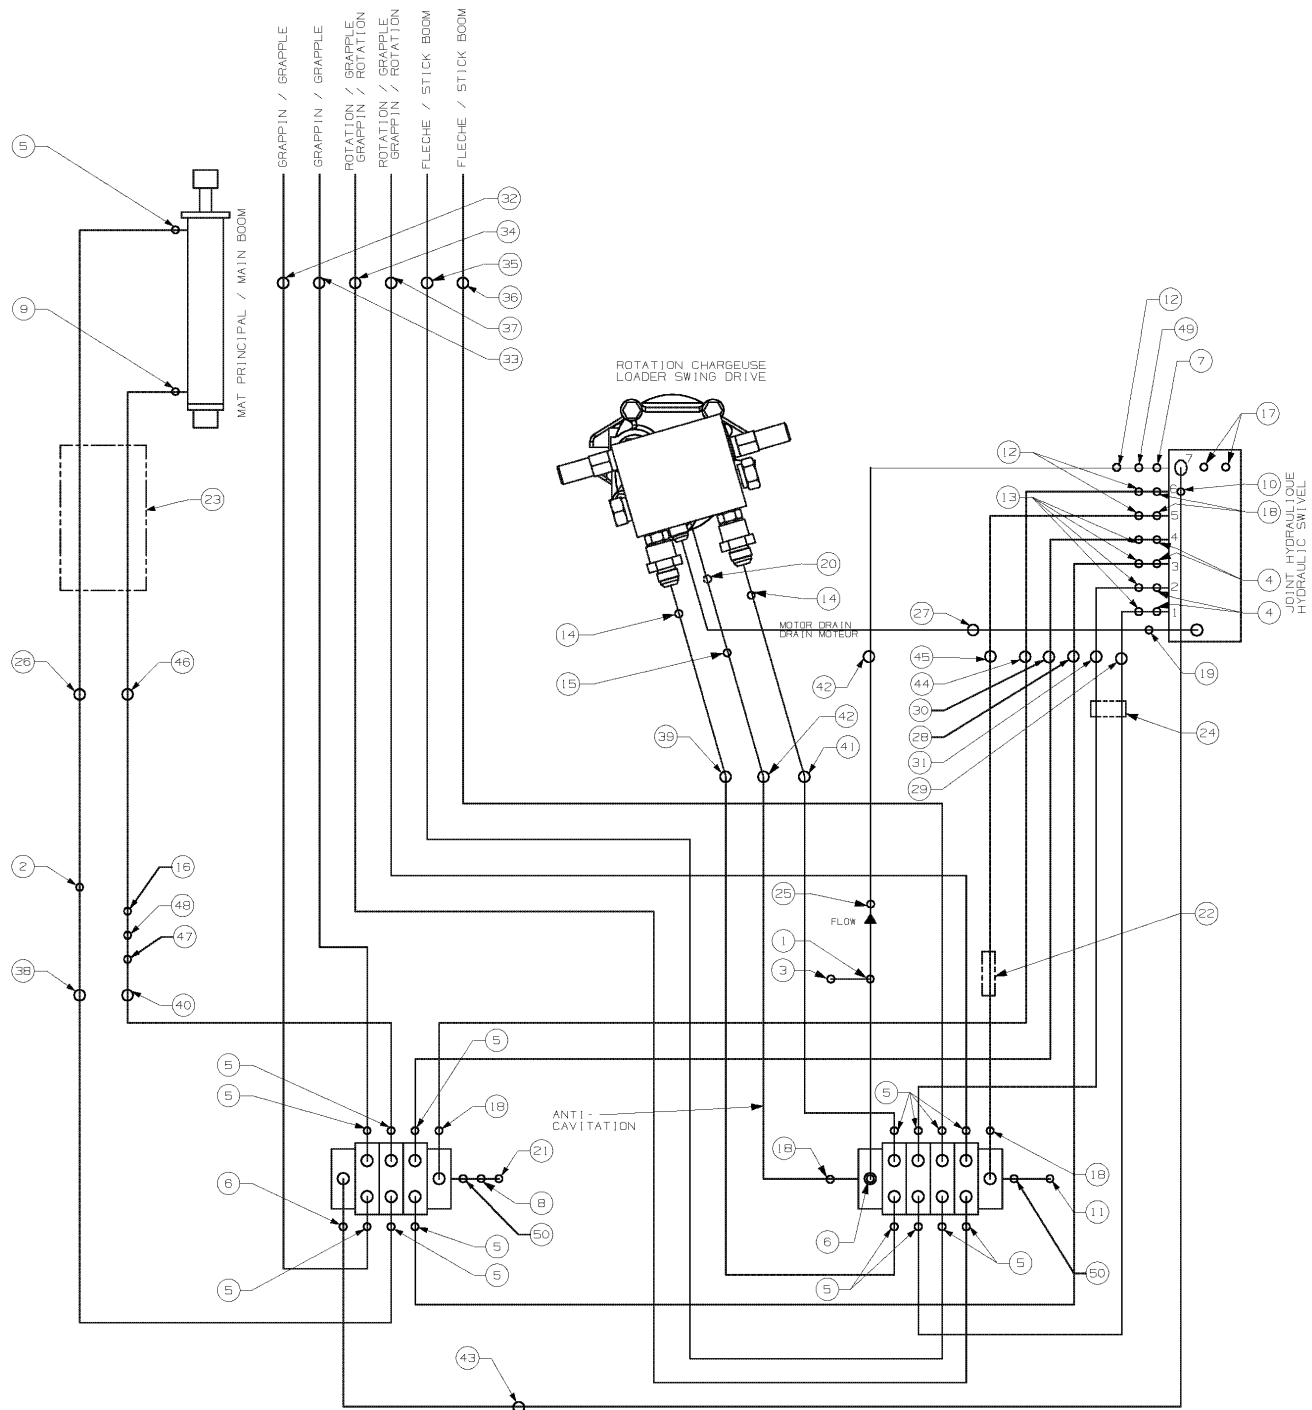

Item	Part No.	Name	Qty	Uom
1	030-0190	SWIVEL NUT UNION "T" FJIC 12	1	EA
2	030-1376	BH STRAIGHT ADAPTOR MJIC 10 X MJIC 10	1	EA
3	030-1396	MALE PLUG MJIC 12	1	EA
4	030-1412	MALE CONNECTOR MJIC 8 X 8 ORB	4	EA
5	030-1413	ORB MALE CONNECTOR MJIC 10 X 10	15	EA

Item	Part No.	Name	Qty	Uom
6	030-1415	ORB MALE CONNECTOR MJIC 12 X 12	2	EA
7	030-1416	ORB MALE CONNECTOR MJIC 12 X 16 ORB	1	EA
8	030-1421	90° ADJUSTABLE ADAPTOR MJIC 4 X 4 ORB	1	EA
9	030-1428	90° ADJUSTABLE ADAPTOR MJIC 10 X 10 ORB	1	EA
10	030-1440	45° ADJUSTABLE M / M ADAPTOR MJIC 16 X 16 ORB	1	EA
11	125-0011	PRESSURE TEST COUPLING	1	EA
12	030-3217	90° S SWIVEL TUBE ADAPTOR FJIC 12 X MJIC 12	3	EA
13	030-3615	45° SWIVEL ADAPTOR FJIC 8 X MJIC 8	4	EA
14	030-3616	45° SWIVEL ADAPTOR FJIC 10 X MJIC 10	2	EA
15	030-3617	45° SWIVEL ADAPTOR FJIC 12 X MJIC 12	1	EA
16	030-4078	ORB MALE CONNECTOR MJIC 10 X 8 ORB	1	EA
17	030-4137	ORB PLUG 8	2	EA
18	030-4277	ORB MALE CONNECTOR LG MJIC 12 X 12	5	EA
19	030-7507	ORB MALE CONNECTOR MJIC 6 X 5	1	EA
20	030-4982	ORB MALE CONNECTOR MJIC 12 X 8 ORB	1	EA
21	031-9657	PRESSURE TEST COUPLING	1	EA
22	032-8851	NYLON PROTECTIVE SLEEVE	1	FT
23	032-8852	HOSE PROTECTOR	1	FT
24	032-8852	HOSE PROTECTOR	1	FT
25	067-0177	CHECK VALVE	1	EA
26	099-0587	HOSE 50" (CUT LENGTH)	1	EA
27	099-0849	HOSE#6 2 WIRES 5000 PSI ST 8FJIC X 6FJIC90° 32"lg	1	EA
28	099-1133	HOSE#8 2 WIRES 4250 PSI ST 8FJIC X 10FJIC90° 35"lg	1	EA
29	099-1134	HOSE#8 2 WIRES 4250 PSI ST 8FJIC X 10FJIC90° 46"lg	1	EA
30	099-1135	HOSE#8 2 WIRES 4250 PSI ST 8FJIC X 10FJIC90°L 39"lg	1	EA
31	099-1136	HOSE#8 2 WIRES 4250 PSI ST 8FJIC X 10FJIC90°L 49"lg	1	EA
32	099-1137	HOSE#8 2 WIRES 4250 PSI ST 10MJIC X 10FJIC45° 59"lg	1	EA
33	099-1138	HOSE#8 2 WIRES 4250 PSI ST 10MJIC X 10FJIC45° 60"lg	1	EA
34	099-1139	HOSE#8 2 WIRES 4250 PSI ST 10MJIC X 10FJIC90° 74"lg	1	EA
35	099-9958	HOSE#8 2 WIRES 4250 PSI ST 73"lg.	1	EA
36	099-1141	HOSE#8 2 WIRES 4250 PSI ST 10MJIC X 10FJIC90°L 71"lg	1	EA
37	099-1142	HOSE#8 2 WIRES 4250 PSI ST 10MJIC X 10FJIC90°L 73"lg	1	EA
38	099-1143	HOSE#8 2 WIRES 4250 PSI ST 10FJIC X 10FJIC90° 44"lg	1	EA


Item	Part No.	Name	Qty	Uom
39	099-1144	HOSE#8 2 WIRES 4250 PSI ST 10FJIC X 10FJIC90° 60"lg	1	EA
40	099-1145	HOSE#8 2 WIRES 4250 PSI ST 10FJIC X 10FJIC90°L 45"lg	1	EA
41	099-1146	HOSE#8 2 WIRES 4250 PSI ST 10FJIC X 10FJIC90°L 61"lg	1	EA
42	099-1148	HOSE#12 2 WIRES 2250 PSI 12FJIC X 12FJIC90° 53"lg	2	EA
43	099-1149	HOSE#12 2 WIRES 2250 PSI 16FJIC X 12FJIC90° 33"lg	1	EA
44	099-1150	HOSE#12 4 WIRES 4000 PSI 12FJIC X 12FJIC90° 44"lg	1	EA
45	099-1151	HOSE#12 4 WIRES 4000 PSI 12FJIC X 12FJIC90° 61"lg	1	EA
46	099-4182	HOSE 28" (CUT LENGTH)	1	EA
47	524-0008	HYDRAULIC FITTING	1	EA
48	524-0248	RESTRICTOR	1	EA
49	576-1190	HYDRAULIC FITTING	1	EA
50	732-7879	ADAPTOR	2	EA

Comments for Page: 724-0180 (04) HYDRAULIC CIRCUIT

[fr] (#22 032-8851),(#23 032-8852),(#24 032-8852) Spécifier la longueur en pouces

[en] (#22 032-8851),(#23 032-8852),(#24 032-8852) Order by the inch


10800523-643128 LOADER 112-0114 HYDRAULIC PUMP (ACCESSORY)

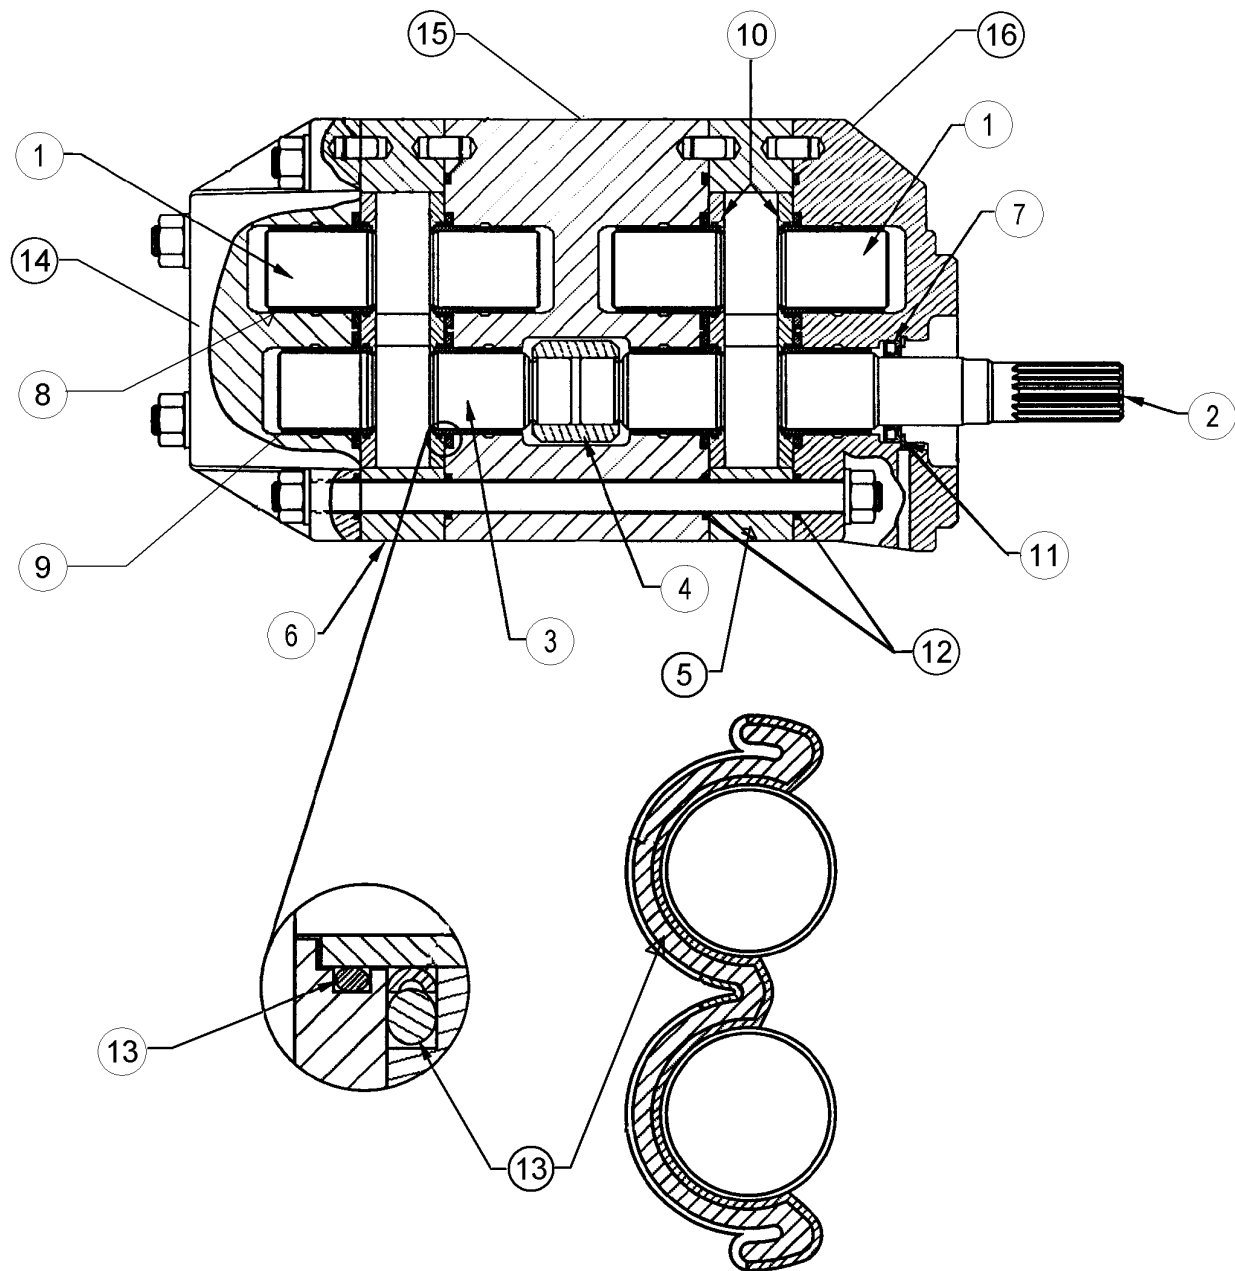

Item	Part No.	Name	Qty	Uom
1	112-0130	GEAR	2	EA
2	112-0131	SPLINED SHAFT	1	EA
3	112-0134	DRIVE SHAFT	1	EA
4	112-0135	CONNECTING SHAFT	1	EA
5	112-0136	GEAR BODY	1	EA
6	112-0136	GEAR BODY	1	EA
7	112-0140	SHAFT SEAL	1	EA
8	112-0138	LONG BEARINGS	4	EA

Item	Part No.	Name	Qty	Uom
9	112-0139	SHORT BEARING	4	EA
10	112-0155	WEAR PLATE #20099	4	EA
11	004-0031	INTERNAL RETAINING RING	1	EA
12	041-1649	O-RING HO-150	16	EA
13	112-0146	SEAL KIT	1	EA
14	112-0160	HOUSING	1	EA
15	112-0157	HOUSING	1	EA
16	112-0159	HOUSING	1	EA

10800523-643128 LOADER 759-0050 (03) PUMP INSTALLATION KIT

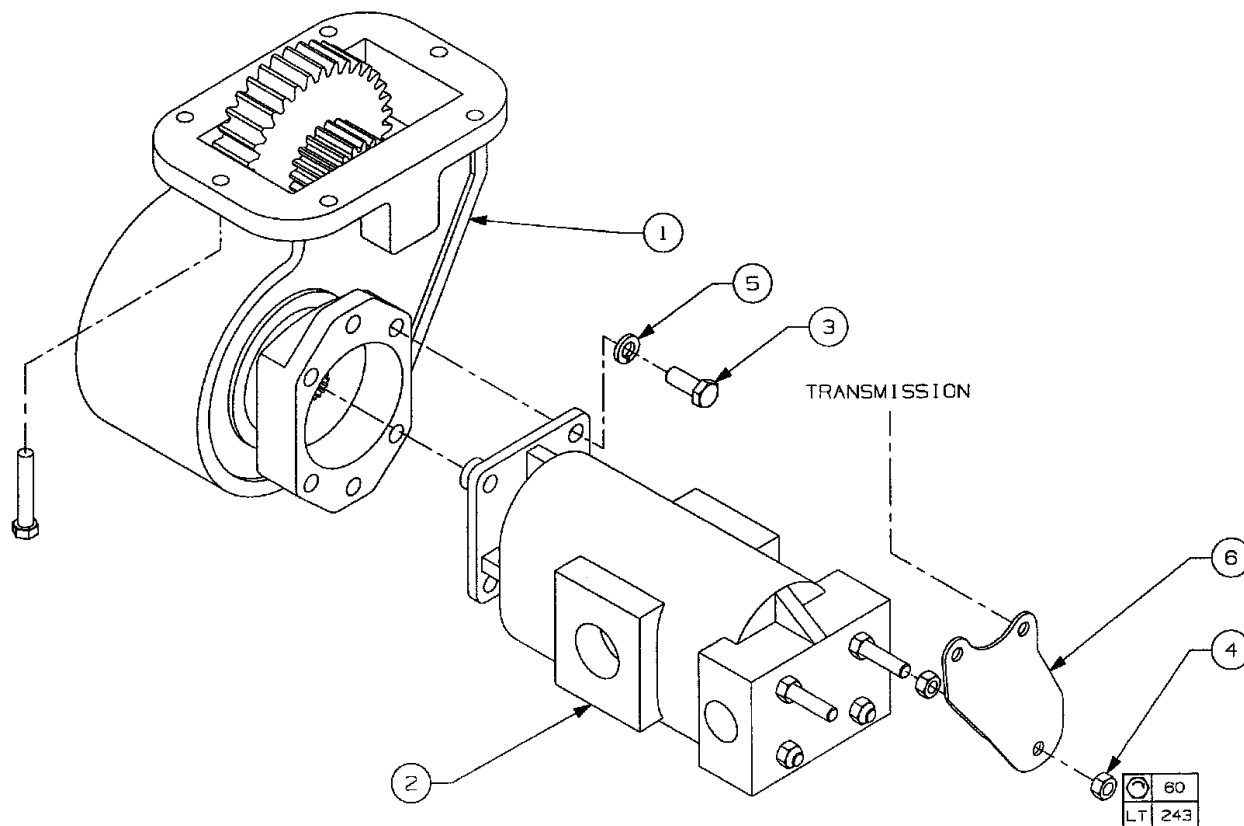


Item	Part No.	Name	Qty	Uom
1	NOPARTNUMBER	PTO	1	EA
2	NOPARTNUMBER	PUMP	1	EA
3	008-0240	BOLT 1/2"-13UNCx1 1/4"lg	4	EA
4	009-0306	NUT 7/16"-20UNF	2	EA
5	013-0366	LOCK WASHER 1/2" dia	4	EA
6	559-0021	PUMP HOLDER	1	EA

Comments for Page: 759-0050 (03) PUMP INSTALLATION KIT

[fr] (#4 009-0306) Utiliser une clé dynamométrique. Tous les couples de serrage sont en lb-pi. et lubrifiés. LT= Loctite

[en] (#4 009-0306) Use a torque wrench. Lubricated torque values in ft-lb. LT= Loctite

10800523-643128 LOADER 722-0095 (06) HYDRAULIC TANK (OPTION)

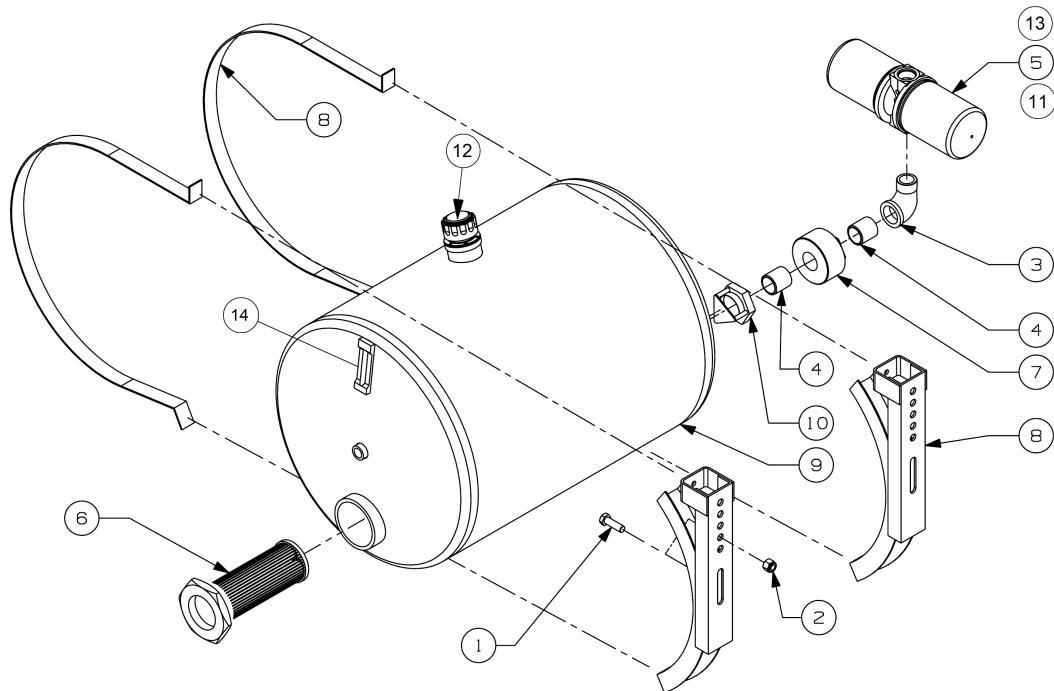


Item	Part No.	Name	Qty	Uom
1	008-0261	BOLT 5/8"-11UNCx2"lg	4	EA
2	010-8447	LOCK NUT 5 / 8 NC	4	EA
3	046-2057	ELBOW	1	EA
4	046-2079	SLEEVE	2	EA
5	066-0024	FILTER ASS'Y	1	EA
6	066-0025	STRAINER	1	EA
7	066-0027	ADAPTOR	1	EA
8	066-0042	FASTENER KIT	1	EA
9	066-0068	TANK	1	EA
10	066-6052	CHECK VALVE	1	EA
11	066-9286	DRAIN FILTER ELEMENT	2	EA
12	066-3101	BREATHER	1	EA
13	066-0017	FILTER HEAD	1	EA
14	066-0075	FLUID LEVEL INDICATOR AND THERMOMETER	1	EA

Comments for Page: 722-0095 (06) HYDRAULIC TANK (OPTION)

[fr] (#5 066-0024) Items 11,13 inclus

[en] (#5 066-0024) Items 11, 13 included

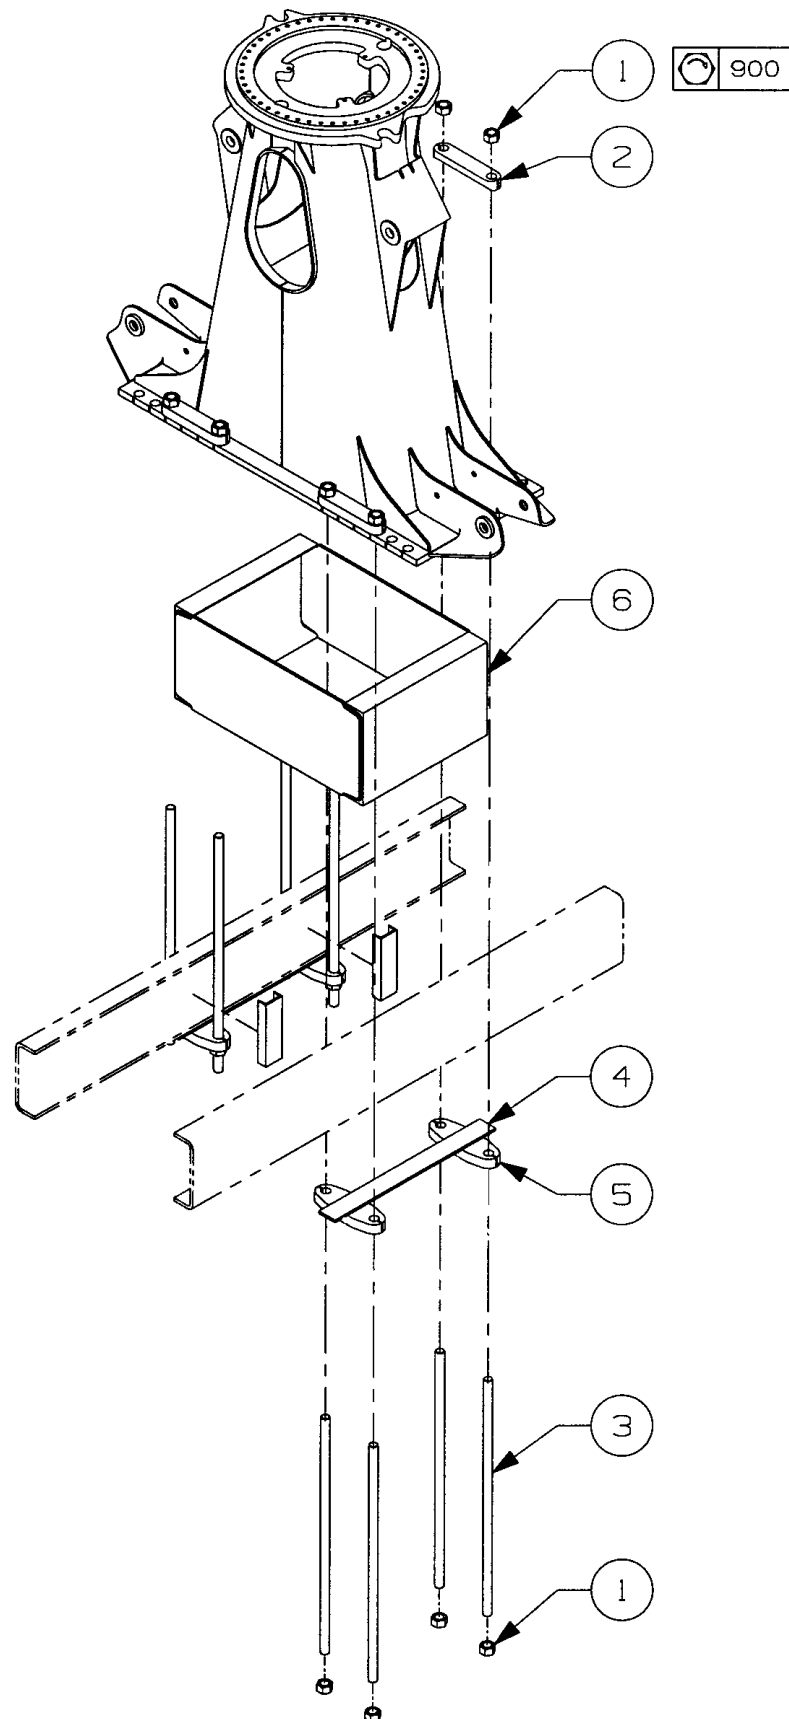


Item	Part No.	Name	Qty	Uom
1	009-0002	NUT 1 1/4"-12UNF	16	EA
2	526-1761	CLAMP	4	EA
3	559-0027	THREADED ROD	8	EA
4	657-0001	REINFORCEMENT	2	EA
5	657-0003	COLLAR	4	EA
6	726-9978	SPACER	1	EA

Comments for Page: 857-0006 (02) LOADER ANCHOR KIT

fr (#1 009-0002) Utiliser une clé dynamométrique. Tous les couples de serrage sont en lb-pi.

en (#1 009-0002) Use a torque wrench. Lubricated torque values in ft-lb

10800523-643128 LOADER 889-0005 (04) ELITE DECALS KIT

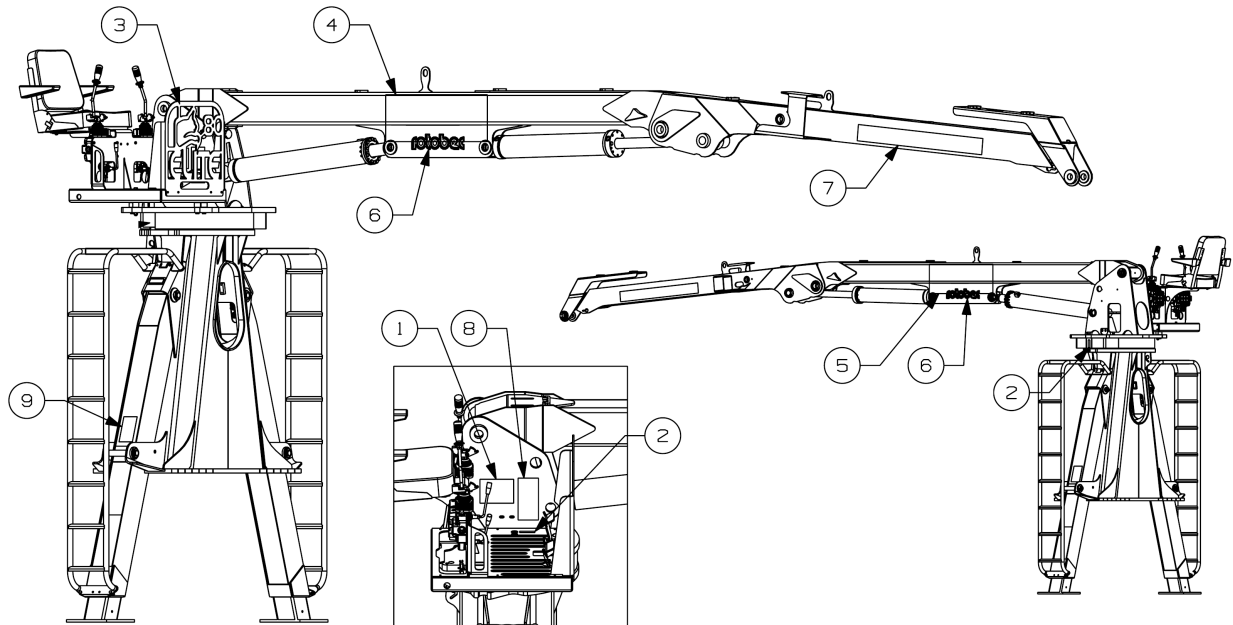


Item	Part No.	Name	Qty	Uom
1	146-0179	FUNCTION LABEL	1	EA
2	146-0738	GREASE ON LEFT LABEL	2	EA
3	146-0918	80 ELITE GRILLE LABEL	1	EA
4	146-0949	80ELITE MAIN BOOM RIGHT SIDE LABEL	1	EA
5	146-0950	80ELITE MAIN BOOM LEFT SIDE LABEL	1	EA
6	146-0989	LABEL ROTOBEC	2	EA
7	146-1049	WARNING STAY CLEAR LABEL	2	EA
8	146-1051	DANGER, WARNING GROUPED LABEL	1	EA
9	146-1053	WARNING - GROUPED TOGETHER LABEL	2	EA

Comments for Page: 889-0005 (04) ELITE DECALS KIT

[fr] (#1 146-0189),(#2 146-0738) Les autocollants ne sont pas vendu séparément

[en] (#1 146-0189),(#2 146-0738) Sticker are not sold separately

712-0053 HYDRAULIC SWIVEL JOINT ASSY 712-0053 (07) HYDRAULIC SWIVEL JOINT ASSY

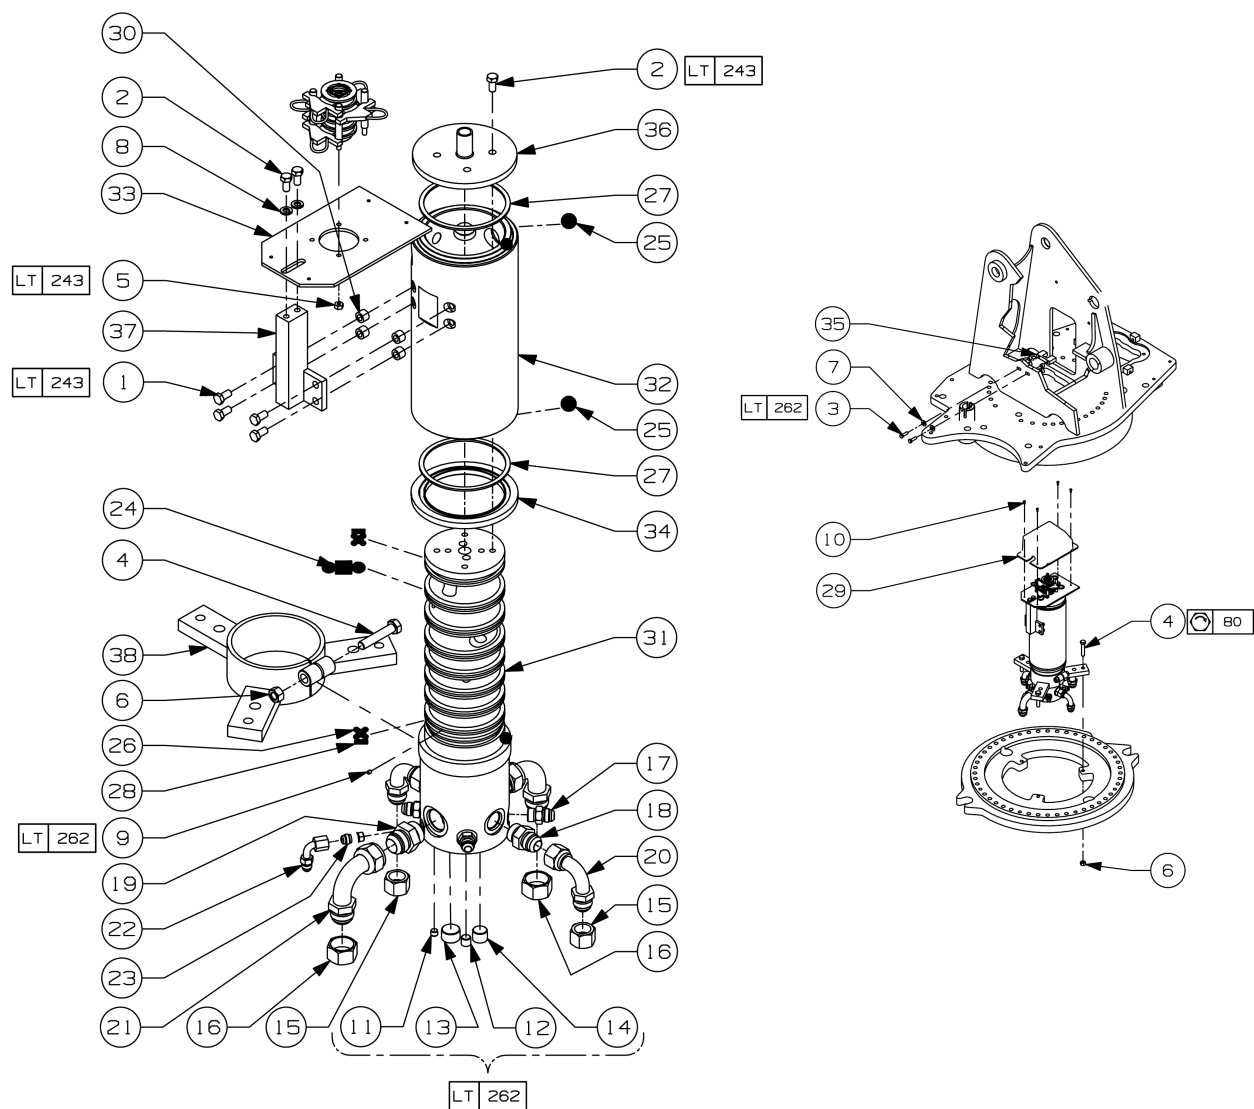

Item	Part No.	Name	Qty	Uom
1	008-0103	BOLT 3/8"-24UNFx3/4"lg	4	EA
2	008-0216	BOLT 3/8"-16UNC x 3/4" lg	6	EA
3	008-0218	BOLT 3 / 8 X 1 1 / 4"lg	2	EA
4	008-0243	BOLT 1/2"-13UNCx2 1/2"lg	4	EA
5	009-0328	NUT 1/4"-20UNC	4	EA
6	009-0332	NUT 1/2"-13UNC	4	EA
7	012-0352	FLAT WASHER 3/8"dia	2	EA
8	013-0364	LOCK WASHER 3/8" dia	2	EA
9	017-7582	HEX. SOCKET SET SCREW 10-32UNFx3/16"lg	1	EA


Item	Part No.	Name	Qty	Uom
10	020-0077	MACHINE SCREW	4	EA
11	026-1016	PLUG 1/8 NPT	1	EA
12	026-1017	PLUG 1/4 NPT	4	EA
13	026-3016	PLUG 3/4 NPT	2	EA
14	026-3491	PLUG 1/2 NPT	2	EA
15	030-1388	CAP FJIC 12	2	EA
16	030-1389	CAP FJIC 16	2	EA
17	030-1412	MALE CONNECTOR MJIC 8 X 8 ORB	4	EA
18	030-1415	ORB MALE CONNECTOR MJIC 12 X 12	2	EA
19	030-1419	ORB MALE CONNECTOR MJIC 16 X 16	2	EA
20	030-3217	90° S SWIVEL TUBE ADAPTOR FJIC 12 X MJIC 12	2	EA
21	030-3218	90° S SWIVEL TUBE ADAPTOR FJIC 16 X MJIC 16	2	EA
22	030-4996	90° S SWIVEL TUBE ADAPTOR FJIC 6 X MJIC 6	1	EA
23	030-7507	ORB MALE CONNECTOR MJIC 6 X 5	1	EA
24	040-1634	PISTON RING	7	EA
25	041-7974	O-RING	2	EA
26	042-6629	QUAD-X SEAL	2	EA
27	044-1976	BACKUP RING	2	EA
28	044-3599	BACKUP RING	2	EA
29	054-0018	ELECTRICAL SWIVEL GUARD	1	EA
30	07003-9481	WASHER	4	EA
31	512-0074	HYDRAULIC SWIVEL SHAFT	1	EA
32	512-0075	HYDRAULIC SWIVEL BARREL	1	EA
33	512-0179	ELECTRICAL SWIVEL HOLDER	1	EA
34	512-4987	RING	1	EA
35	524-0204	HYDRAULIC SWIVEL LOCK	1	EA
36	712-0175	END PLATE	1	EA
37	712-0176	HYDRAULIC SWIVEL LOCK	1	EA
38	724-0108	CLAMP	1	EA
39	098-6895	SEAL KIT	1	EA

Comments for Page: 712-0053 (07) HYDRAULIC SWIVEL JOINT ASSY

[fr] (#1 008-0103),(#2 008-0216),(#3 008-0218),(#5 009-0328),(#9 017-7582),(#11 026-1016),(#12 026-1017),(#13 026-

3016),(#14 026-3491) Utilisé du "Loctite" LT= Loctite

[en] (#1 008-0103),(#2 008-0216),(#3 008-0218),(#5 009-0328),(#9 017-7582),(#11 026-1016),(#12 026-1017),(#13 026-3016),(#14 026-3491) Use "Loctite" LT= Loctite

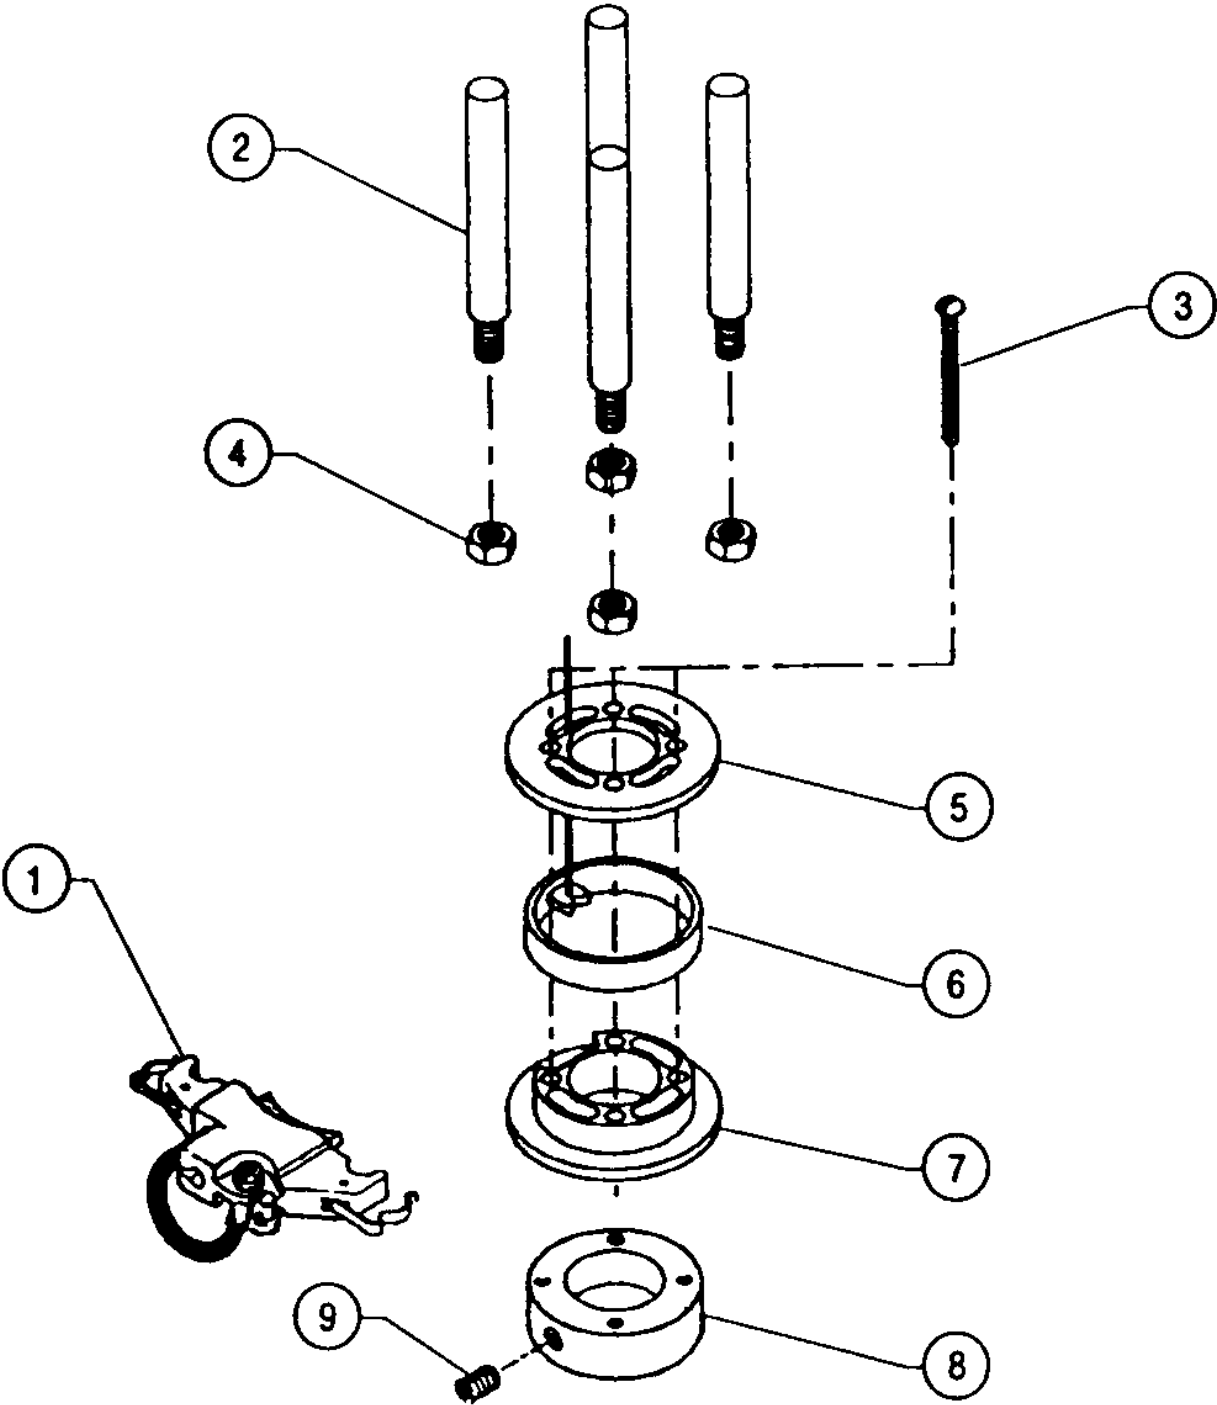

Item	Part No.	Name	Qty	Uom
0	052-6385	ADDITIONAL CENTER RINGS (1 section)	1	EA
0	NOPARTNUMBER	null		EA
0	052-6062	ELECTRICAL SWIVEL SEAL (1 section)	1	EA
0	052-2202	ELECTRICAL SWIVEL SEAL (2 sections)	1	EA

Item	Part No.	Name	Qty	Uom
0	052-3478	ELECTRICAL SWIVEL SEAL (3 sections)	1	EA
0	052-6391	ELECTRICAL SWIVEL SEAL (4 sections)	1	EA
0	052-6392	ELECTRICAL SWIVEL SEAL (5 SECTIONS)	1	EA
0	052-0668	ELECTRICAL SWIVEL SEAL (6 sections)	1	EA
1	052-3482	COPPER RING BRUSH	X	EA
2	052-3483	ROD	4	EA
2	528-0456	ROD	4	EA
3	020-0735	STOVE BOLT 6 - 32 UNC 3 / 4	4	EA
3	020-6388	SQUARE SOCKET OVAL HEAD MACHINE SCREW #6-32UNCx1 1/4"lg (2 sections)	4	EA
3	020-0737	SQUARE SOCKET OVAL HEAD MACHINE SCREW #6-32UNCx1 1/2"lg (3 sections)	4	EA
3	020-6389	SQUARE SOCKET OVAL HEAD MACHINE SCREW #6-32UNCx2"lg (4 sections)	4	EA
3	020-6390	MACHINE SCREW #6-32UNCx2 1/2"lg 5 sections	4	EA
4	009-0328	NUT 1/4"-20UNC	4	EA
5	528-8680	END WASHER	1	EA
6	052-0404	COPPER CONDUCTOR RING	X	EA
7	052-6423	INSULATING RING	X	EA
8	528-6837	RING	1	EA
9	017-4864	HEX. SOCKET SET SCREW 5/16"-18UNCx1/4"lg	1	EA

Comments for Page: 146-0005 ELECTRICAL SWIVEL

[fr] (#0 052-6385) Items 1,6,7 inclus

[en] (#0 052-6385) Items 1,6,7 included

[fr] (#0 052-6385) Doubler la quantité au besoin

[en] (#0 052-6385) Double quantity as needed

[fr] (#0 052-6062),(#0 052-2202),(#0 052-3478),(#0 052-6391),(#0 052-6392),(#0 052-0668) Items 1-9 inclus

[en] (#0 052-6062),(#0 052-2202),(#0 052-3478),(#0 052-6391),(#0 052-6392),(#0 052-0668) Items 1-9 included


[fr] (#1 052-3482),(#6 052-0404),(#7 052-6423) Quantité de 1 par section

[en] (#1 052-3482),(#6 052-0404),(#7 052-6423) Quantity of 1 per section

[fr] (#2 052-3483),(#2 528-0456) Longueur totale 3"

[en] (#2 052-3483),(#2 528-0456) 3" overall length

07000-0798 STICK BOOM ASSEMBLY 07000-0798 (05) STICK BOOM ASSEMBLY

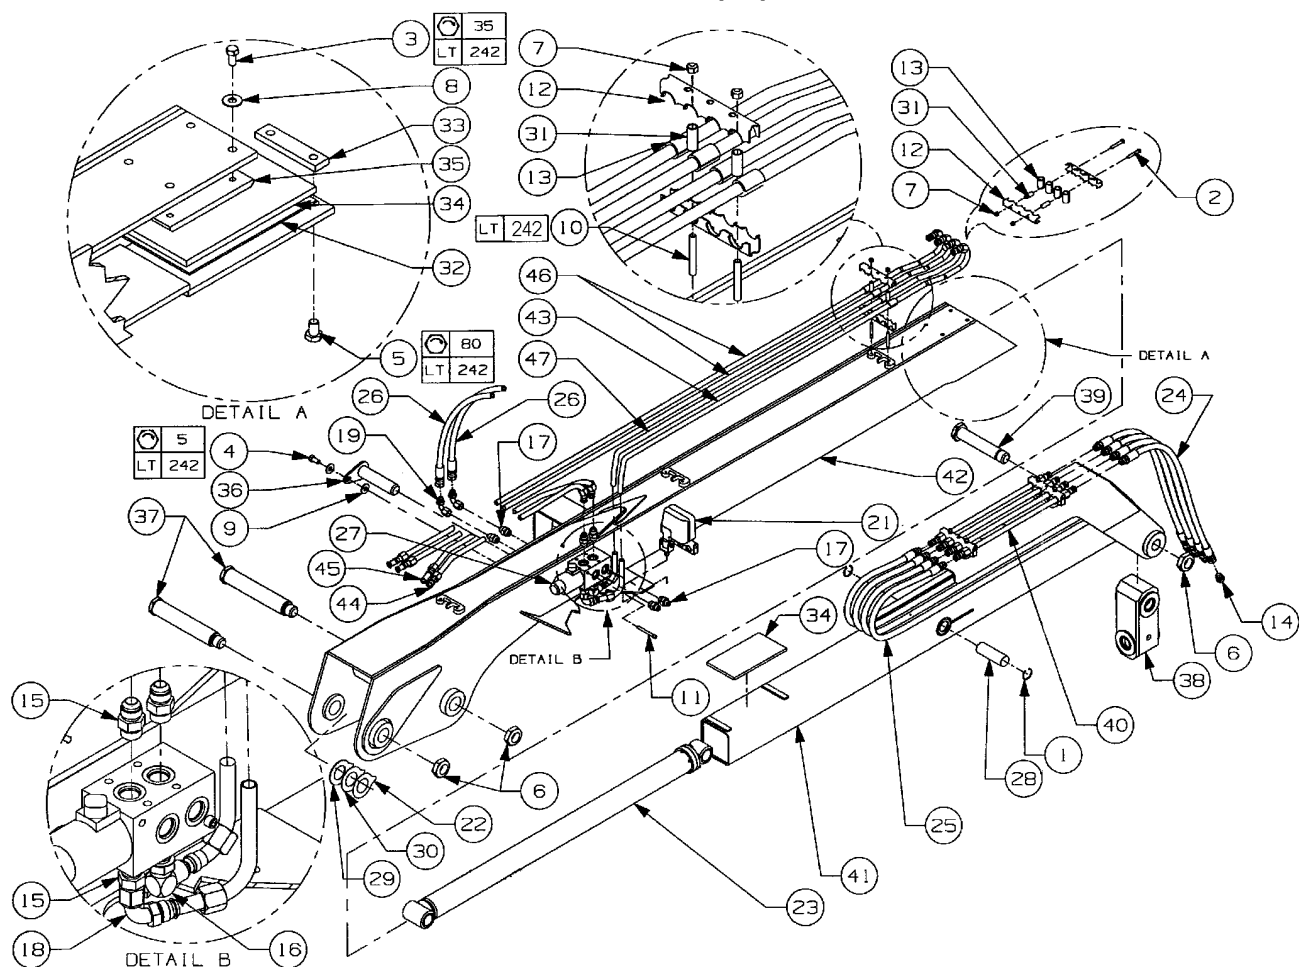

Item	Part No.	Name	Qty	Uom
1	004-0031	INTERNAL RETAINING RING	2	EA
2	008-0210	BOLT 5/16"-18UNCx2"lg	2	EA
3	008-0216	BOLT 3/8"-16UNC x 3/4" lg	4	EA
4	008-0239	BOLT 1/2"-13UNC x 1"lg	1	EA
5	008-6133	BOLT 1/2"-13 UNCx3/4"lg	2	EA
6	010-0017	NYLON LOCK NUT	3	EA
7	010-0339	NYLON LOCK NUT 5/16"-18UNC	12	EA
8	012-0352	FLAT WASHER 3/8"dia	4	EA
9	012-0354	WASHER FLAT PLATE 1/2" dia.	2	EA
10	016-0001	STUD 5/16-18 x 2 1/2 lg.	10	EA
11	017-6154	HEX. SOCKET HEAD CAP SCREW 5/16"-18UNC X 3"lg	2	EA
12	018-9680	TUBING CLAMP	6	EA
13	018-9681	RUBBER BUSHING	24	EA
14	030-1395	HYDRAULIC FITTING	4	EA

Item	Part No.	Name	Qty	Uom
15	030-1413	ORB MALE CONNECTOR MJIC 10 X 10	3	EA
16	030-1428	90° ADJUSTABLE ADAPTOR MJIC 10 X 10 ORB	1	EA
17	030-3939	ORB MALE CONNECTOR MJIC 8 X 10 ORB	4	EA
18	030-4032	90° S SWIVEL TUBE ADAPTOR FJIC 10 X MJIC 10	1	EA
19	030-4541	90° S SWIVEL TUBE ADAPTOR FJIC 8 X MJIC 8	2	EA
21	052-0884	BOOMS LIGHTS 12V	2	EA
22	07000-0288	SHIM 1/32"	2	EA
23	07000-0700	TELESCOPIC STICK BOOM CYLINDER	1	EA
24	099-0820	HOSE 46" (CUT LENGTH)	4	EA
25	099-0837	HOSE 38" (CUT LENGTH)	4	EA
26	099-0840	HOSE 21" (CUT LENGTH)	2	EA
27	108-0135	SELECTOR VALVES 12V	1	EA
28	515-0475	PIN	1	EA
29	528-0133	SHIM 1/8"	2	EA
30	528-0136	SHIM 1/16"	2	EA
31	531-4877	SPACER	12	EA
32	595-0061	SPACER	1	EA
33	595-0063	STOPPER	1	EA
34	595-0064	TEFLON WEAR PLATE	2	EA
35	595-0072	FRICTION PLATE	1	EA
36	715-0403	PIN 1 1/2"dia. X 6 3/16"lg	1	EA
37	715-0454	PIN 2"dia. X 11 5/8"lg	2	EA
38	715-4293	MALE YOKE	1	EA
39	715-6152	PIN 1 1/2"dia. X 8 1/4"lg	1	EA
40	734-0033	HYDRAULIC TUBING	4	EA
41	795-0018	TELESCOPING EXTENSION	1	EA
42	795-0020	STICK BOOM	1	EA
43	795-0026	HYDRAULIC TUBING	1	EA
44	795-0027	HYDRAULIC TUBING	1	EA
45	795-0028	HYDRAULIC TUBING	1	EA
46	795-0029	HYDRAULIC TUBING	2	EA
47	795-0033	HYDRAULIC TUBING	1	EA

[fr] (#3 008-0216),(#4 008-0239),(#5 008-6133) Utiliser une clé dynamométrique. Tous les couples de serrage sont en lb-pi. et lubrifiés. LT= Loctite

[en] (#3 008-0216),(#4 008-0239),(#5 008-6133) Use a torque wrench. Lubricated torque values in ft-lb. LT= Loctite


[fr] (#6 010-0004) Utiliser une clé dynamométrique. Tous les couples de serrage sont en lb-pi.

[en] (#6 010-0004) Use a torque wrench. Lubricated torque values in ft-lb.

[fr] (#10 016-0001) Utilisé du "Loctite" LT= Loctite

[en] (#10 016-0001) Use "Loctite" LT= Loctite

07000-0798 STICK BOOM ASSEMBLY 07000-0700 (05) TELESCOPIC STICK BOOM CYLINDER

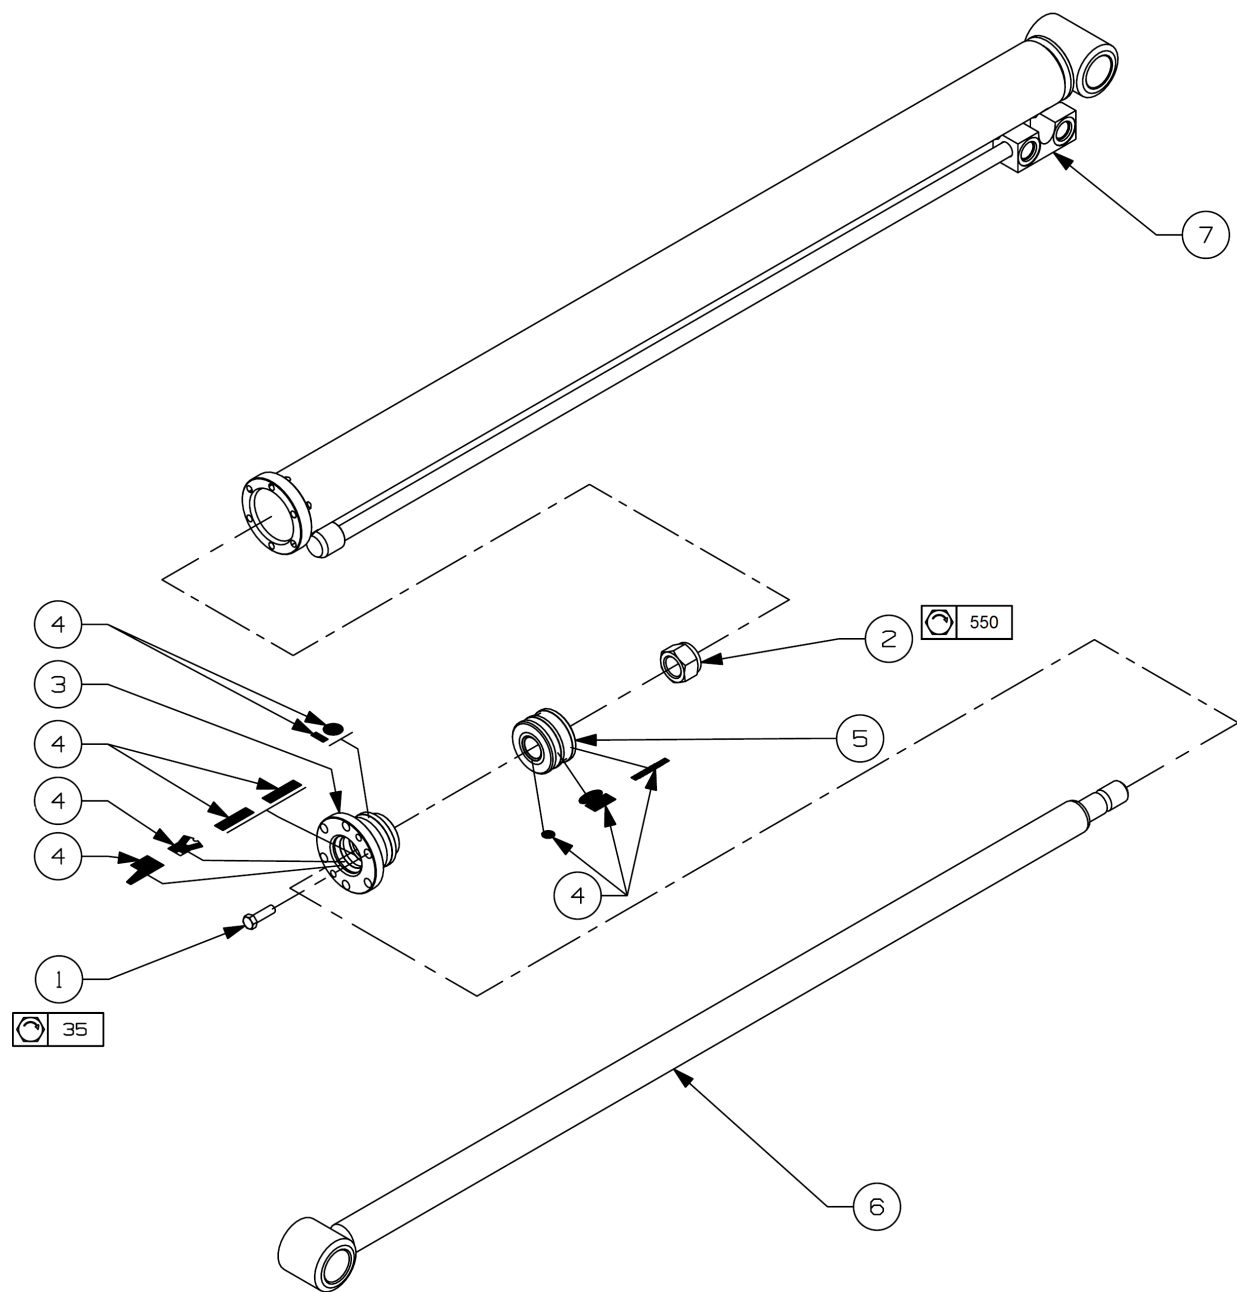


Item	Part No.	Name	Qty	Uom
1	008-0218	BOLT 3 / 8 X 1 1 / 4"lg	6	EA
2	010-0331	NYLON LOCK NUT 1"-14UNSx1 1/16" lg	1	EA
3	07000-0701	HEAD	1	EA
4	07001-2797	SEAL KIT	1	EA
5	501-9149	PISTON	1	EA
6	701-9140	ROD	1	EA
7	701-9141	TUBING	1	EA

[fr] (#1 008-0218),(#2 010-0331) Utiliser une clé dynamométrique. Tous les couples de serrage sont en lb-pi.

[en] (#1 008-0218),(#2 010-0331) Use a torque wrench. Lubricated torque values in ft-lb.

[fr] (#4 07001-2797) Les pièces comprises dans l'ensemble des joints d'étanchéité ne sont pas vendues séparément

[en] (#4 07001-2797) Parts included in the seals kit are not sold separately

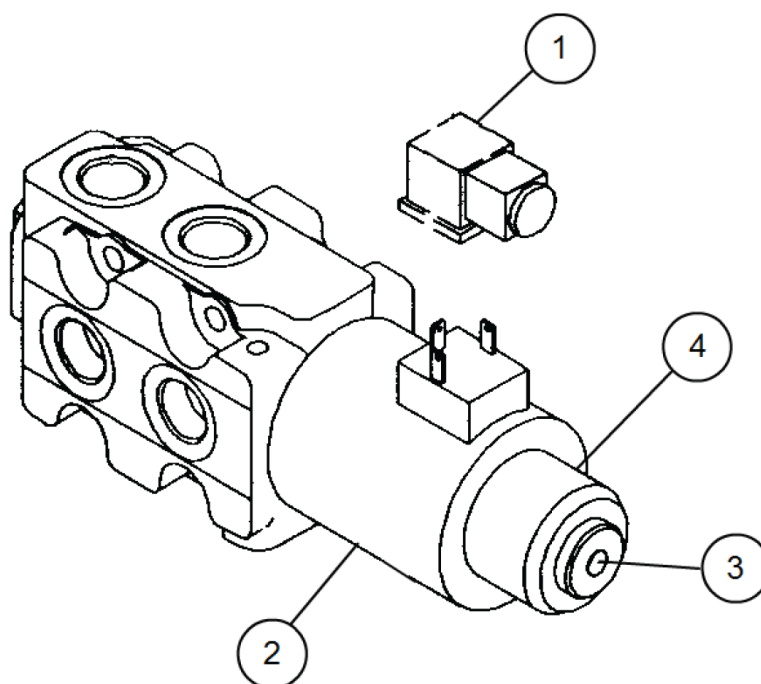


Item	Part No.	Name	Qty	Uom
1	108-6872	CONNECTOR	1	EA
2	108-0141	COIL 12 VDC	1	EA
3	108-0140	TUBING ASS'Y	1	EA
4	108-0202	NUT	1	EA

Comments for Page: 108-0135 SELECTOR VALVES

[fr] (#1 108-6872) Item non-inclus avec cet assemblage


[en] (#1 108-6872) Item not included with this assembly

07000-0798 STICK BOOM ASSEMBLY 715-4293 (08) MALE YOKE

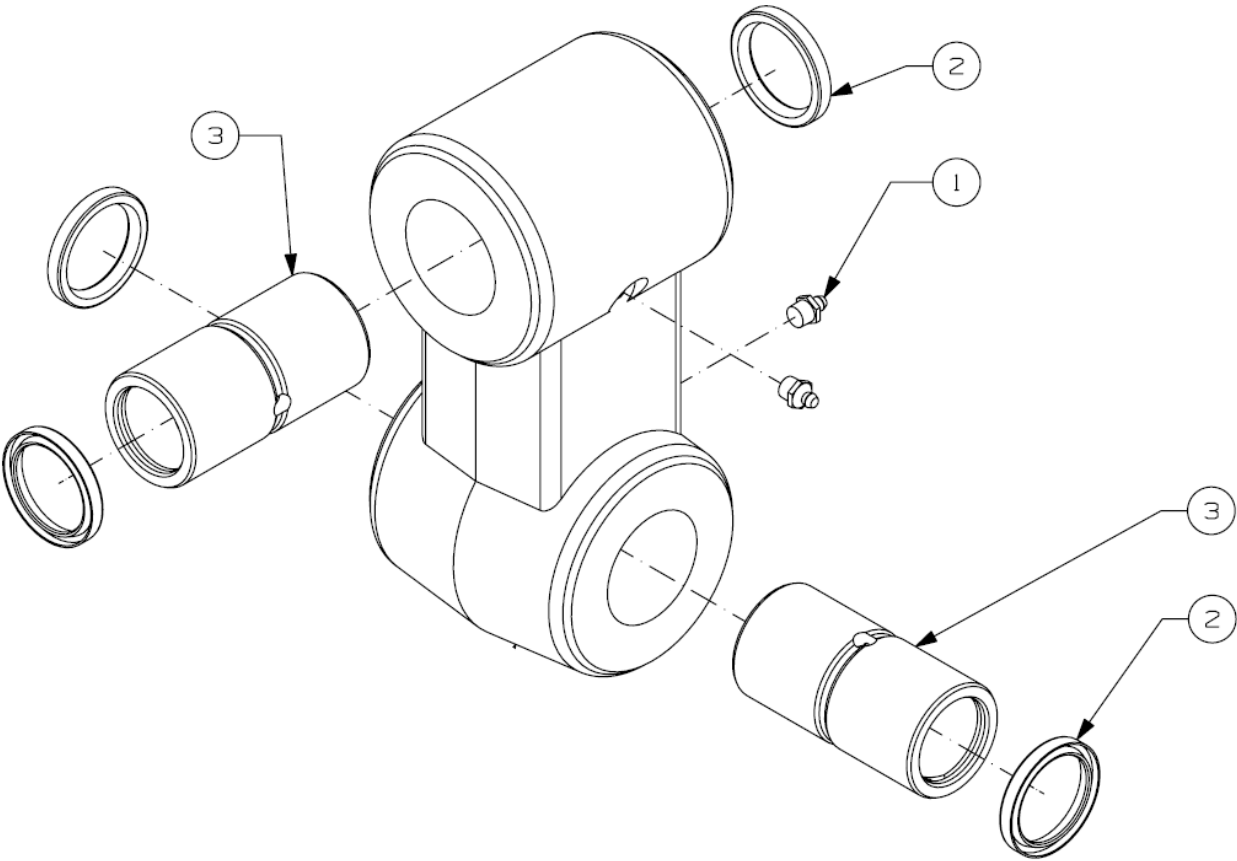

Item	Part No.	Name	Qty	Uom
1	001-0001	GREASE FITTING 1/8"NPT	2	EA
2	039-0014	WIPER SEAL 1 1/2"	4	EA
3	07000-5550	BUSHING	2	EA

07000-0788 HEAD ASSEMBLY 07000-0788 (04) HEAD ASSEMBLY

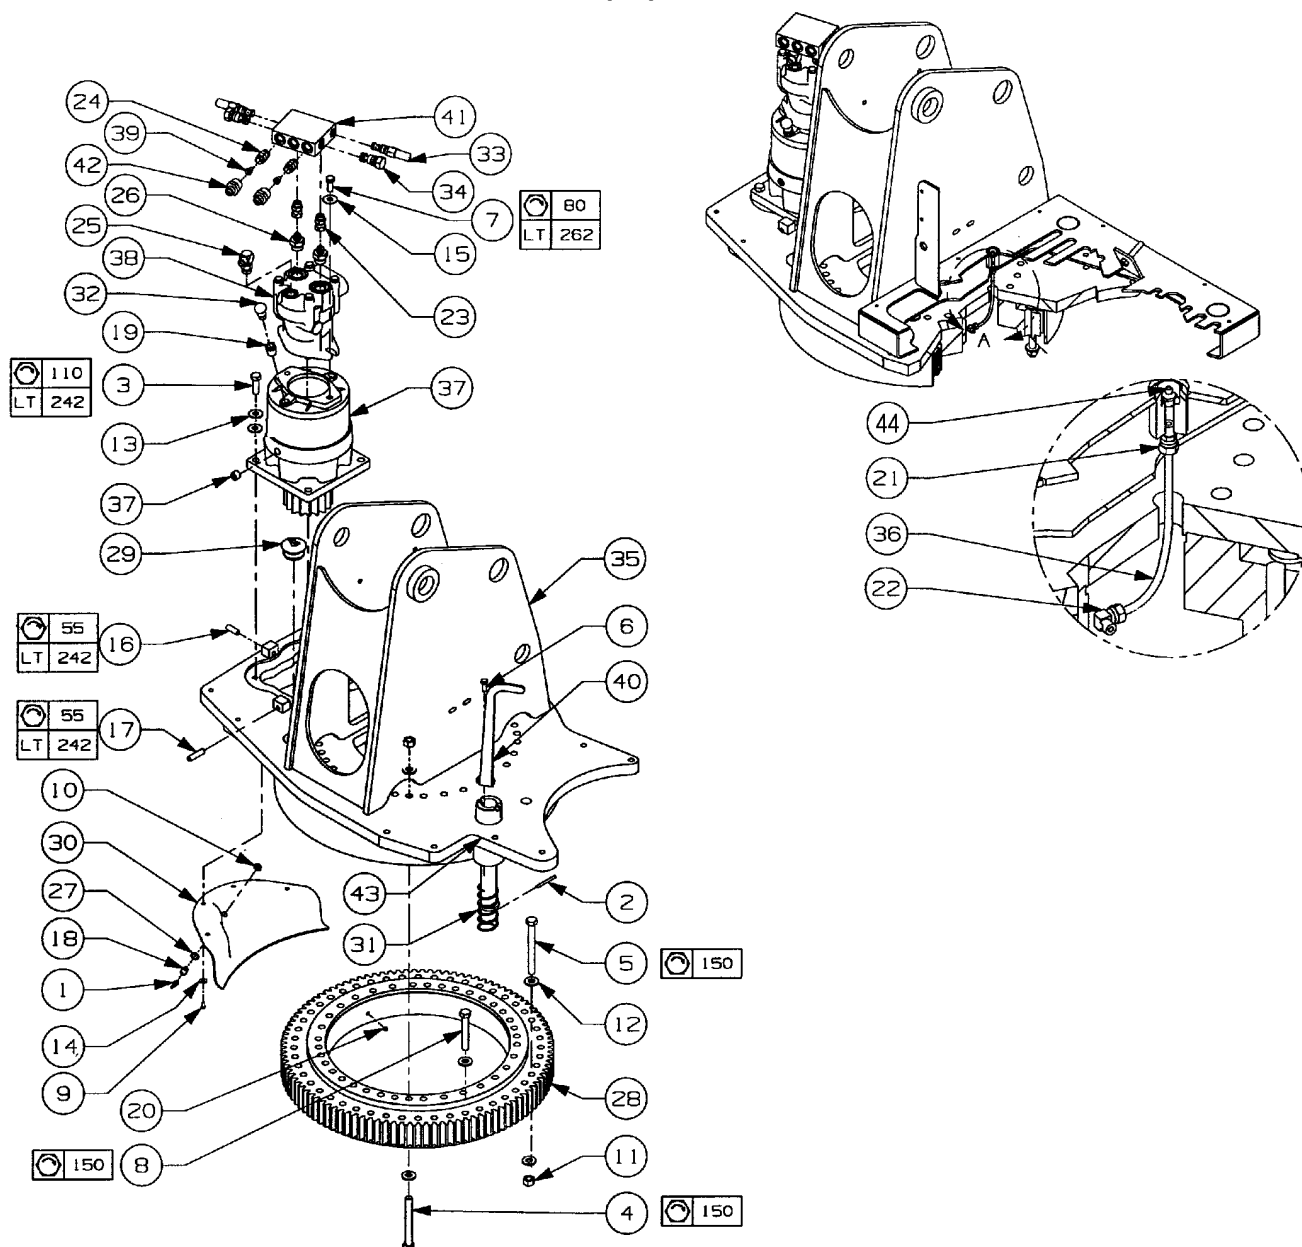

Item	Part No.	Name	Qty	Uom
1	001-0004	GREASE FITTING 1/8"NPTx45	1	EA
2	003-0006	COILED SPRING PIN	1	EA
3	008-0059	BOLT 9/16"-12UNC X 1 3/4"lg	4	EA
4	008-0155	BOLT 5/8"-18UNFx5 1/2"lg BOLT	32	EA
5	008-0156	BOLT 5/8"-18UNFx6"lg	40	EA
6	008-0217	3/8"-16UNCx1"lg BOLT	2	EA
7	008-0240	BOLT 1/2"-13UNCx1 1/4"lg	2	EA
8	008-0265	BOLT 5/8"-11UNCx4"lg	8	EA

Item	Part No.	Name	Qty	Uom
9	008-4804	BOLT 1/4"-20UNC x 1/2"lg	4	EA
10	009-0022	NUT 1/4 - 18 NPT x 1/8"lg	1	EA
11	009-0309	NUT 5/8"-18UNF	72	EA
12	012-0003	FLAT WASHER	152	EA
13	012-0022	FLAT WASHER 9/16"dia.	8	EA
14	012-0350	FLAT WASHER 1/4" dia	4	EA
15	012-0354	WASHER FLAT PLATE 1/2" dia.	2	EA
16	017-7595	HEX. SOCKET HEAD CAP SCREW 1/4"-20UNCx3/4"lg	1	EA
17	017-6257	HEX. SOCKET SET SCREW 1/2"-13UNC X 2"lg	2	EA
18	026-0997	REDUCER M / F 1/4 NPT X 1/8 NPT	1	EA
19	026-1002	REDUCER M / F 1/2 NPT X 3/8 NPT	1	EA
20	026-1016	PLUG 1/8 NPT	1	EA
21	028-3557	PLASTIC PIPE ADAPTOR 68NTA-4-2	1	EA
22	028-3566	PLASTIC PIPE ADAPTOR	1	EA
23	029-6594	STRAIGHT M / F SWIVEL ADAPT 8 ORB X FJIC 8	2	EA
24	030-0197	STRAIGHT THREAD UNION WITH O-RING 8 ORB X 8 ORB	2	EA
25	030-1427	90° ADJUSTABLE ADAPTOR MJIC 8 X 10 ORB	1	EA
26	030-4329	ORB MALE CONNECTOR MJIC 8 X 12 ORB	2	EA
27	043-1827	VAPOR SEAL	1	EA
28	048-0048	SLEWING RING	1	EA
29	052-0657	PLUG	2	EA
30	052-1137	PINION COVER	1	EA
31	052-6206	SPRING	1	EA
32	066-5665	BREATHER	1	EA
33	067-0148	ANTI SHOCK VALVE 3300 psi	2	EA
34	067-4316	CHECK VALVE	2	EA
35	07000-0280	HEAD	1	EA
36	099-0812	GREASING HOSE .170 15"lg	1	EA
37	110-0002	GEARBOX REDUCER	1	EA
38	112-0116	HYDRAULIC MOTOR	1	EA
39	503-0013	RESTRICTOR	2	EA
40	524-0239	HANDLE	1	EA
41	524-0290	HYDRAULIC MANIFOLD	1	EA

Item	Part No.	Name	Qty	Uom
42	724-0014	HYDRAULIC FITTING	2	EA
43	724-0058	SHAFT	1	EA
44	001-0001	GREASE FITTING 1/8"NPT	1	EA
45	067-0027	SEAL KIT	1	EA

Comments for Page: 07000-0788 (04) HEAD ASSEMBLY

[fr] (#3 008-0059),(#7 008-0240),(#16 017-7595),(#17 017-6257) Utiliser une clé dynamométrique. Tous les couples de serrage sont en lb-pi. et lubrifiés. LT= Loctite

[en] (#3 008-0059),(#7 008-0240),(#16 017-7595),(#17 017-6257) Use a torque wrench. Lubricated torque values in ft-lb. LT= Loctite


[fr] (#4 008-0155),(#5 008-0156),(#8 008-0265) Utilisé du "Loctite" LT= Loctite

[en] (#4 008-0155),(#5 008-0156),(#8 008-0265) Use "Loctite" LT= Loctite

[fr] (#33 067-0148) Item 45 inclus

[en] (#33 067-0148) Item 45 included


07000-0788 HEAD ASSEMBLY 110-0002 GEARBOX REDUCER

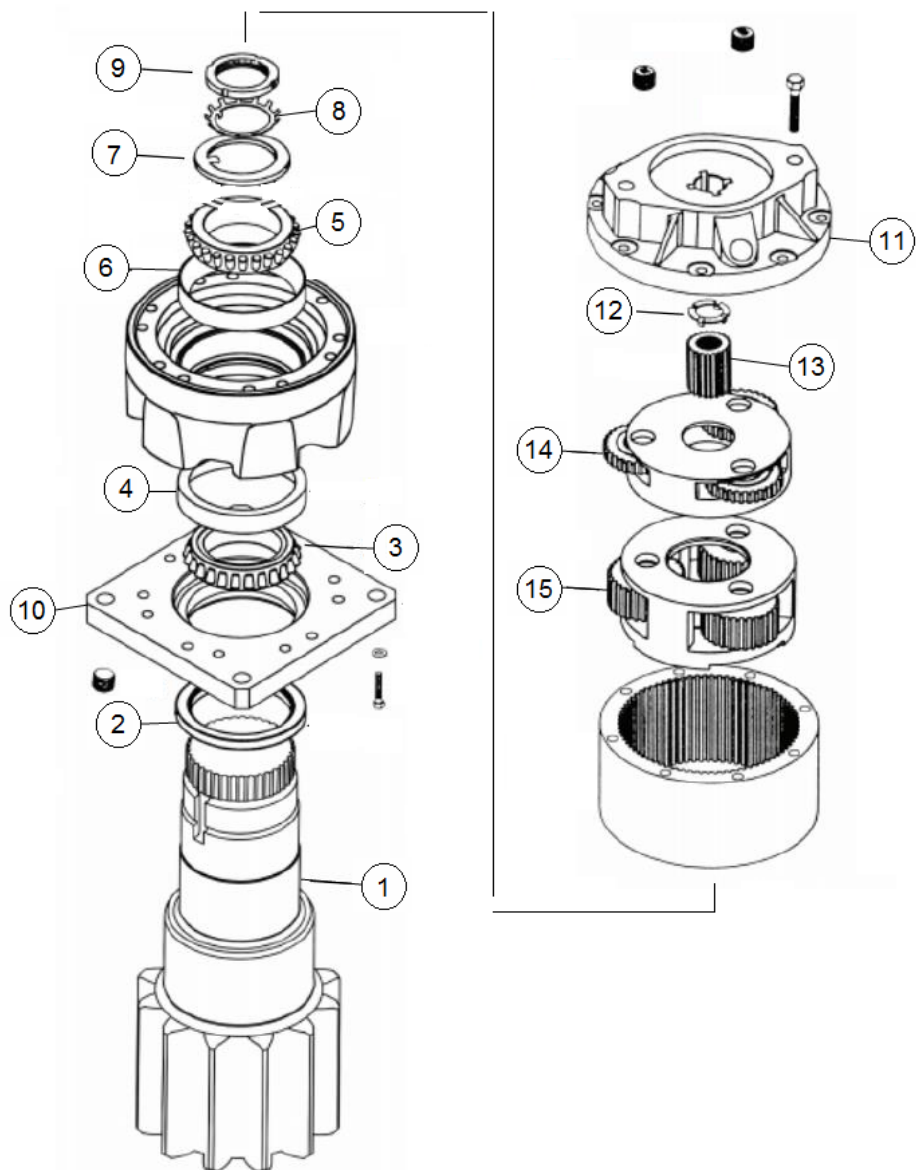

Item	Part No.	Name	Qty	Uom
1	110-0003	PINION SHAFT	1	EA
2	110-0004	GEARBOX SHAFT SEAL	1	EA
3	110-0005	TAPERED ROLLER BEARING (CONE)	1	EA
4	110-0006	TAPERED ROLLER BEARING (CUP)	1	EA
5	110-0007	TAPERED ROLLER BEARING (CONE)	1	EA
6	110-0008	TAPERED ROLLER BEARING (CUP)	1	EA
7	110-0009	THRUST WASHER	1	EA
8	110-0010	EXTERNAL TOOTH LOCK WASHER	1	EA


Item	Part No.	Name	Qty	Uom
9	110-0011	NUT	1	EA
10	110-0019	FLANGE	1	EA
11	110-0020	GEAR BOX COVER	1	EA
12	052-9737	WASHER	1	EA
13	110-0028	POWER WHEEL SUN GEAR MODEL 6	1	EA
14	110-0040	SECONDARY GEAR CARRIER	1	EA
15	110-0029	PRIMARY GEAR CARRIER	1	EA

07000-0788 HEAD ASSEMBLY 112-0116 HYDRAULIC MOTOR

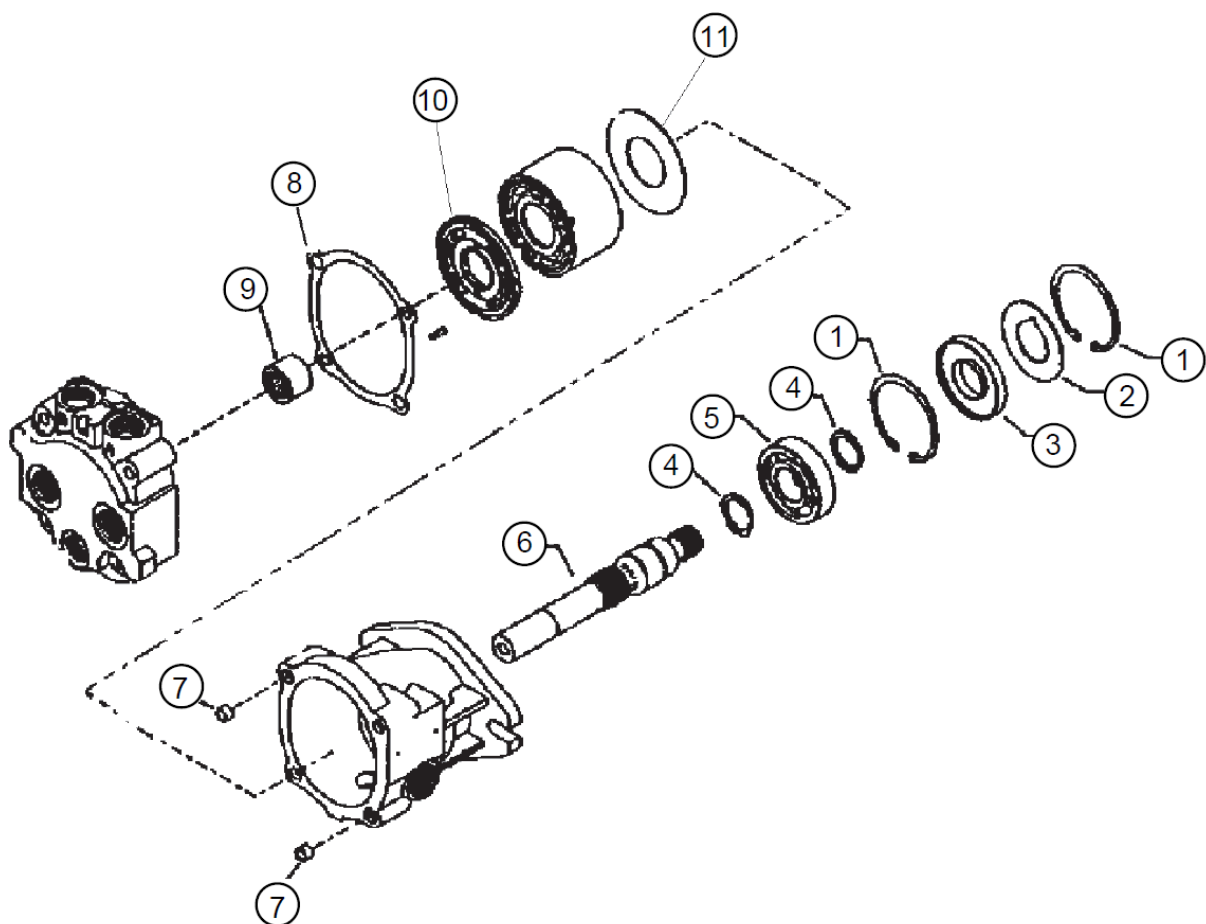

Item	Part No.	Name	Qty	Uom
1	112-0123	RETAINING RING	2	EA
2	112-0124	THRUST WASHER	1	EA
3	112-0125	WIPER SEAL	1	EA
4	112-0122	RETAINING RING	2	EA
5	112-0074	BEARING	1	EA
6	112-0117	SPLINED SHAFT	1	EA
7	112-0120	SPRING PIN	2	EA
8	112-0119	SEAL	1	EA
9	112-0118	NEEDLE BEARING	1	EA
10	112-0154	VALVE PLATE	1	EA
11	112-0168	HOLDING PLATE	1	EA

724-0178 FLOOR ASSY 724-0178 (07) FLOOR ASSY

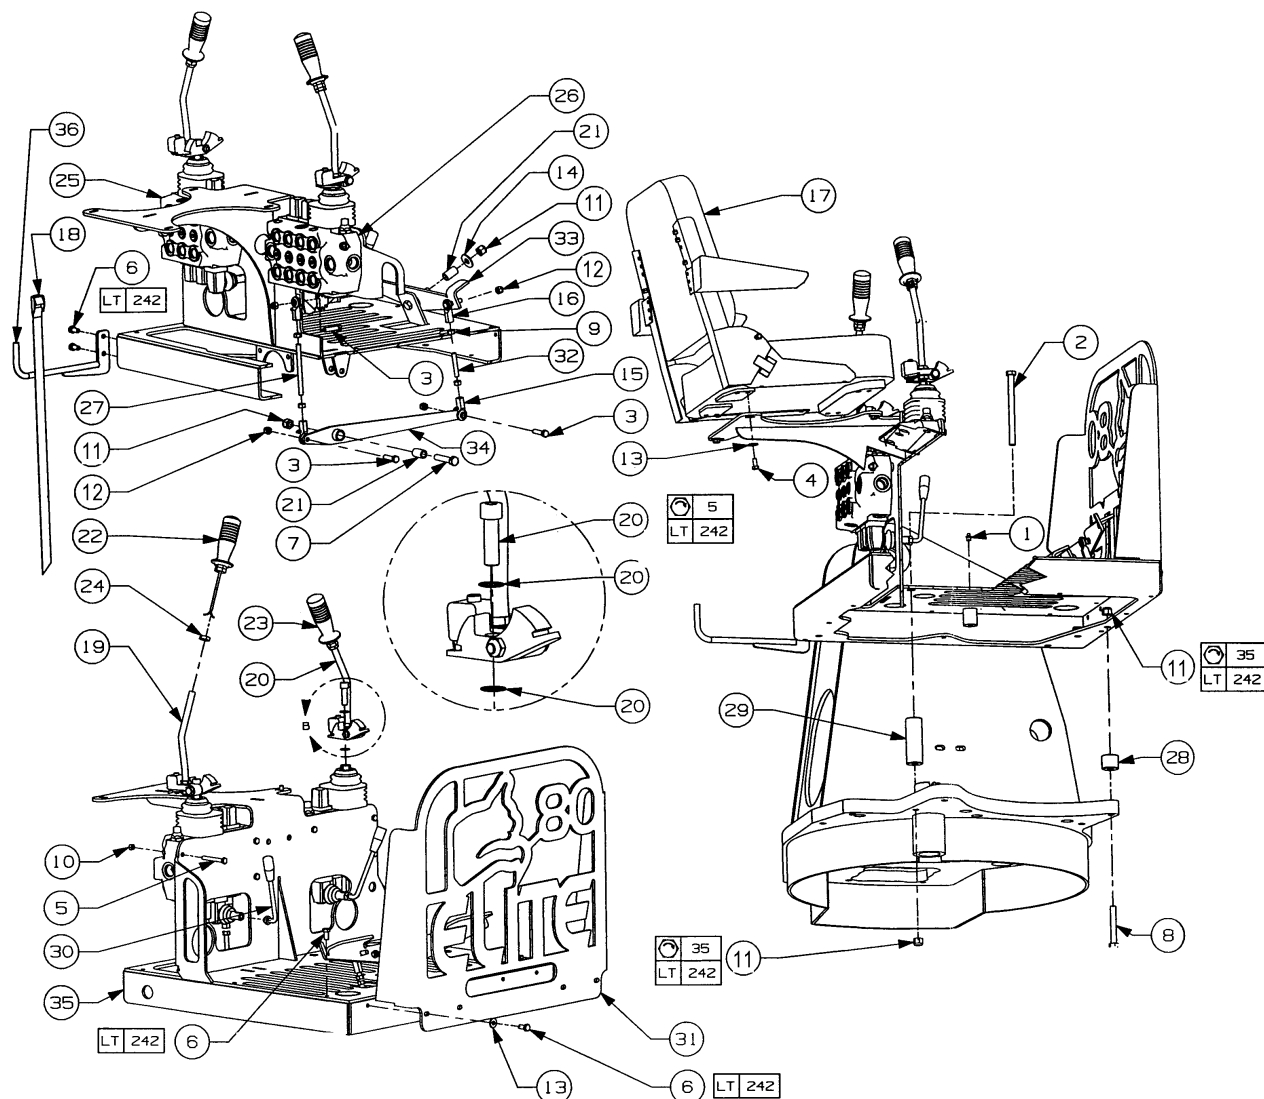

Item	Part No.	Name	Qty	Uom
1	001-0001	GREASE FITTING 1/8"NPT	1	EA
2	008-0051	BOLT 1/2" UNC X 6 1/2"lg	1	EA
3	008-0105	BOLT 3/8"-24UNFx1 1/4"lg	3	EA
4	008-0206	BOLT NC YELLOW 5 / 16-18NC X 3 / 4	4	EA
5	008-0211	BOLT 5/16"-18UNCx2 1/2"lg	6	EA
6	008-0216	BOLT 3/8"-16UNC x 3/4" lg	8	EA
7	008-0243	BOLT 1/2"-13UNCx2 1/2"lg	1	EA
8	008-0245	1/2-13 UNC x 3 1/2 Lg. Gr.8	3	EA
9	009-0305	NUT 3/8"-24UNF	4	EA
10	009-0329	NUT 5/16"-18UNC	6	EA

Item	Part No.	Name	Qty	Uom
11	010-4433	NYLON LOCK NUT 1 / 2 - 13UNC GR8 ZINC	6	EA
12	010-9689	NYLON LOCK NUT 3/8"-24UNF	4	EA
13	012-0351	FLAT WASHER 5/16" dia	8	EA
14	012-0354	WASHER FLAT PLATE 1/2" dia.	1	EA
15	019-4404	FEMALE SPHERICAL PLAIN BEARING ROD END	3	EA
16	019-6213	SPHERICAL PLAIN BEARING ROD 3/8"-24UNF	1	EA
17	057-0015	SEAT	1	EA
18	059-0015	STRAP	1	EA
19	07000-4658	RIGHT CONTROL JOYSTICK	1	EA
20	07000-4660	LEFT CONTROL JOYSTICK	1	EA
21	106-0028	NYLON BUSHING	2	EA
22	108-6521	CONTROL HANDLE	1	EA
23	108-6522	CONTROL HANDLE	1	EA
24	116-0005	THIN NUT M14 X 1.50 X 7 lg. CL. 8.8	2	EA
25	130-0188	LEFT HYDRAULIC CONTROL	1	EA
26	130-0256	RIGHT HYDRAULIC CONTROL	1	EA
27	524-0230	THREADED ROD	1	EA
28	524-0235	SPACER	3	EA
29	524-0236	SPACER	1	EA
30	524-0242	CONTROL LEVER	2	EA
31	524-0271	PROTECTOR	1	EA
32	524-0292	THREADED ROD	1	EA
33	724-0133	PEDAL	1	EA
34	724-0134	LEVER	1	EA
35	724-0167	FLOOR	1	EA
36	724-0192	HOSE CLAMPS	1	EA

Comments for Page: 724-0178 (07) FLOOR ASSY


[fr] (#6 008-0216) Utilisé du "Loctite" LT= Loctite

[en] (#6 008-0216) Use "Loctite" LT= Loctite

[fr] (#11 010-4433),(#20 07000-4660) Utiliser une clé dynamométrique. Tous les couples de serrage sont en lb-pi. et lubrifiés. LT= Loctite

[en] (#11 010-4433),(#20 07000-4660) Use a torque wrench. Lubricated torque values in ft-lb. LT= Loctite

724-0178 FLOOR ASSY 07000-4658 (02) RIGHT CONTROL JOYSTICK

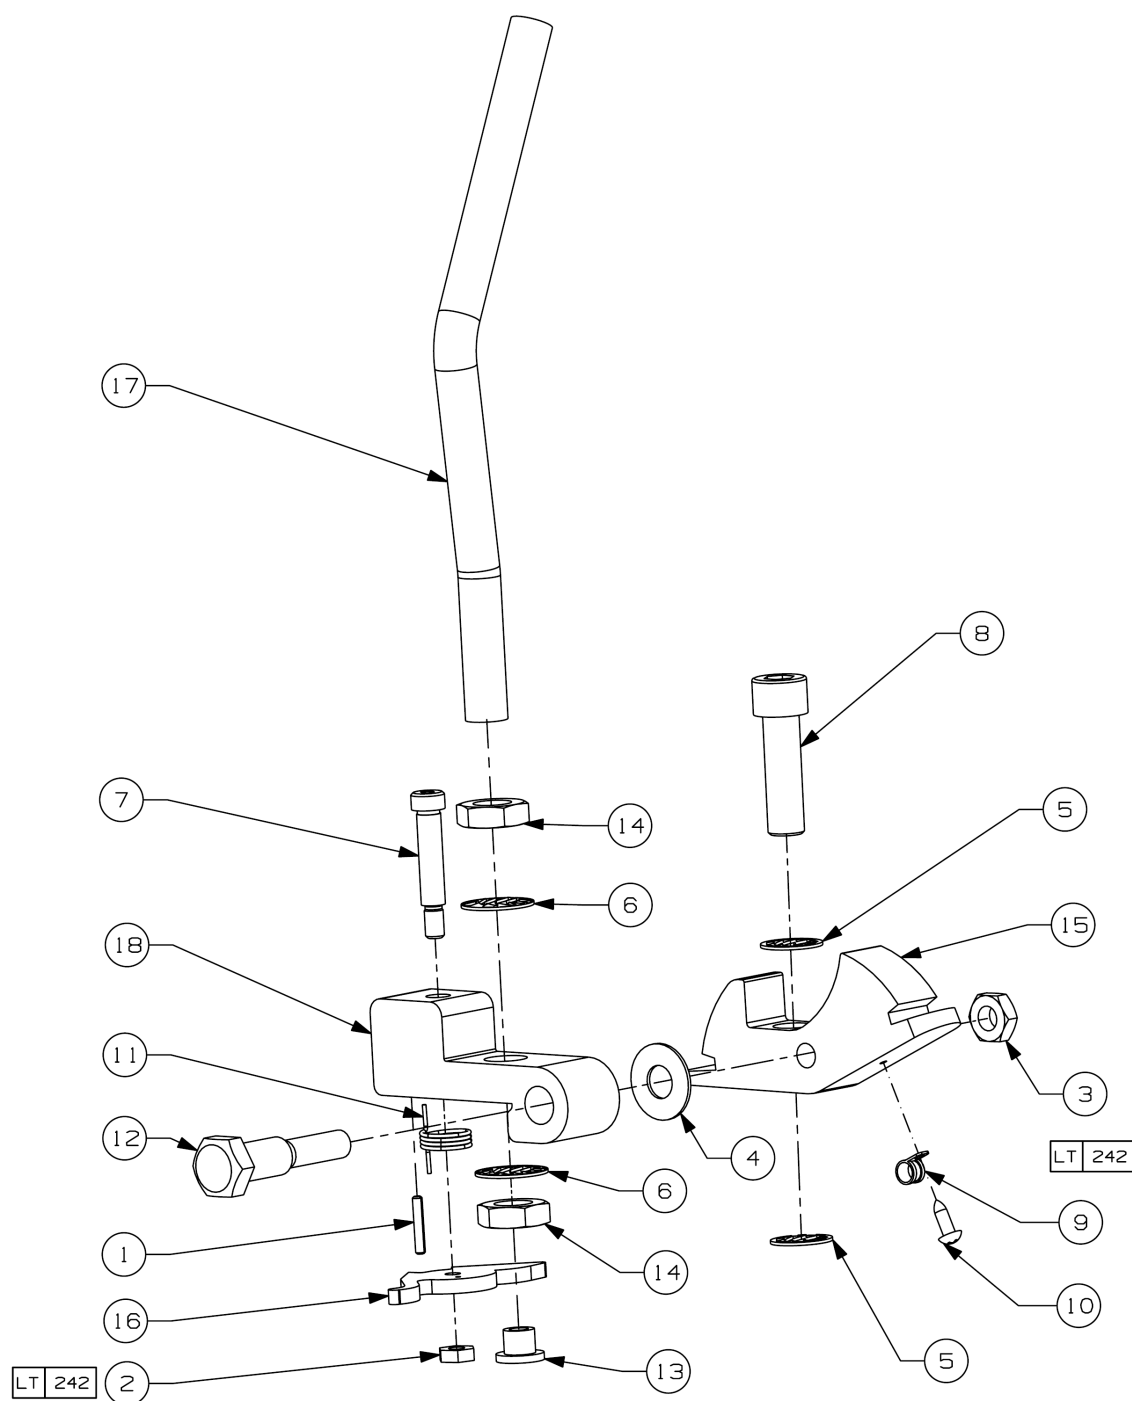

Item	Part No.	Name	Qty	Uom
1	003-0049	SPRING PIN 1/8 DIA. x 3/4 lg.	1	EA
2	009-0021	JAM NUT 1/4-20 UNC x 5/32	1	EA
3	009-0025	JAM NUT 3/8-16 UNC GR.8 INOX	1	EA


Item	Part No.	Name	Qty	Uom
4	012-0024	FLAT WASHER 3/8 DIA. x .048 INOX	1	EA
5	013-0035	INTERNAL TOOTH LOCK WASHER M12 672-075ZP	2	EA
6	013-0036	013-0036 673-076ZP	2	EA
7	017-0154	SHOULDER SCREW	1	EA
8	017-9202	HEX. SOCKET HEAD CAP SCREW M12x1.75x40"lg	1	EA
9	018-4897	WIRE CLAMP	1	EA
10	020-0022	SCREW	1	EA
11	052-1120	SPRING	1	EA
12	07000-3164	SHOULDER SCREW	1	EA
13	107-0018	SLEEVE	1	EA
14	116-0005	THIN NUT M14 X 1.50 X 7 lg. CL. 8.8	2	EA
15	524-0298	BRACKET	1	EA
16	524-0299	LATCH	1	EA
17	524-0300	ARM	1	EA
18	524-0301	ARM HOLDER	1	EA

Comments for Page: 07000-4658 (02) RIGHT CONTROL JOYSTICK

[fr] (#2 009-0021),(#3 009-0025) Utilisé du "Loctite" LT= Loctite

[en] (#2 009-0021),(#3 009-0025) Use "Loctite" LT= Loctite

724-0178 FLOOR ASSY 07000-4660 (01) LEFT CONTROL JOYSTICK

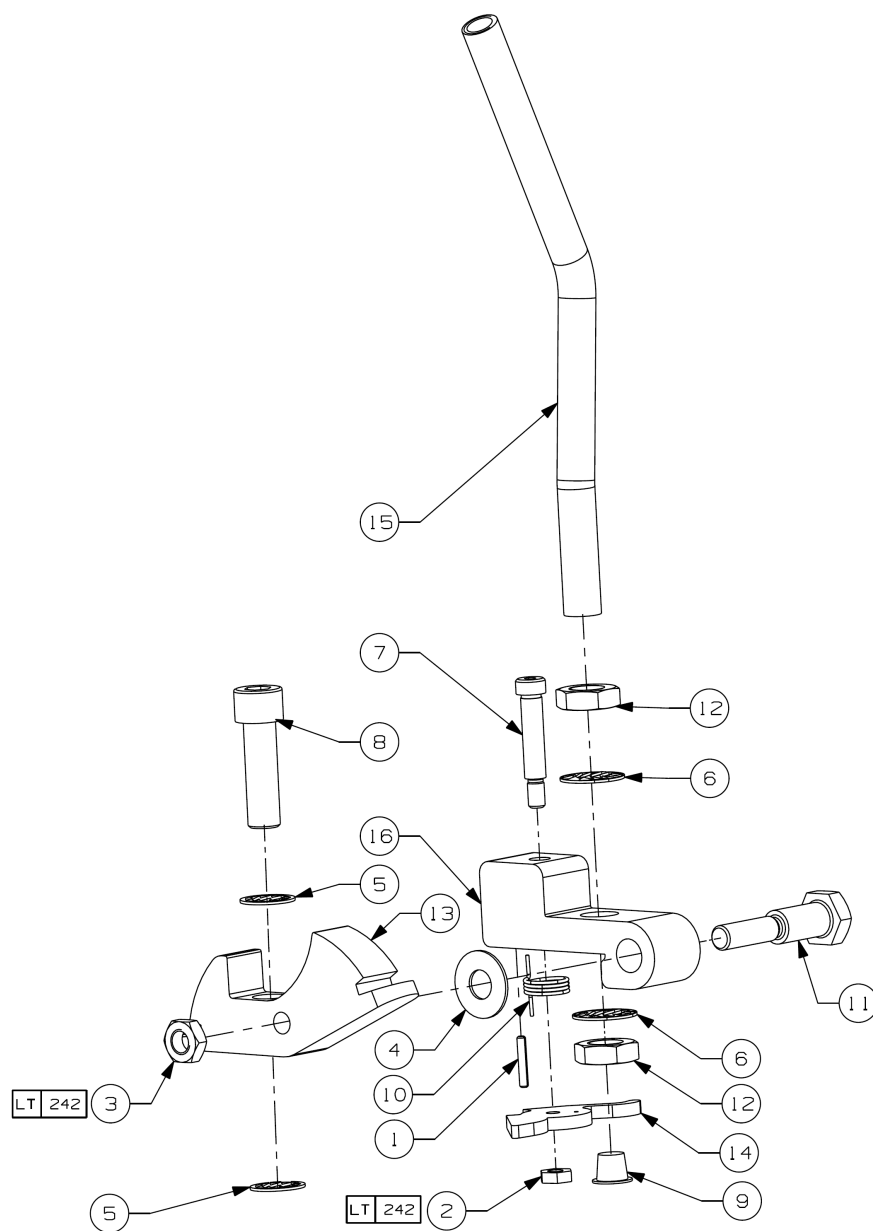

Item	Part No.	Name	Qty	Uom
1	003-0049	SPRING PIN 1/8 DIA. x 3/4 lg.	1	EA
2	009-0021	JAM NUT 1/4-20 UNC x 5/32	1	EA
3	009-0025	JAM NUT 3/8-16 UNC GR.8 INOX	1	EA
4	012-0024	FLAT WASHER 3/8 DIA. x .048 INOX	1	EA
5	013-0035	INTERNAL TOOTH LOCK WASHER M12 672-075ZP	2	EA
6	013-0036	013-0036 673-076ZP	2	EA
7	017-0154	SHOULDER SCREW	1	EA


Item	Part No.	Name	Qty	Uom
8	017-9202	HEX. SOCKET HEAD CAP SCREW M12x1.75x40"lg	1	EA
9	026-0020	PLASTIC PLUG	1	EA
10	052-1120	SPRING	1	EA
11	07000-3164	SHOULDER SCREW	1	EA
12	116-0005	THIN NUT M14 X 1.50 X 7 lg. CL. 8.8	2	EA
13	524-0298	BRACKET	1	EA
14	524-0299	LATCH	1	EA
15	524-0300	ARM	1	EA
16	524-0301	ARM HOLDER	1	EA

Comments for Page: 07000-4660 (01) LEFT CONTROL JOYSTICK

[fr] (#2 009-0021),(#3 009-0025) Utilisé du "Loctite" LT= Loctite

[en] (#2 009-0021),(#3 009-0025) Use "Loctite" LT= Loctite

724-0178 FLOOR ASSY 108-6521 CONTROL HANDLE

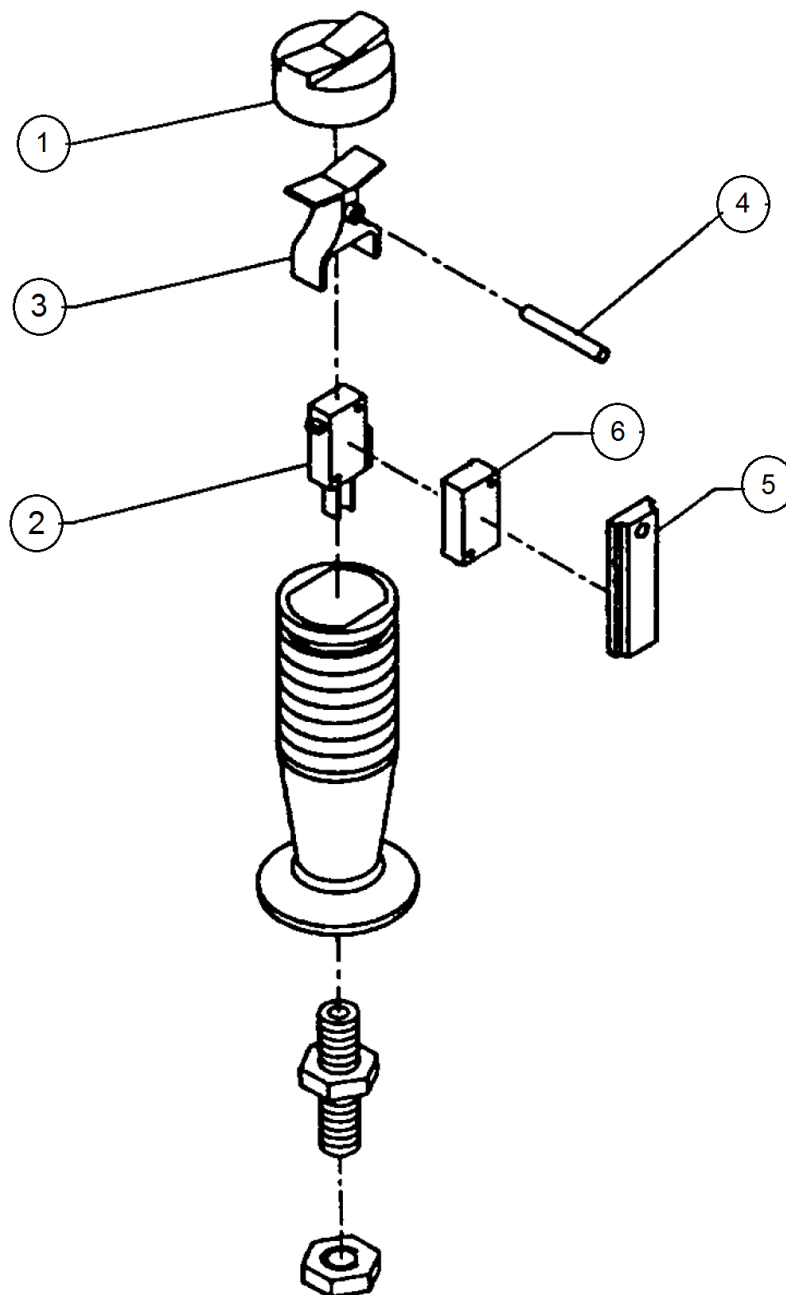

Item	Part No.	Name	Qty	Uom
0	108-6814	HANDLE ASS'Y	1	EA
1	108-7747	HANDLE CAP	1	EA
1	108-7839	HANDLE CAP	1	EA
1	108-7774	HANDLE CAP	1	EA
2	052-7775	ELECTRICAL SWITCH	-	EA
3	108-0047	TILT	1	EA
3	108-9291	TILT	1	EA

Item	Part No.	Name	Qty	Uom
4	108-9292	PIN	1	EA
5	108-0049	SWITCH HOLDER	2	EA
6	108-0048	SPACER	1	EA

Comments for Page: 108-6521 CONTROL HANDLE

[fr] (#0 108-6814),(#1 108-7774),(#3 108-9291) Avec 2 interrupteurs électriques

[en] (#0 108-6814),(#1 108-7774),(#3 108-9291) With 2 electrical switches

[fr] (#1 108-7747) Sans interrupteur électrique

[en] (#1 108-7747) Without electrical switch


[fr] (#1 108-7839),(#3 108-0047) Avec 1 interrupteur électrique

[en] (#1 108-7839),(#3 108-0047) With 1 electrical switch

[fr] (#6 108-0048) Utilisé avec 1 interrupteur électrique

[en] (#6 108-0048) Use With 1 electrical switch

130-0188 LEFT CONTROL 130-0188 LEFT HYDRAULIC CONTROL

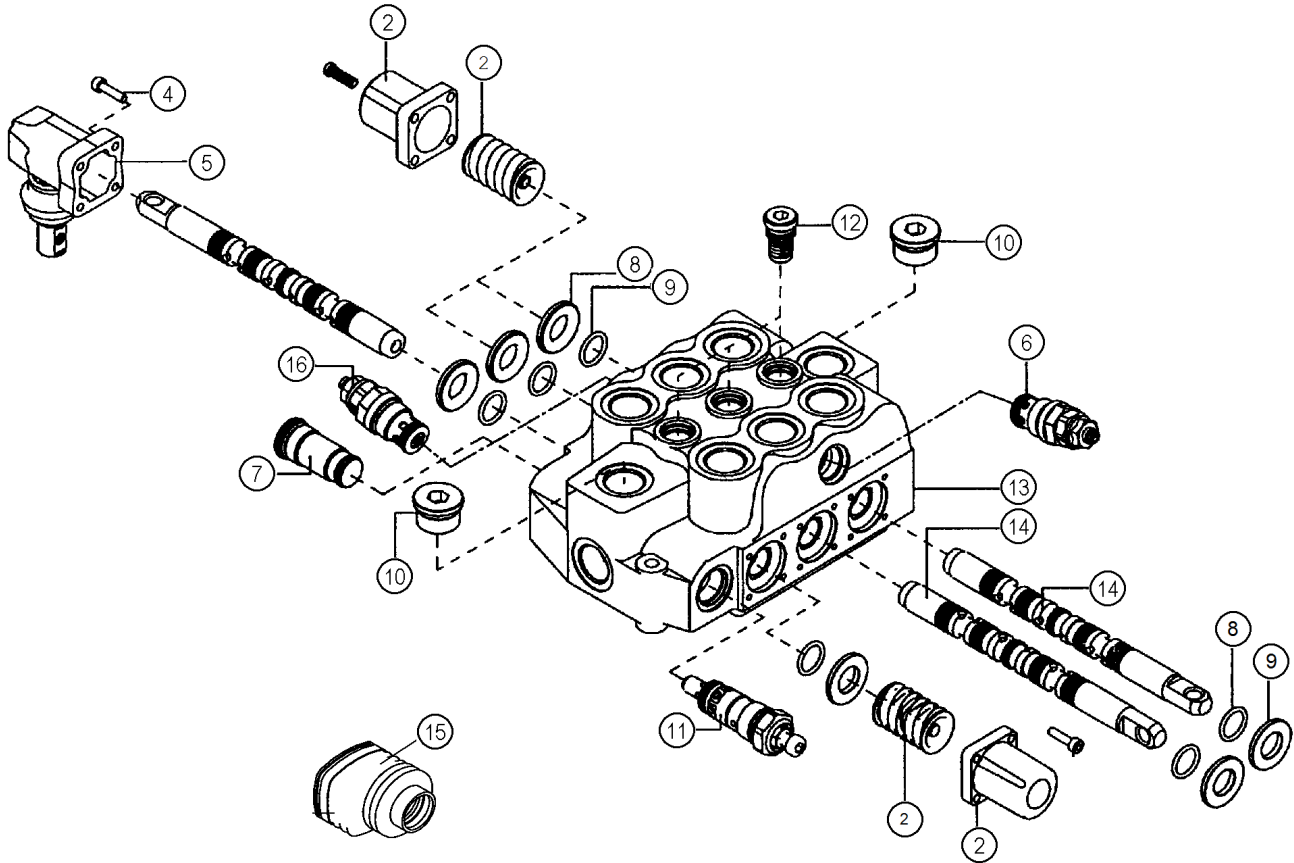

Item	Part No.	Name	Qty	Uom
0	130-8582	LEVER PIVOT BOX	1	EA
0	130-0236	CONTROL BODY ASSEMBLY	1	EA
2	130-0207	SPOOL COVER	3	EA
4	017-5786	HEX. SOCKET HEAD CAP SCREW M5 x 20	4	EA
5	130-8582	LEVER PIVOT BOX	1	EA
6	07000-5640	CUSHION VALVE	1	EA
7	130-0210	PLUG	1	EA
8	130-0212	O-RING	6	EA
9	130-8567	RING	6	EA
10	130-0211	PLUG	2	EA
11	07000-5477	MAIN RELIEF VALVE	1	EA
12	130-0215	LOAD CHECK	3	EA
13	130-0213	CONTROL BODY	1	EA
14	130-0219	SPOOL	3	EA

Item	Part No.	Name	Qty	Uom
15	130-0235	HYDRAULIC CONTROL, MECHANICAL JOYSTICK BASE ASSEMBLY	1	EA
16	07000-9640	CUSHION VALVE	1	EA
17	130-0318	COMPLETE SEAL KIT FOR VALVE BANK	1	EA

Comments for Page: 130-0188 LEFT HYDRAULIC CONTROL

[fr] (#0 130-8582) Items 4, 5 inclus

[en] (#0 130-8582) Items 4, 5 included


[fr] (#0 130-0236) Items 8, 9,12,13 inclus

[en] (#0 130-0236) Items 8, 9,12,13 included

[fr] (#15 130-0235) Non illustré.

[en] (#15 130-0235) Not show on this assembly.


130-0188 LEFT CONTROL 130-0235 HYDRAULIC CONTROL, MECHANICAL JOYSTICK BASE ASSEMBLY

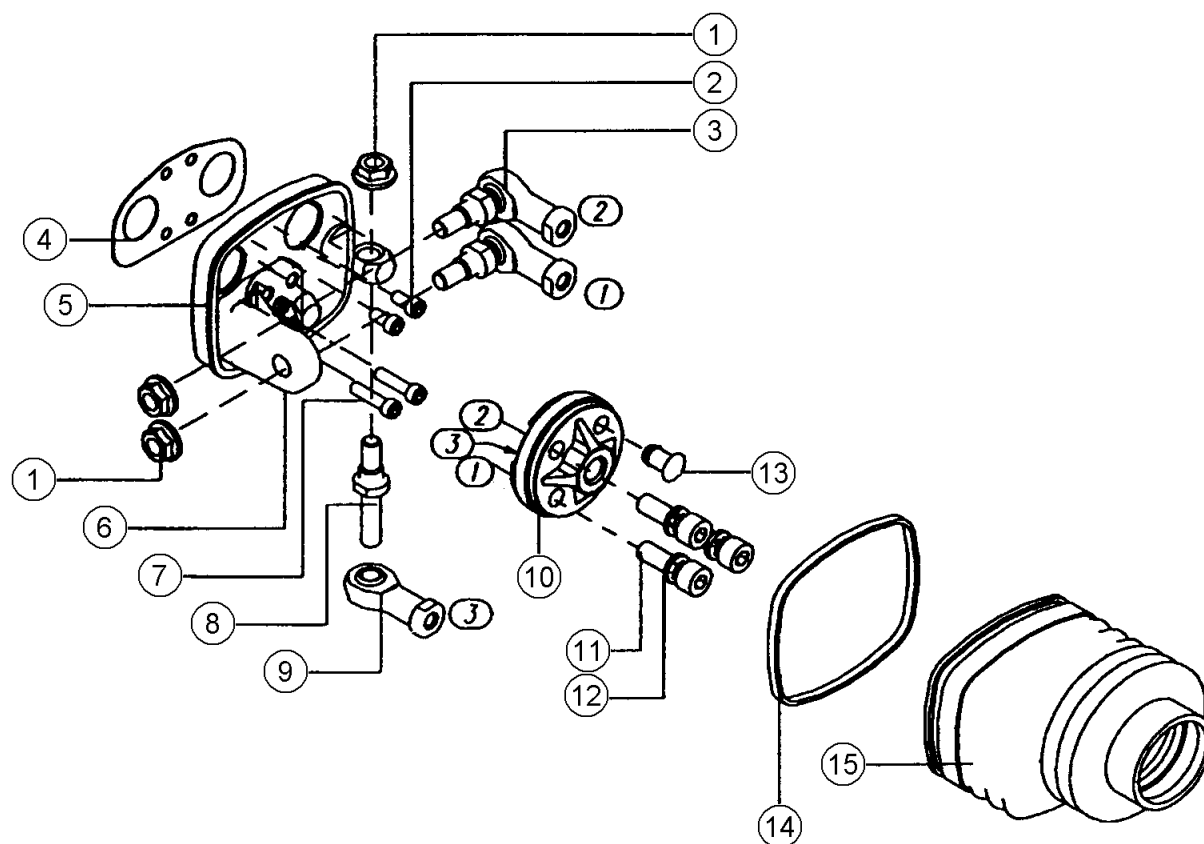

Item	Part No.	Name	Qty	Uom
1	130-0220	NUT	3	EA
2	017-7419	HEX. SOCKET HEAD CAP SCREW M5 x 10	2	EA
3	130-0222	SPHERICAL PLAIN BEARING ROD	2	EA
4	130-0223	SEAL	1	EA
5	130-0224	HOLDING PLATE	1	EA
6	130-0225	PIVOT	1	EA
7	017-0143	HEX. SOCKET HEAD CAP SCREW M5 x 18	2	EA
8	130-9091	PIN	1	EA
9	130-8585	SPHERICAL PLAIN BEARING ROD	1	EA
10	130-0229	JOYSTICK LEVER HOLDER	1	EA
11	017-5787	HEX. SOCKET HEAD CAP SCREW M8 x 25	3	EA
12	130-0231	FLAT WASHER M8	3	EA
13	130-0232	PLUG	1	EA

Item	Part No.	Name	Qty	Uom
14	052-9237	NYLON TIE WRAP	1	EA
15	130-0234	RUBBER CAP	1	EA

130-0256 RIGHT HYDRAULIC CONTROL 130-0256 RIGHT HYDRAULIC CONTROL

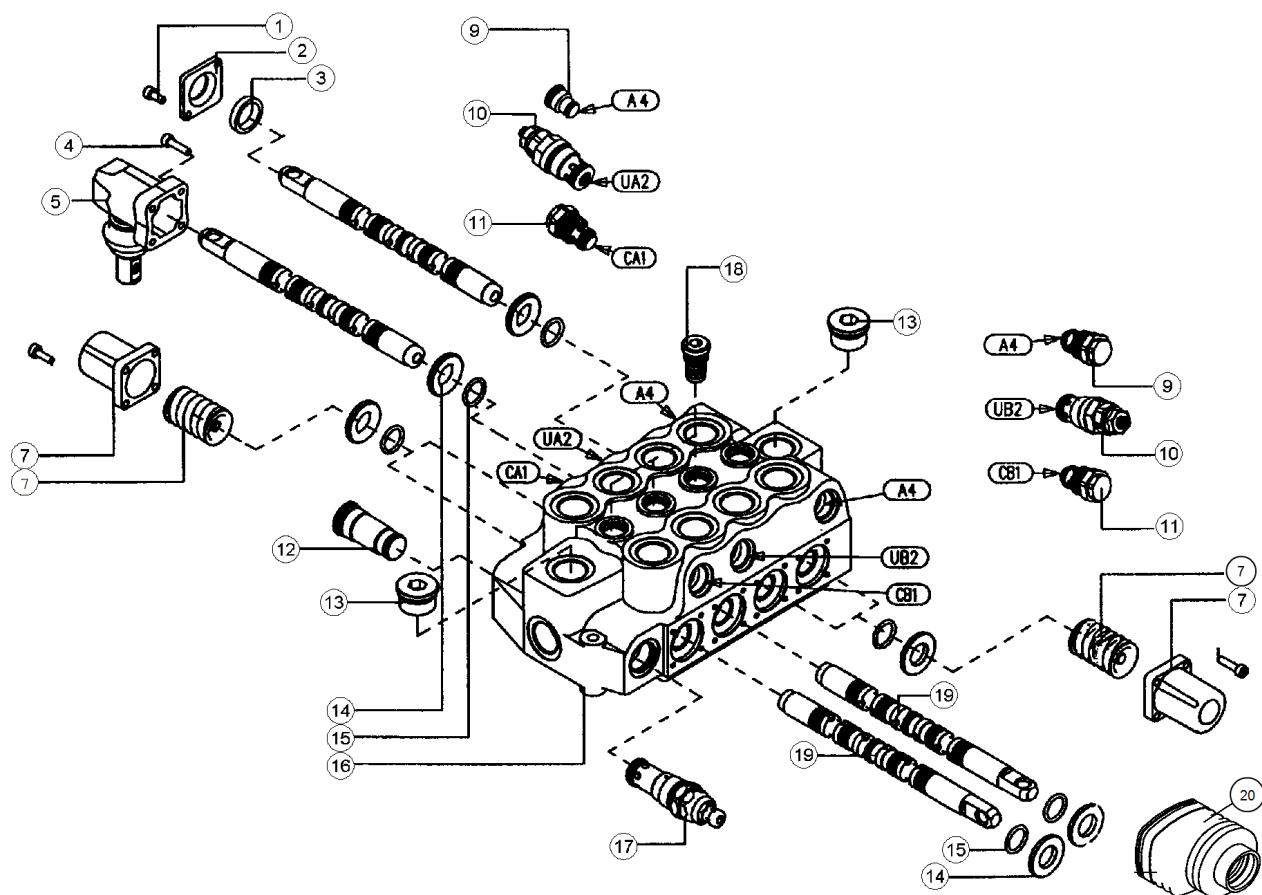

Item	Part No.	Name	Qty	Uom
0	130-8580	RETAINING PLATE	1	EA
0	130-8582	LEVER PIVOT BOX	1	EA
0	130-0217	CONTROL BODY ASS'Y	1	EA
1	130-0201	HEX. SOCKET HEAD CAP SCREW M5 x 12	2	EA
2	130-0202	COVER	1	EA
3	130-0203	SEAL	1	EA
4	017-5786	HEX. SOCKET HEAD CAP SCREW M5 x 20	4	EA
5	130-8582	LEVER PIVOT BOX	1	EA
7	130-0207	SPOOL COVER	4	EA
9	130-8562	PLUG	2	EA
10	07000-5639	CUSHION VALVE	2	EA
11	130-8442	CHECK VALVE	4	EA
12	130-0210	PLUG	1	EA
13	130-0211	PLUG	2	EA
14	130-8567	RING	8	EA

Item	Part No.	Name	Qty	Uom
15	130-0212	O-RING	8	EA
16	130-0213	CONTROL BODY	1	EA
17	07000-5479	MAIN RELIEF VALVE	1	EA
18	130-0215	LOAD CHECK	4	EA
19	130-0219	SPOOL	4	EA
20	130-0235	HYDRAULIC CONTROL, MECHANICAL JOYSTICK BASE ASSEMBLY	1	EA
21	130-0319	COMPLETE SEAL KIT FOR VALVE BANK	1	EA

Comments for Page: 130-0256 RIGHT HYDRAULIC CONTROL

[fr] (#0 130-8582) Items 4, 5 inclus


[en] (#0 130-8582) Items 4, 5 included

[fr] (#0 130-0217) Items 14, 15, 16, 18 inclus

[en] (#0 130-0217) Items 14, 15, 16, 18 included

[fr] (#20 130-0235) Non illustré sur cet assemblé.

[en] (#20 130-0235) Not show on this assembly.

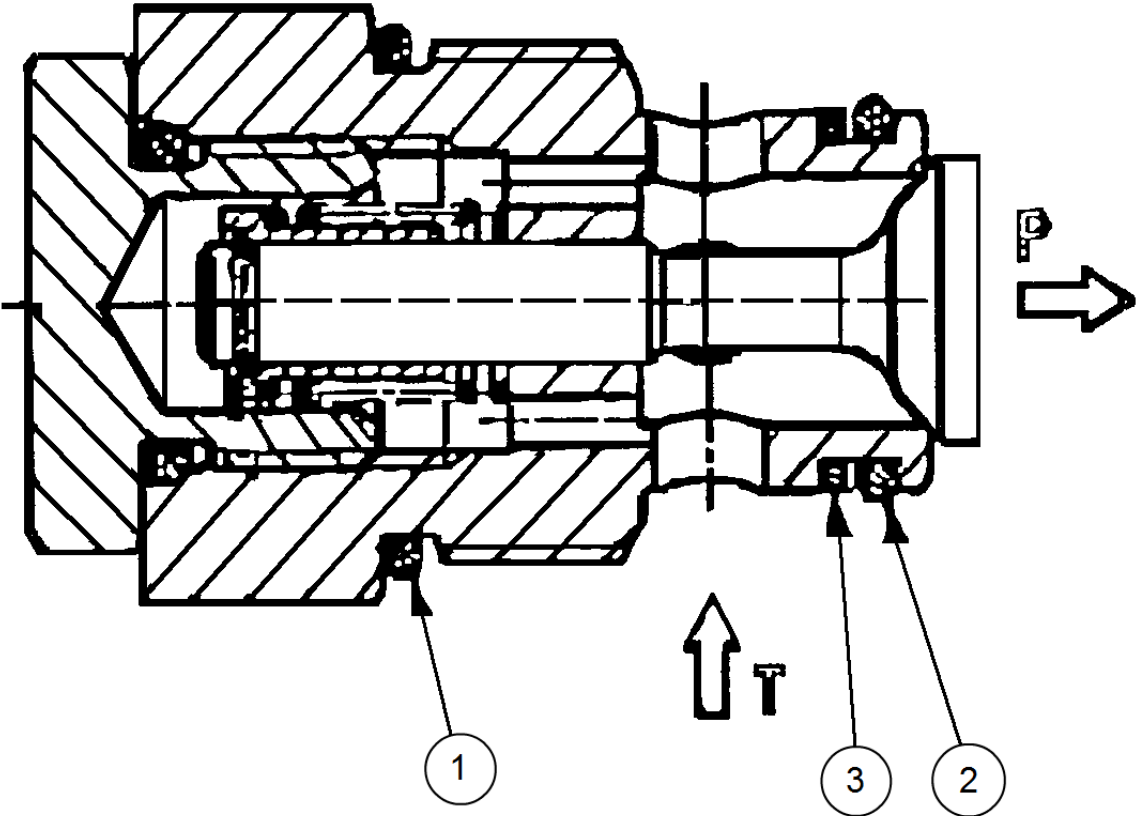


Item	Part No.	Name	Qty	Uom
1	041-6919	O-RING	1	EA
2	041-9861	O-RING	1	EA
3	044-1834	BACKUP RING	1	EA
4	130-8588	SEAL KIT	1	EA

Comments for Page: 130-8442 CHECK VALVE

[fr] (#1 041-6919),(#2 041-9861),(#3 044-1834) Les pièces comprises dans l'ensemble des joints d'étanchéité ne sont pas vendues séparément

[en] (#1 041-6919),(#2 041-9861),(#3 044-1834) Parts included in the seals kit are not sold separately


130-0256 RIGHT HYDRAULIC CONTROL 130-0235 HYDRAULIC CONTROL, MECHANICAL
JOYSTICK BASE ASSEMBLY

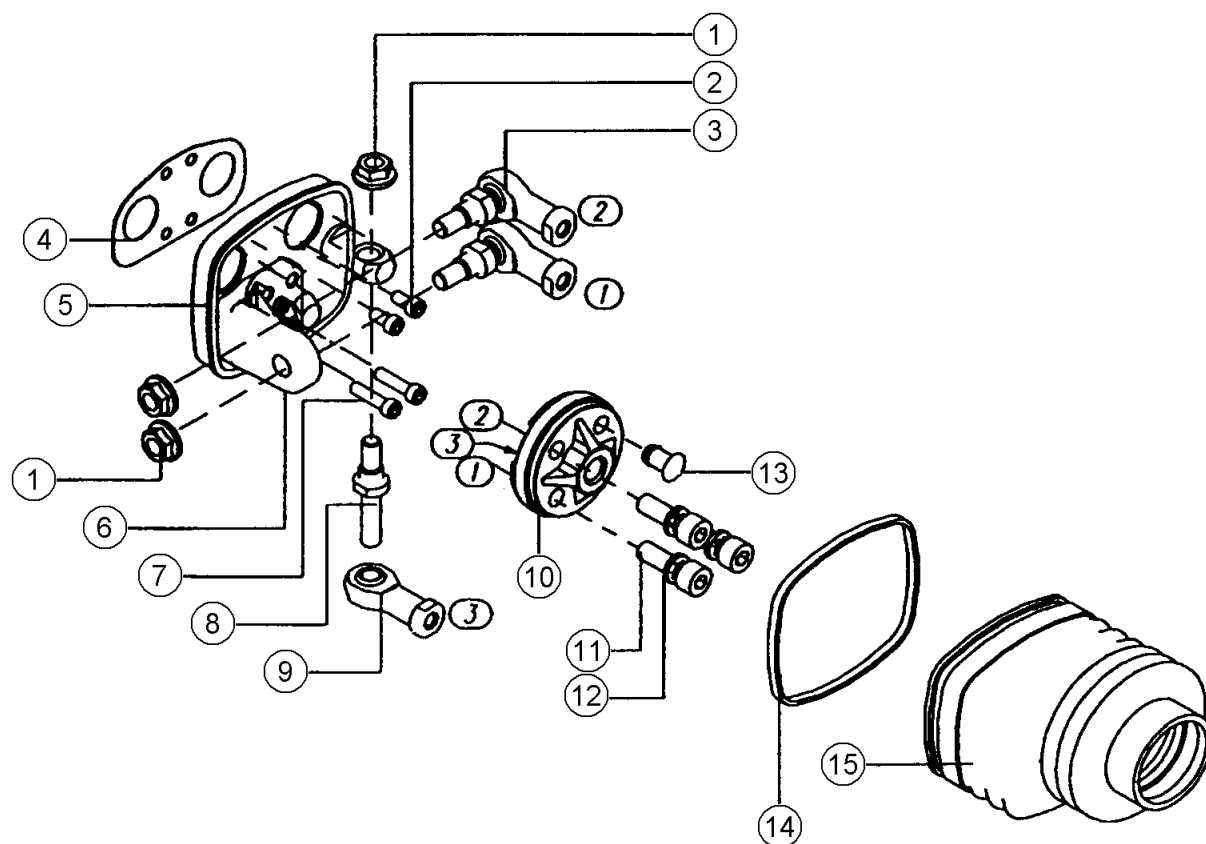

Item	Part No.	Name	Qty	Uom
1	130-0220	NUT	3	EA
2	017-7419	HEX. SOCKET HEAD CAP SCREW M5 x 10	2	EA
3	130-0222	SPHERICAL PLAIN BEARING ROD	2	EA
4	130-0223	SEAL	1	EA
5	130-0224	HOLDING PLATE	1	EA
6	130-0225	PIVOT	1	EA
7	017-0143	HEX. SOCKET HEAD CAP SCREW M5 x 18	2	EA
8	130-9091	PIN	1	EA
9	130-8585	SPHERICAL PLAIN BEARING ROD	1	EA
10	130-0229	JOYSTICK LEVER HOLDER	1	EA
11	017-5787	HEX. SOCKET HEAD CAP SCREW M8 x 25	3	EA
12	130-0231	FLAT WASHER M8	3	EA
13	130-0232	PLUG	1	EA


Item	Part No.	Name	Qty	Uom
14	052-9237	NYLON TIE WRAP	1	EA
15	130-0234	RUBBER CAP	1	EA

724-0188 ELECTRICAL CIRCUIT 724-0188 (03) ELECTRICAL CIRCUIT

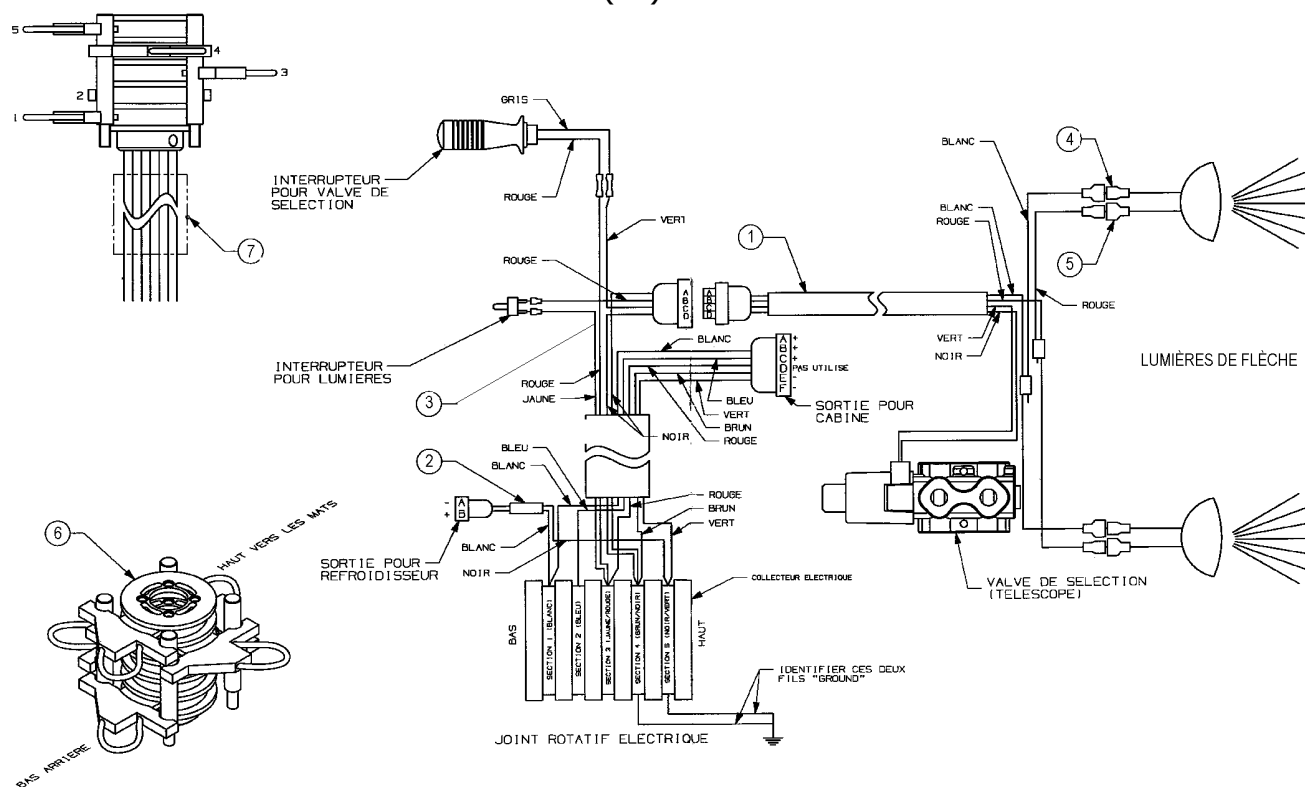


Item	Part No.	Name	Qty	Uom
1	052-1190	HARNESS	1	EA
2	052-1191	HARNESS	1	EA
3	052-1192	HARNESS	1	EA
4	052-5954	MALE CONNECTOR	2	EA
5	052-5955	FEMALE CONNECTOR	2	EA
6	052-6392	ELECTRICAL SWIVEL SEAL (5 SECTIONS)	1	EA
7	052-8094	WIRE PROTECTOR	1	EA

724-0188 ELECTRICAL CIRCUIT 724-0188-2 (03) ELECTRICAL CIRCUIT

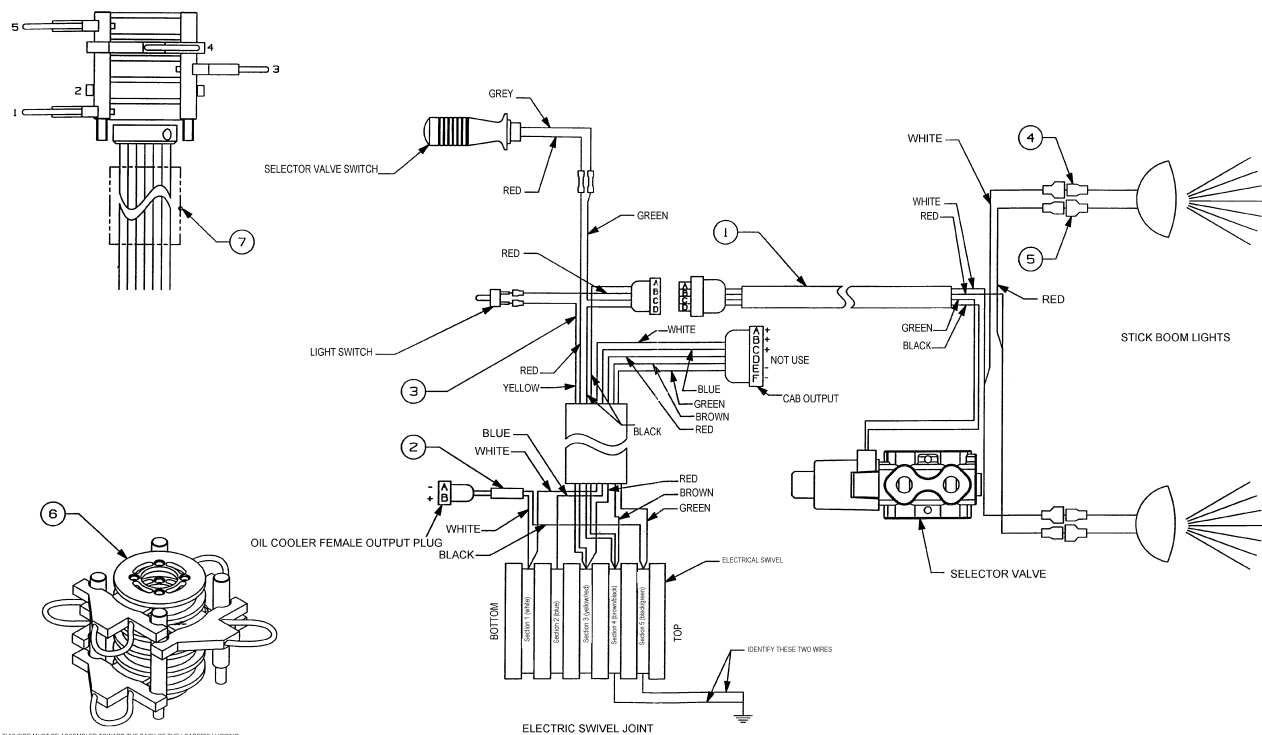

Item	Part No.	Name	Qty	Uom
1	052-1190	HARNESS	1	EA
2	052-1191	HARNESS	1	EA
3	052-1192	HARNESS	1	EA
4	052-5954	MALE CONNECTOR	2	EA
5	052-5955	FEMALE CONNECTOR	2	EA
6	052-6392	ELECTRICAL SWIVEL SEAL (5 SECTIONS)	1	EA
7	052-8094	WIRE PROTECTOR	1	EA

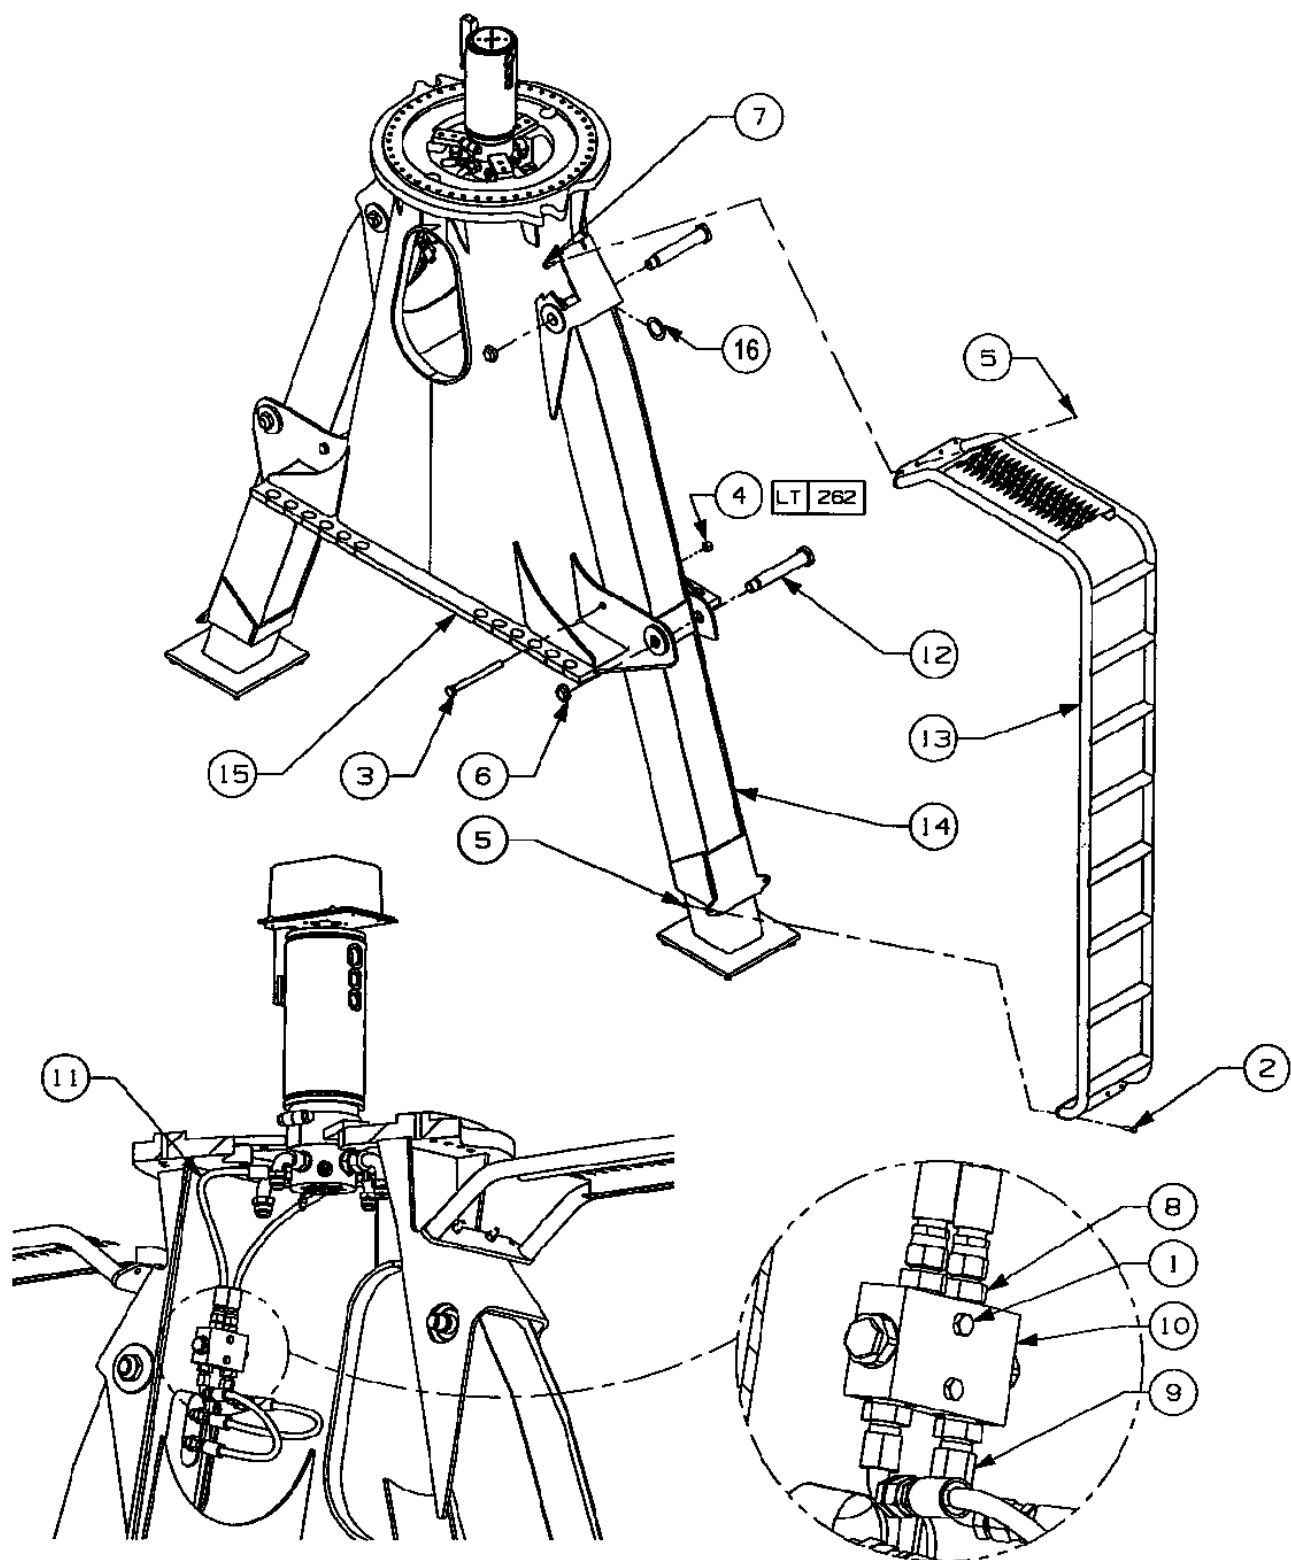

Item	Part No.	Name	Qty	Uom
1	008-0210	BOLT 5/16"-18UNCx2"lg	4	EA
2	008-0219	BOLT 3/8"-16UNCx1 1/2"lg	4	EA

Item	Part No.	Name	Qty	Uom
3	008-0283	BOLT 3/4"-10 UNC X 8"lg	2	EA
4	009-0335	3/4"-10UNC HEX NUT	2	EA
5	010-0340	NYLON LOCK NUT 3/8"-16UNC X 7/16"lg	8	EA
6	010-9072	NYLON LOCK NUT 1 1/4"-12UNF x 3/4"lg	4	EA
7	017-0150	CARRIAGE BOLT 3/8"-16 UNC X 1 1/2"lg	4	EA
8	030-3939	ORB MALE CONNECTOR MJIC 8 X 10 ORB	8	EA
9	030-4541	90° S SWIVEL TUBE ADAPTOR FJIC 8 X MJIC 8	4	EA
10	07002-5054	STABILIZER LOCK VALVES	2	EA
11	099-4188	HOSE 16" (CUT LENGTH)	8	EA
12	715-0029	PIN 1 1/2"dia x 9.19"lg	4	EA
13	726-0033	LADDER	2	EA
14	726-0039	STABILIZER	2	EA
15	726-0044	COLUMN	1	EA
16	546-0005	SPACER	1	EA

Comments for Page: 726-0045 COLUMN ASSY


[fr] (#4 009-0335) Utilisé du "Loctite" LT= Loctite

[en] (#4 009-0335) Use "Loctite" LT= Loctite

[fr] (#16 546-0005) Utiliser au besoin

[en] (#16 546-0005) Use as required

726-0045 COLUMN ASSY 067-0170 (DEL) STABILIZER LOCK VALVES

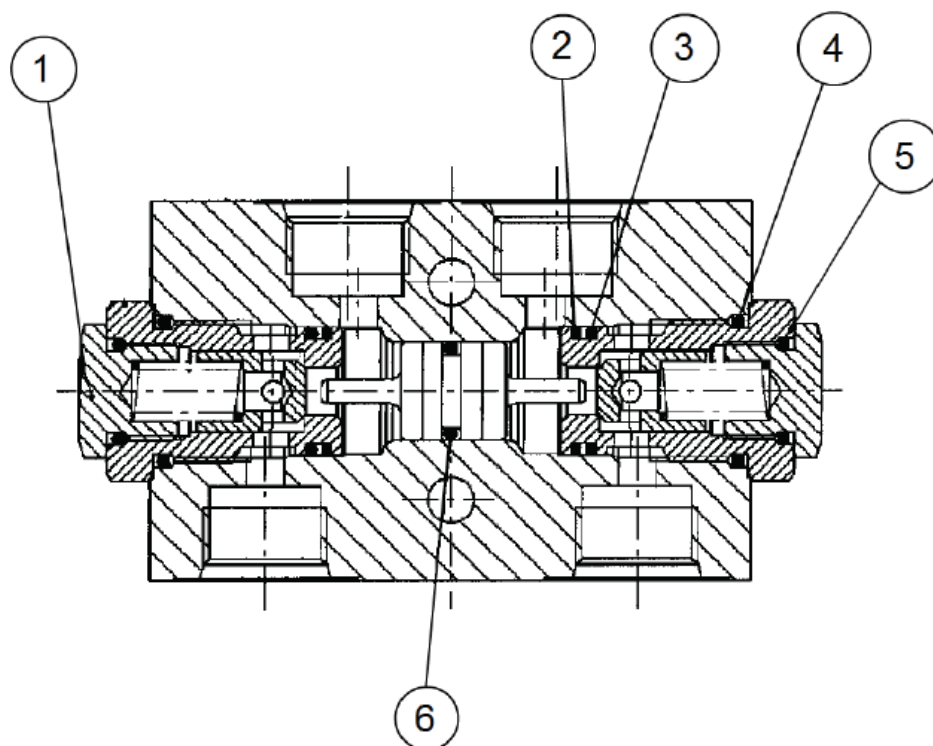

Item	Part No.	Name	Qty	Uom
1	067-0192	RELIEF CARTRIDGE VALVE	2	EA
2	044-0045	BACKUP RING	2	EA
3	041-8821	O-RING	2	EA
4	041-0010	O-RING	2	EA
5	041-5117	O-RING	2	EA
6	041-1688	O-RING	1	EA
7	067-0191	SEAL KIT	1	EA


Comments for Page: 067-0170 (DEL) STABILIZER LOCK VALVES

[fr] (#2 044-0045),(#3 041-8821),(#4 041-0010),(#5 041-5117),(#6 041-1688) Les pièces comprises dans l'ensemble des joints d'étanchéité ne sont pas vendues séparément

[en] (#2 044-0045),(#3 041-8821),(#4 041-0010),(#5 041-5117),(#6 041-1688) Parts included in the seals kit are not sold separately

[fr] (#7 067-0191) Items 2 à 6 inclus


[en] (#7 067-0191) Items 2 to 6 included

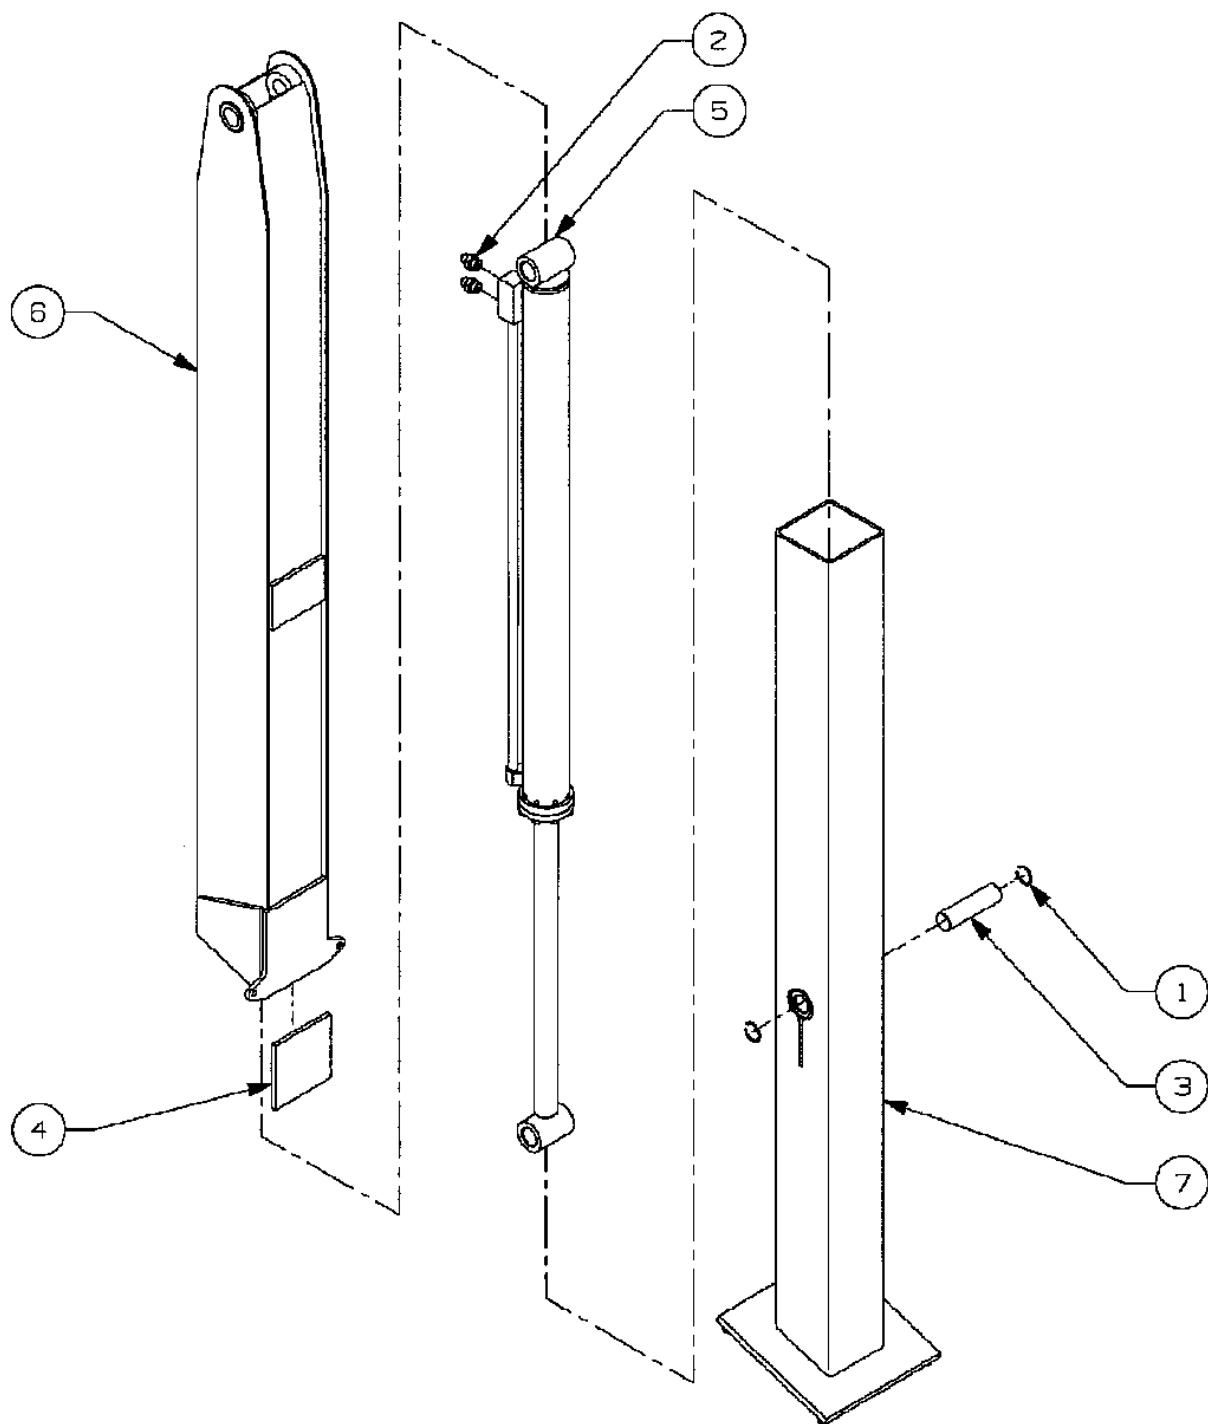

Item	Part No.	Name	Qty	Uom
1	004-0031	INTERNAL RETAINING RING	2	EA
2	030-3939	ORB MALE CONNECTOR MJIC 8 X 10 ORB	2	EA

Item	Part No.	Name	Qty	Uom
3	515-9685	PIN 1 1/2"diax5 1/2"lg	1	EA
4	526-0007	WEAR PLATE	1	EA
5	701-0166	TELESCOPIC STABILIZER CYLINDER	1	EA
6	726-0016	OUTRIGGER HOLDER	1	EA
7	726-9976	OUTRIGGER	1	EA

726-0039 STABILIZER 701-0166 (09) TELESCOPIC STABILIZER CYLINDER

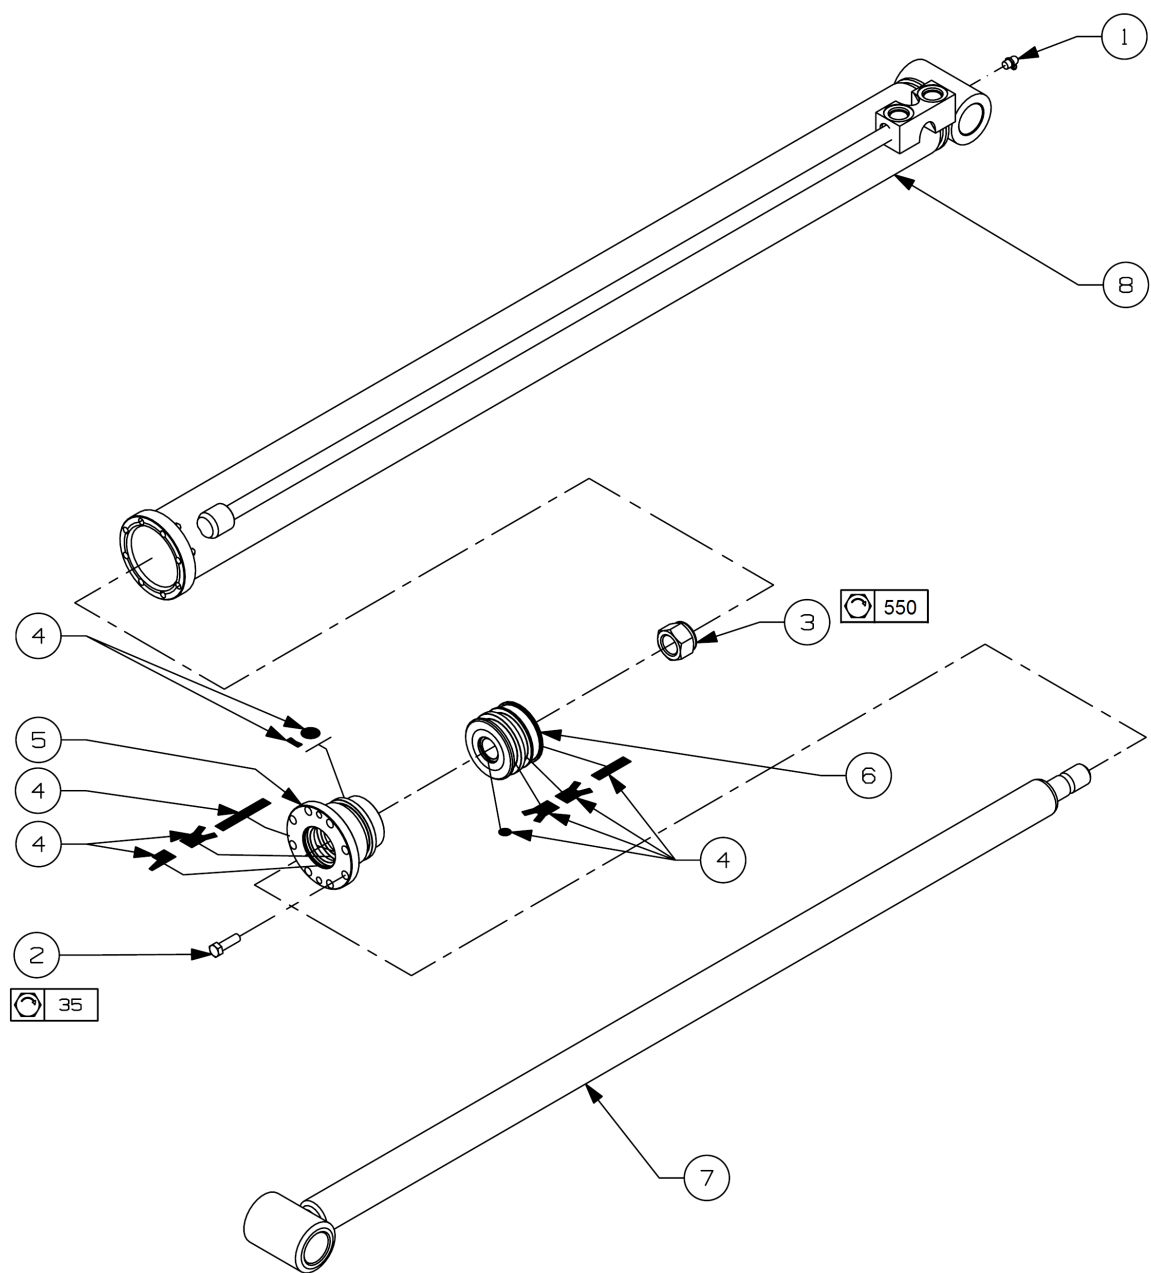

Item	Part No.	Name	Qty	Uom
1	001-0003	GREASE FITTING 1/8"NPTx90°	1	EA
2	008-0218	BOLT 3 / 8 X 1 1 / 4"lg	8	EA
3	010-0331	NYLON LOCK NUT 1"-14UNSx1 1/16" lg	1	EA
4	07001-2704	SEAL KIT	1	EA
5	501-0171	HEAD	1	EA

Item	Part No.	Name	Qty	Uom
6	501-5034	PISTON	1	EA
7	701-0167	ROD	1	EA
8	701-0168	TUBING	1	EA

Comments for Page: 701-0166 (09) TELESCOPIC STABILIZER CYLINDER

[fr] (#2 008-0218),(#3 010-0331) Utiliser une clé dynamométrique. Tous les couples de serrage sont en lb-pi.

[en] (#2 008-0218),(#3 010-0331) Use a torque wrench. Lubricated torque values in ft-lb.


(fr) (#4 07001-2704) Les pièces comprises dans l'ensemble des joints d'étanchéité ne sont pas vendues séparément

(en) (#4 07001-2704) Parts included in the seals kit are not sold separately

**NO DRAWING
AVAILABLE
FOR THIS BOM**

Item	Part No.	Name	Qty	Uom
1	759-0040	HYDRAULIC INSTALLATION KIT	1	EA
2	759-0041	ELECTRICAL INSTALLATION	1	EA

759-0037 INSTALLATION KIT (ACCESSORY) 759-0040 (02) HYDRAULIC INSTALLATION KIT

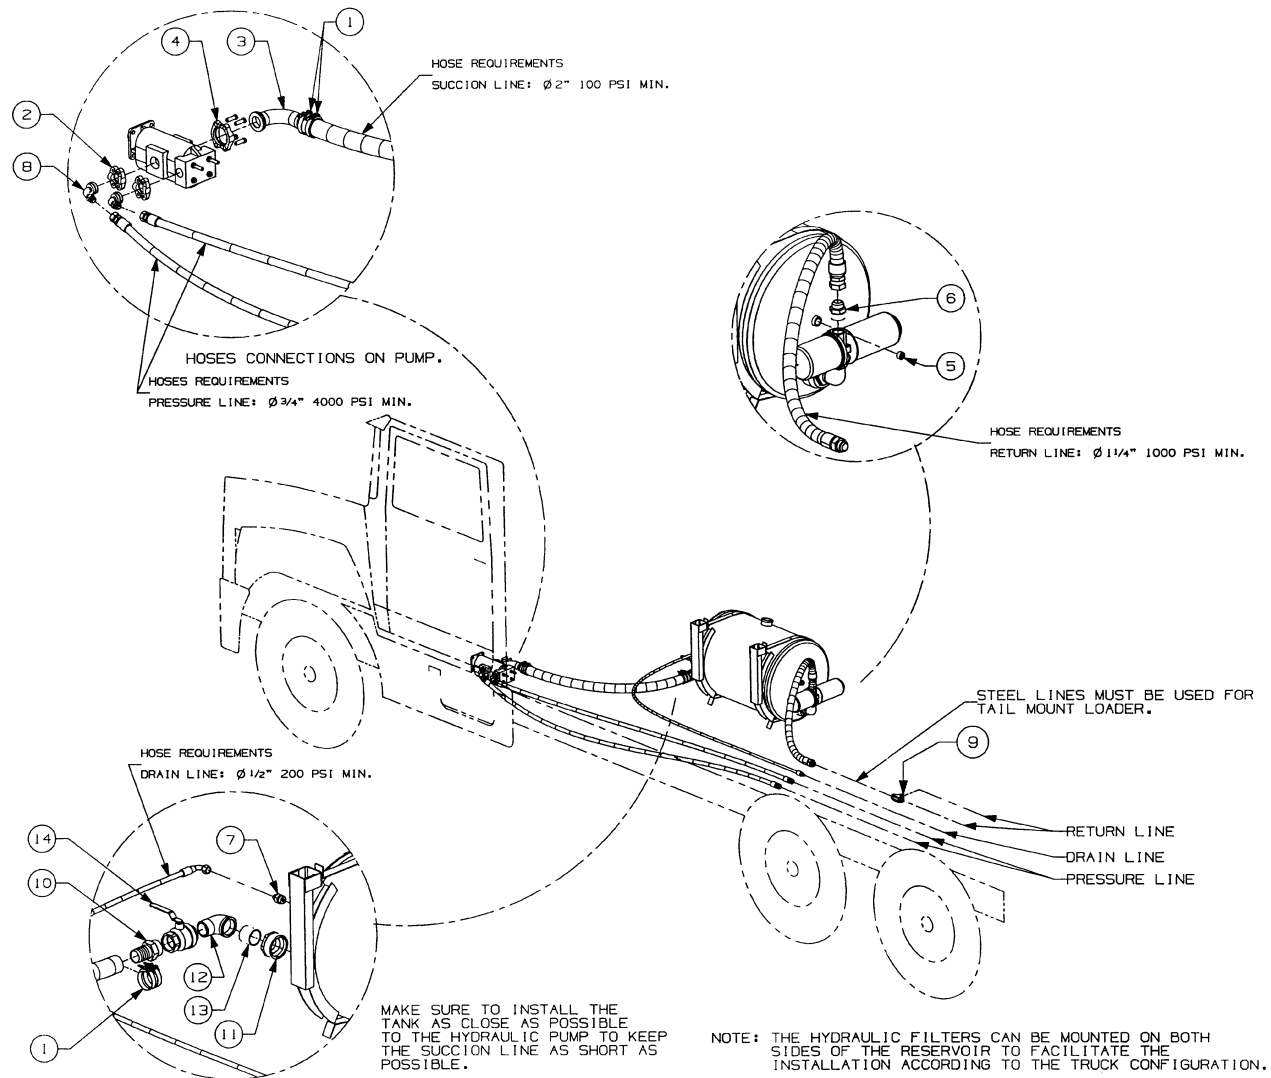


Item	Part No.	Name	Qty	Uom
1	018-5811	HOSE CLAMP 60-63	4	EA
2	025-0988	FLANGE	2	EA
3	025-7298	HYDRAULIC FITTING	1	EA
4	025-7412	FLANGE	1	EA
5	026-3016	PLUG 3/4 NPT	1	EA
6	030-0053	STRAIGHT ADAPTOR MJIC 20 X 1 1/2 NPT	1	EA
7	030-1309	STRAIGHT MALE ADAPTOR MJIC 10 X 3/4 NPT	1	EA
8	030-4602	90° TUBE ADAPTOR CODE 61 MJIC 12 X 16 ORF	2	EA
9	030-7703	"T" ADAPTOR MJIC 20 X MJIC 20 X MJIC 20	1	EA
10	030-7940	HYDRAULIC FITTING	1	EA
11	046-0034	REDUCER 3" TO 2"	1	EA

Item	Part No.	Name	Qty	Uom
12	046-2058	ELBOW	1	EA
13	046-5248	SLEEVE	1	EA
14	046-7600	BALL VALVE	1	EA
15	146-0135	"80 BC" INSTALLATION DOCUMENT	1	EA

759-0041 ELECTRICAL INSTALLATION 759-0041 (06) ELECTRICAL INSTALLATION


INSTALLATION RECOMMANDEE SUR CAMION

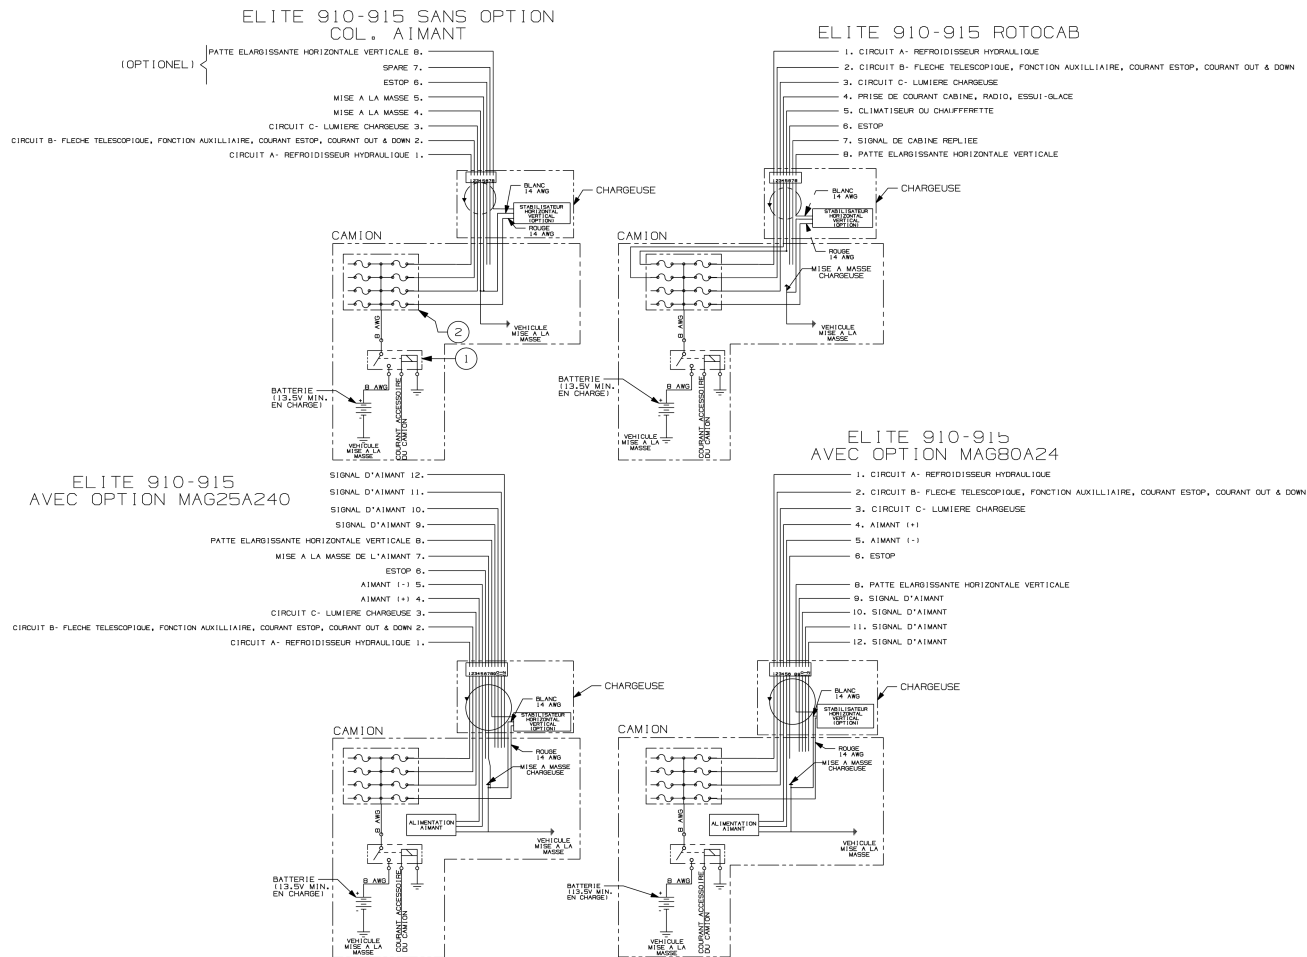

Item	Part No.	Name	Qty	Uom
1	052-0348	RELAY	1	EA
2	07009-1309	SEALED FUSE HOLDER KIT	1	EA

759-0041 ELECTRICAL INSTALLATION 759-0041-1 (06) ELECTRICAL INSTALLATION

RECOMMENDED INSTALLATION ON TRUCK

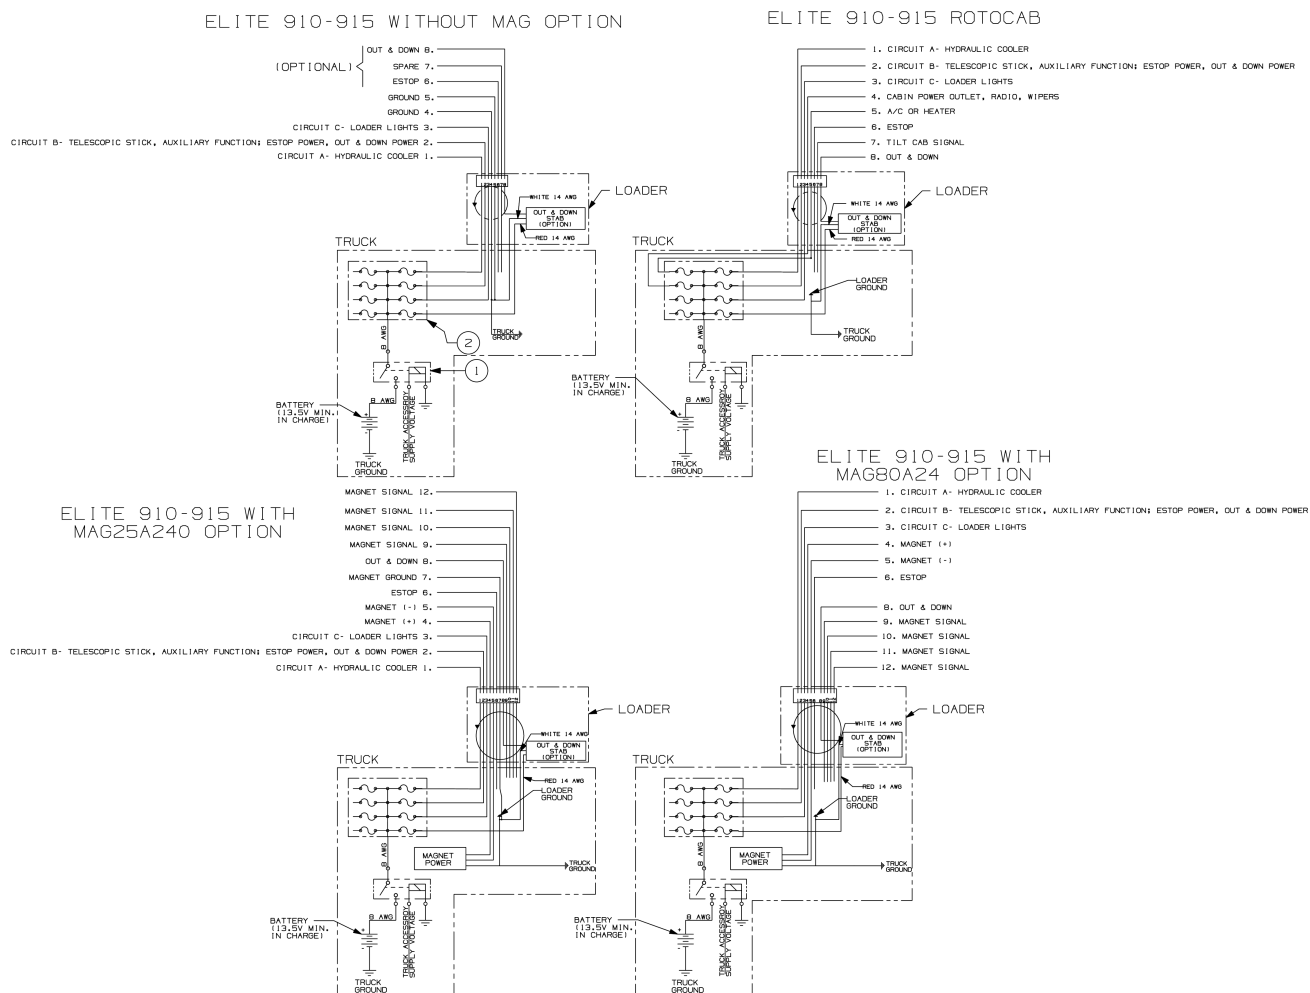


Item	Part No.	Name	Qty	Uom
1	052-0348	RELAY	1	EA
2	07009-1309	SEALED FUSE HOLDER KIT	1	EA

**NO DRAWING
AVAILABLE
FOR THIS BOM**

Item	Part No.	Name	Qty	Uom
1	747-0014	OIL COOLER MOUNTING	1	EA
2	747-0025	HYDRAULIC CIRCUIT	1	EA


747-0028 OIL COOLER ASSY 747-0014 (08) OIL COOLER ASSY

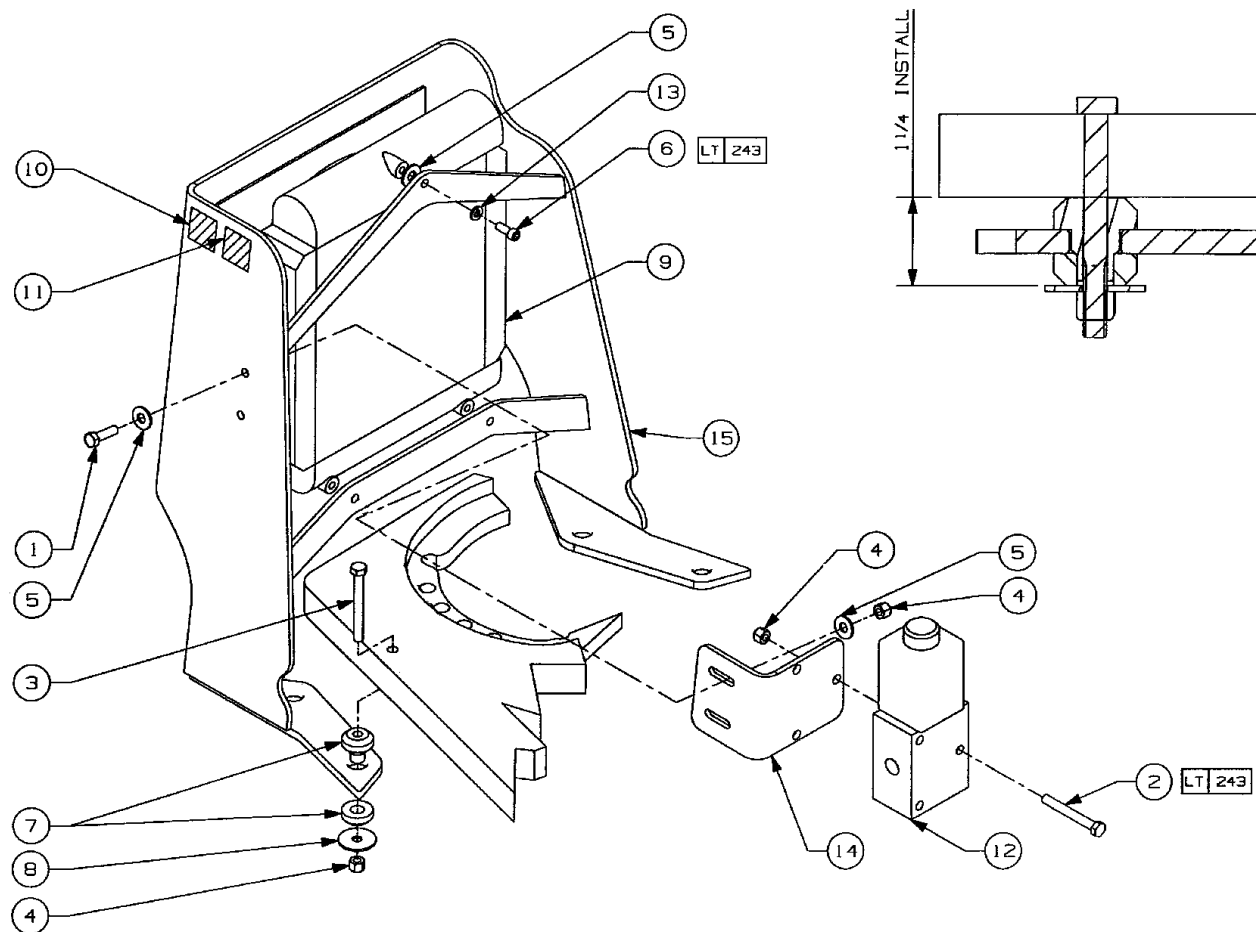

Item	Part No.	Name	Qty	Uom
1	008-0218	BOLT 3 / 8 X 1 1 / 4"lg	2	EA
2	008-0222	BOLT 3/8"-16UNCx3"lg	3	EA
3	008-0223	BOLT 3/8"-16UNC x 3 1/2"lg	4	EA
4	010-0340	NYLON LOCK NUT 3/8"-16UNC X 7/16"lg	9	EA
5	012-0352	FLAT WASHER 3/8"dia	7	EA
6	017-5793	HEX. SOCKET HEAD CAP SCREW M8 X 1.25 X 20"lg	3	EA
7	051-0052	ANTI-VIBRATION MOUNT	4	EA
8	051-9336	FLAT WASHER 7/16"x1 1/2"	4	EA
9	052-0879	OIL COOLER	1	EA
10	146-0979	DANGER FAN LABEL	1	EA
11	146-0980	DANGER HOT SURFACE LABEL	1	EA
12	108-0133	SELECTOR VALVE 12 VDC	1	EA

Item	Part No.	Name	Qty	Uom
13	118-6126	SPLIT LOCK WASHER M8	3	EA
14	547-0015	HOLDER	1	EA
15	747-0012	OIL COOLER SUPPORT	1	EA
16	052-1193	HARNESS	1	EA

747-0028 OIL COOLER ASSY 747-0025 (04) HYDRAULIC CIRCUIT

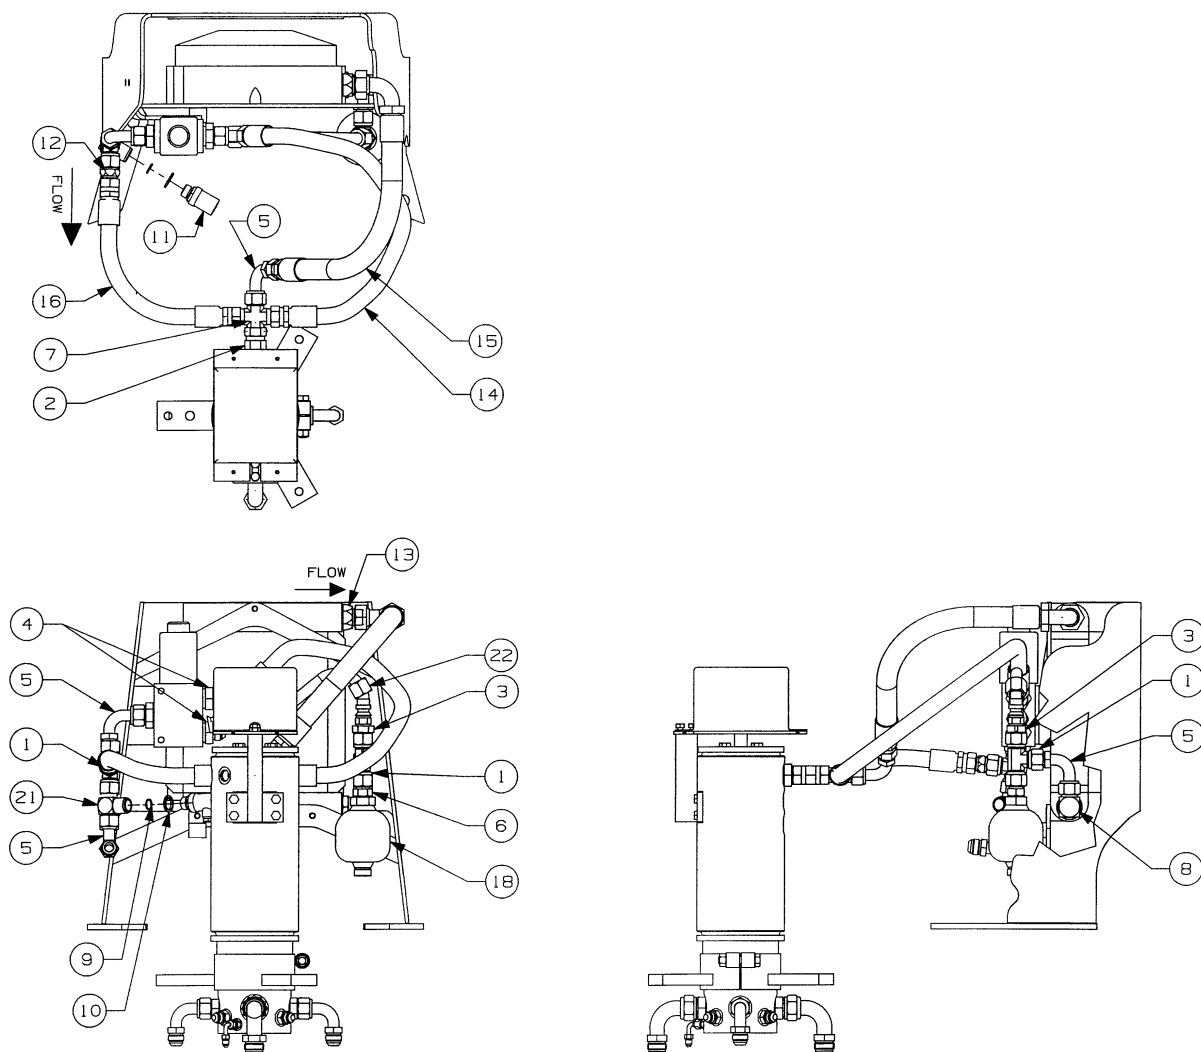

Item	Part No.	Name	Qty	Uom
1	030-0190	SWIVEL NUT UNION "T" FJIC 12	2	EA
2	030-0207	FEMALE JIC SWIVEL UNION FJIC 12 X FJIC 12	1	EA
3	030-1345	MALE UNION ADAPTOR MJIC 12 X MJIC 12	1	EA
4	030-1416	ORB MALE CONNECTOR MJIC 12 X 16 ORB	3	EA
5	030-3217	90° S SWIVEL TUBE ADAPTOR FJIC 12 X MJIC 12	4	EA
6	030-4982	ORB MALE CONNECTOR MJIC 12 X 8 ORB	1	EA
7	030-5031	TUBE CROSS ADAPTOR MJIC 12	1	EA
8	030-5718	90° ADJUSTABLE ADAPTOR M / M MJIC 12 X 16 ORB	1	EA
9	041-1652	O-RING	1	EA
10	043-7319	VAPOR SEAL	1	EA

Item	Part No.	Name	Qty	Uom
11	052-0880	TEMPERATURE SWITCH	1	EA
12	067-0177	CHECK VALVE	1	EA
13	067-0187	CHECK VALVE	1	EA
14	099-0876	HOSE#12 2 WIRES 2250 PSI 12FJIC X 12FJIC45° 26 1/2"lg	1	EA
15	099-1103	HOSE#16 2 WIRES 2000 PSI 12FJIC X 16FJIC90° 16 1/2"lg	1	EA
16	099-9796	HOSE#12 2 WIRES 2250 PSI 12FJIC X 12FJIC 12"lg	1	EA
17	108-0133	SELECTOR VALVE 12 VDC	1	EA
18	108-0159	ACCUMULATOR	1	EA
19	146-0083	"80 FR" COOLER MOUNTING DOCUMENT	1	EA
20	146-0084	"80 EN" COOLER MOUNTING DOCUMENT	1	EA
21	547-0019	HYDRAULIC FITTING	1	EA
22	747-0024	OIL COOLER MOUNTING	1	EA

Appendix A:Pages Index	747-0014 (08) OIL COOLER ASSY	1.18-2
067-0170 (DEL) STABILIZER LOCK VALVES .	747-0025 (04) HYDRAULIC CIRCUIT	1.18-3
1.16-2	747-0028 OIL COOLER ASSY	1.18-1
07000-0700 (05) TELESCOPIC STICK BOOM	759-0037 (04) INSTALLATION KIT (ACCESSORY) . . .	1.17-1
CYLINDER	759-0040 (02) HYDRAULIC INSTALLATION KIT	1.17-2
07000-0788 (04) HEAD ASSEMBLY	759-0041 (06) ELECTRICAL INSTALLATION	1.17.3-1
07000-0798 (05) STICK BOOM ASSEMBLY . 1.12-	759-0041-1 (06) ELECTRICAL INSTALLATION	1.17.3-2
1	759-0050 (03) PUMP INSTALLATION KIT	1-7
07000-4658 (02) RIGHT CONTROL JOYSTICK	857-0006 (02) LOADER ANCHOR KIT	1-9
1.14-2	889-0005 (04) ELITE DECALS KIT	1-10
07000-4660 (01) LEFT CONTROL JOYSTICK . .		
1.14-3		
108-0135 SELECTOR VALVES		1.12-3
108-6521 CONTROL HANDLE		1.14-4
10800523-643128 LOADER		1-1
110-0002 GEARBOX REDUCER		1.13-2
112-0114 HYDRAULIC PUMP (ACCESSORY) . 1-		6
112-0116 HYDRAULIC MOTOR		1.13-3
130-0188 LEFT HYDRAULIC CONTROL . 1.14.5-1		
130-0235 HYDRAULIC CONTROL,		
MECHANICAL JOYSTICK BASE ASSEMBLY		
1.14.5-2, 1.14.6-3		
130-0256 RIGHT HYDRAULIC CONTROL		
1.14.6-1		
130-8442 CHECK VALVE		1.14.6-2
146-0005 ELECTRICAL SWIVEL		1.11-2
701-0166 (09) TELESCOPIC STABILIZER		
CYLINDER		1.16.3-2
701-0314 (05) MAIN BOOM CYLINDER		1-2
701-0317 (06) STICK BOOM CYLINDER		1-3
712-0053 (07) HYDRAULIC SWIVEL JOINT		
ASSY		1.11-1
715-4293 (08) MALE YOKE		1.12-4
722-0095 (06) HYDRAULIC TANK (OPTION) . 1-8		
723-0078 (08) MAIN BOOM ASSEMBLY		1-4
724-0178 (07) FLOOR ASSY		1.14-1
724-0180 (04) HYDRAULIC CIRCUIT		1-5
724-0188 (03) ELECTRICAL CIRCUIT		1.15-1
724-0188-2 (03) ELECTRICAL CIRCUIT . .		1.15-2
726-0039 (01) STABILIZER		1.16.3-1
726-0045 COLUMN ASSY		1.16-1

Appendix B:Parts Index

001-0001	1-2, 1-3, 1-4, 1.12-4, 1.13-1, 1.14-1	009-0335	1.16-1
001-0003	1.16.3-2	010-0017	1-4, 1.12-1
001-0004	1-4, 1.13-1	010-0327	1-2, 1-3
003-0006	1.13-1	010-0331	1.12-2, 1.16.3-2
003-0049	1.14-2, 1.14-3	010-0339	1-4, 1.12-1
004-0031	1-6, 1.12-1, 1.16.3-1	010-0340	1.16-1, 1.18-2
008-0001	1-3	010-4433	1.14-1
008-0051	1.14-1	010-8447	1-8
008-0059	1.13-1	010-9072	1.16-1
008-0103	1.11-1	010-9689	1.14-1
008-0105	1.14-1	012-0003	1.13-1
008-0155	1.13-1	012-0022	1.13-1
008-0156	1.13-1	012-0024	1.14-2, 1.14-3
008-0206	1.14-1	012-0350	1.13-1
008-0210	1.12-1, 1.16-1	012-0351	1.14-1
008-0211	1.14-1	012-0352	1.11-1, 1.12-1, 1.18-2
008-0216	1.11-1, 1.12-1, 1.14-1	012-0354	1.12-1, 1.13-1, 1.14-1
008-0217	1.13-1	013-0035	1.14-2, 1.14-3
008-0218	1.11-1, 1.12-2, 1.16.3-2, 1.18-2	013-0036	1.14-2, 1.14-3
008-0219	1.16-1	013-0364	1.11-1
008-0222	1.18-2	013-0366	1-7
008-0223	1.18-2	016-0001	1-4, 1.12-1
008-0239	1.12-1	016-0007	1-4
008-0240	1-2, 1-7, 1.13-1	017-0143	1.14.5-2, 1.14.6-3
008-0243	1.11-1, 1.14-1	017-0150	1.16-1
008-0245	1.14-1	017-0154	1.14-2, 1.14-3
008-0261	1-8	017-4864	1.11-2
008-0265	1.13-1	017-5786	1.14.5-1, 1.14.6-1
008-0283	1.16-1	017-5787	1.14.5-2, 1.14.6-3
008-4804	1.13-1	017-5793	1.18-2
008-6133	1.12-1	017-6154	1.12-1
009-0002	1-9	017-6257	1.13-1
009-0021	1.14-2, 1.14-3	017-7419	1.14.5-2, 1.14.6-3
009-0022	1.13-1	017-7582	1.11-1
009-0025	1.14-2, 1.14-3	017-7595	1.13-1
009-0305	1.14-1	017-9202	1.14-2, 1.14-3
009-0306	1-7	018-4897	1.14-2
009-0309	1.13-1	018-5811	1.17-2
009-0328	1.11-1, 1.11-2	018-9679	1-4
009-0329	1.14-1	018-9680	1-4, 1.12-1
009-0332	1.11-1	018-9681	1-4, 1.12-1
		019-4404	1.14-1

019-6213	1.14-1	030-3218	1.11-1
020-0022	1.14-2	030-3615	1-5
020-0077	1.11-1	030-3616	1-5
020-0735	1.11-2	030-3617	1-5
020-0737	1.11-2	030-3939	1.12-1, 1.16-1, 1.16.3-1
020-6388	1.11-2	030-4032	1.12-1
020-6389	1.11-2	030-4078	1-5
020-6390	1.11-2	030-4137	1-5
025-0988	1.17-2	030-4277	1-5
025-7298	1.17-2	030-4329	1.13-1
025-7412	1.17-2	030-4541	1.12-1, 1.16-1
026-0020	1.14-3	030-4602	1.17-2
026-0997	1.13-1	030-4982	1-5, 1.18-3
026-1002	1.13-1	030-4996	1.11-1
026-1016	1.11-1, 1.13-1	030-5031	1.18-3
026-1017	1.11-1	030-5718	1.18-3
026-3016	1.11-1, 1.17-2	030-7507	1-5, 1.11-1
026-3491	1.11-1	030-7703	1.17-2
028-3557	1.13-1	030-7940	1.17-2
028-3566	1.13-1	031-9657	1-5
029-6594	1.13-1	032-8851	1-5
030-0053	1.17-2	032-8852	1-5, 1-5
030-0190	1-5, 1.18-3	039-0014	1.12-4
030-0197	1.13-1	040-1634	1.11-1
030-0207	1.18-3	041-0010	1.16-2
030-1309	1.17-2	041-1649	1-6
030-1345	1.18-3	041-1652	1.18-3
030-1376	1-5	041-1688	1.16-2
030-1388	1.11-1	041-5117	1.16-2
030-1389	1.11-1	041-6919	1.14.6-2
030-1395	1.12-1	041-7974	1.11-1
030-1396	1-5	041-8821	1.16-2
030-1412	1-5, 1.11-1	041-9861	1.14.6-2
030-1413	1-5, 1.12-1	042-6629	1.11-1
030-1415	1-5, 1.11-1	043-1827	1.13-1
030-1416	1-5, 1.18-3	043-7319	1.18-3
030-1419	1.11-1	044-0045	1.16-2
030-1421	1-5	044-1834	1.14.6-2
030-1427	1.13-1	044-1976	1.11-1
030-1428	1-4, 1-5, 1.12-1	044-3599	1.11-1
030-1440	1-5	046-0034	1.17-2
030-3217	1-5, 1.11-1, 1.18-3	046-2057	1-8

046-2058	1.17-2	066-0027	1-8
046-2079	1-8	066-0042	1-8
046-5248	1.17-2	066-0068	1-8
046-7600	1.17-2	066-0075	1-8
048-0048	1.13-1	066-3101	1-8
051-0052	1.18-2	066-5665	1.13-1
051-9336	1.18-2	066-6052	1-8
052-0348	1.17.3-1, 1.17.3-2	066-9286	1-8
052-0404	1.11-2	067-0027	1.13-1
052-0657	1.13-1	067-0148	1.13-1
052-0668	1.11-2	067-0177	1-5, 1.18-3
052-0879	1.18-2	067-0187	1.18-3
052-0880	1.18-3	067-0191	1.16-2
052-0884	1.12-1	067-0192	1.16-2
052-1120	1.14-2, 1.14-3	067-4316	1.13-1
052-1137	1.13-1	07000-0280	1.13-1
052-1190	1.15-1, 1.15-2	07000-0288	1.12-1
052-1191	1.15-1, 1.15-2	07000-0700	1.12-1
052-1192	1.15-1, 1.15-2	07000-0701	1.12-2
052-1193	1.18-2	07000-0788	1-1
052-2202	1.11-2	07000-0798	1-1
052-3478	1.11-2	07000-3164	1.14-2, 1.14-3
052-3482	1.11-2	07000-4658	1.14-1
052-3483	1.11-2	07000-4660	1.14-1
052-5954	1.15-1, 1.15-2	07000-5477	1.14.5-1
052-5955	1.15-1, 1.15-2	07000-5479	1.14.6-1
052-6062	1.11-2	07000-5550	1.12-4
052-6206	1.13-1	07000-5639	1.14.6-1
052-6385	1.11-2	07000-5640	1.14.5-1
052-6391	1.11-2	07000-9640	1.14.5-1
052-6392	1.11-2, 1.15-1, 1.15-2	07001-2648	1-3
052-6423	1.11-2	07001-2657	1-2
052-7775	1.14-4	07001-2704	1.16.3-2
052-8094	1.15-1, 1.15-2	07001-2797	1.12-2
052-9237	1.14.5-2, 1.14.6-3	07002-5054	1.16-1
052-9737	1.13-2	07003-9481	1.11-1
054-0018	1.11-1	07009-1309	1.17.3-1, 1.17.3-2
057-0015	1.14-1	098-6895	1.11-1
059-0015	1.14-1	099-0452	1-4
066-0017	1-8	099-0587	1-5
066-0024	1-8	099-0812	1.13-1
066-0025	1-8	099-0818	1-4

099-0820	1.12-1	108-6872	1.12-3
099-0837	1.12-1	108-7747	1.14-4
099-0840	1.12-1	108-7774	1.14-4
099-0849	1-5	108-7839	1.14-4
099-0876	1.18-3	108-9291	1.14-4
099-1103	1.18-3	108-9292	1.14-4
099-1133	1-5	110-0002	1.13-1
099-1134	1-5	110-0003	1.13-2
099-1135	1-5	110-0004	1.13-2
099-1136	1-5	110-0005	1.13-2
099-1137	1-5	110-0006	1.13-2
099-1138	1-5	110-0007	1.13-2
099-1139	1-5	110-0008	1.13-2
099-1141	1-5	110-0009	1.13-2
099-1142	1-5	110-0010	1.13-2
099-1143	1-5	110-0011	1.13-2
099-1144	1-5	110-0019	1.13-2
099-1145	1-5	110-0020	1.13-2
099-1146	1-5	110-0028	1.13-2
099-1148	1-5	110-0029	1.13-2
099-1149	1-5	110-0040	1.13-2
099-1150	1-5	112-0074	1.13-3
099-1151	1-5	112-0114	1-1
099-3961	1-4	112-0116	1.13-1
099-4182	1-5	112-0117	1.13-3
099-4188	1.16-1	112-0118	1.13-3
099-9796	1.18-3	112-0119	1.13-3
099-9958	1-5	112-0120	1.13-3
106-0028	1.14-1	112-0122	1.13-3
107-0018	1.14-2	112-0123	1.13-3
108-0047	1.14-4	112-0124	1.13-3
108-0048	1.14-4	112-0125	1.13-3
108-0049	1.14-4	112-0130	1-6
108-0133	1.18-2, 1.18-3	112-0131	1-6
108-0135	1.12-1	112-0134	1-6
108-0140	1.12-3	112-0135	1-6
108-0141	1.12-3	112-0136	1-6, 1-6
108-0159	1.18-3	112-0138	1-6
108-0202	1.12-3	112-0139	1-6
108-6521	1.14-1	112-0140	1-6
108-6522	1.14-1	112-0146	1-6
108-6814	1.14-4	112-0154	1.13-3

112-0155	1-6	146-0083	1.18-3
112-0157	1-6	146-0084	1.18-3
112-0159	1-6	146-0135	1.17-2
112-0160	1-6	146-0179	1-10
112-0168	1.13-3	146-0738	1-10
116-0005	1.14-1, 1.14-2, 1.14-3	146-0918	1-10
118-6126	1.18-2	146-0949	1-10
125-0011	1-5	146-0950	1-10
130-0188	1.14-1	146-0979	1.18-2
130-0201	1.14.6-1	146-0980	1.18-2
130-0202	1.14.6-1	146-0989	1-10
130-0203	1.14.6-1	146-1049	1-10
130-0207	1.14.5-1, 1.14.6-1	146-1051	1-10
130-0210	1.14.5-1, 1.14.6-1	146-1053	1-10
130-0211	1.14.5-1, 1.14.6-1	501-0171	1.16.3-2
130-0212	1.14.5-1, 1.14.6-1	501-0379	1-3
130-0213	1.14.5-1, 1.14.6-1	501-0382	1-2
130-0215	1.14.5-1, 1.14.6-1	501-5034	1.16.3-2
130-0217	1.14.6-1	501-9149	1.12-2
130-0219	1.14.5-1, 1.14.6-1	501-9153	1-2, 1-3
130-0220	1.14.5-2, 1.14.6-3	501-9623	1-2, 1-3
130-0222	1.14.5-2, 1.14.6-3	503-0013	1.13-1
130-0223	1.14.5-2, 1.14.6-3	504-8397	1-4
130-0224	1.14.5-2, 1.14.6-3	512-0074	1.11-1
130-0225	1.14.5-2, 1.14.6-3	512-0075	1.11-1
130-0229	1.14.5-2, 1.14.6-3	512-0179	1.11-1
130-0231	1.14.5-2, 1.14.6-3	512-4987	1.11-1
130-0232	1.14.5-2, 1.14.6-3	515-0475	1.12-1
130-0234	1.14.5-2, 1.14.6-3	515-9685	1.16.3-1
130-0235	1.14.5-1, 1.14.6-1	524-0008	1-5
130-0236	1.14.5-1	524-0204	1.11-1
130-0256	1.14-1	524-0230	1.14-1
130-0318	1.14.5-1	524-0235	1.14-1
130-0319	1.14.6-1	524-0236	1.14-1
130-8442	1.14.6-1	524-0239	1.13-1
130-8562	1.14.6-1	524-0242	1.14-1
130-8567	1.14.5-1, 1.14.6-1	524-0248	1-5
130-8580	1.14.6-1	524-0271	1.14-1
130-8582	1.14.5-1, 1.14.5-1, 1.14.6-1, 1.14.6-1	524-0290	1.13-1
130-8585	1.14.5-2, 1.14.6-3	524-0292	1.14-1
130-8588	1.14.6-2	524-0298	1.14-2, 1.14-3
130-9091	1.14.5-2, 1.14.6-3	524-0299	1.14-2, 1.14-3

524-0300	1.14-2, 1.14-3	715-4293	1.12-1
524-0301	1.14-2, 1.14-3	715-6152	1.12-1
526-0007	1.16.3-1	722-0095	1-1
526-1761	1-9	723-0078	1-1
528-0133	1-4, 1.12-1	723-0083	1-4
528-0136	1-4, 1.12-1	724-0014	1.13-1
528-0456	1.11-2	724-0058	1.13-1
528-6837	1.11-2	724-0108	1.11-1
528-8680	1.11-2	724-0133	1.14-1
531-4877	1-4, 1.12-1	724-0134	1.14-1
546-0005	1.16-1	724-0167	1.14-1
547-0015	1.18-2	724-0178	1-1
547-0019	1.18-3	724-0180	1-1
559-0021	1-7	724-0188	1-1
559-0027	1-9	724-0192	1.14-1
576-1190	1-5	726-0016	1.16.3-1
595-0061	1.12-1	726-0033	1.16-1
595-0063	1.12-1	726-0039	1.16-1
595-0064	1.12-1	726-0044	1.16-1
595-0072	1.12-1	726-0045	1-1
657-0001	1-9	726-9976	1.16.3-1
657-0003	1-9	726-9978	1-9
701-0166	1.16.3-1	732-7879	1-5
701-0167	1.16.3-2	734-0029	1-4
701-0168	1.16.3-2	734-0030	1-4
701-0314	1-1	734-0033	1.12-1
701-0315	1-2	747-0012	1.18-2
701-0316	1-2	747-0014	1.18-1
701-0317	1-1	747-0024	1.18-3
701-0318	1-3	747-0025	1.18-1
701-0319	1-3	747-0028	1-1
701-9140	1.12-2	759-0037	1-1
701-9141	1.12-2	759-0040	1.17-1
712-0053	1-1	759-0041	1.17-1
712-0175	1.11-1	759-0050	1-1
712-0176	1.11-1	795-0018	1.12-1
715-0029	1.16-1	795-0020	1.12-1
715-0403	1.12-1	795-0026	1.12-1
715-0454	1.12-1	795-0027	1.12-1
715-0455	1-4	795-0028	1.12-1
715-0456	1-4	795-0029	1.12-1
715-0457	1-4	795-0033	1.12-1

857-0006	1-1
889-0005	1-1